


# ASSEMBLY INSTRUCTIONS ITEM #GDDFC01 | AB FRAME OMBRE GOLD TO CLEAR GLASS FLUSHMOUNT

## ITEM DESCRIPTION

MATERIAL TYPE: STEEL, GLASS FINISH : ANTIQUE BRASS, GOLD TO CLEAR TOP COAT/SEALANT:  
 SOCKET TYPE: E26 CERAMIC SOCKET QTY: 1PC  
 BULB TYPE: TYPE A BULB WATTAGE: **60W or /CFL 13W or LED 8W** VOLTAGE: 110V-120V  
 ITEM NET WEIGHT: 2.10KGS  
 UL COMPLIANT  
 INSTALLATION ENVIRONMENT: SUITABLE FOR DAMP LOCATIONS

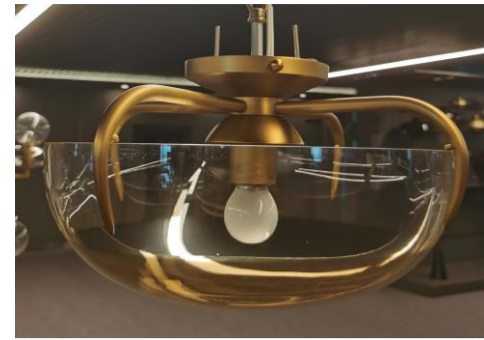


### NOTE:

\*YOUR PRODUCT(S) MAY BE PACKED IN MORE THAN ONE CARTON  
 \*THIS ITEM MAY REQUIRE PERIODIC TIGHTENING


## PARTS

<b>A</b>	<b>MOUNTING PLATE</b>	<b>1 PC</b>
<b>B</b>	<b>SET SCREW</b>	<b>2 PCS</b>
<b>C</b>	<b>LAMP BODY</b>	<b>1 PC</b>
<b>D</b>	<b>ROTATABLE ARM</b>	<b>1 PC</b>
<b>E</b>	<b>SOCKET</b>	<b>1 PC</b>
<b>F</b>	<b>BULB (NOT INCLUDED)</b>	<b>1PC</b>
<b>G</b>	<b>GLASS SHADE</b>	<b>1PC</b>

## INCLUDED ASSEMBLY HARDWARE

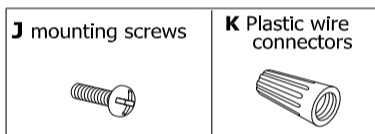

## PRODUCT ASSEMBLY

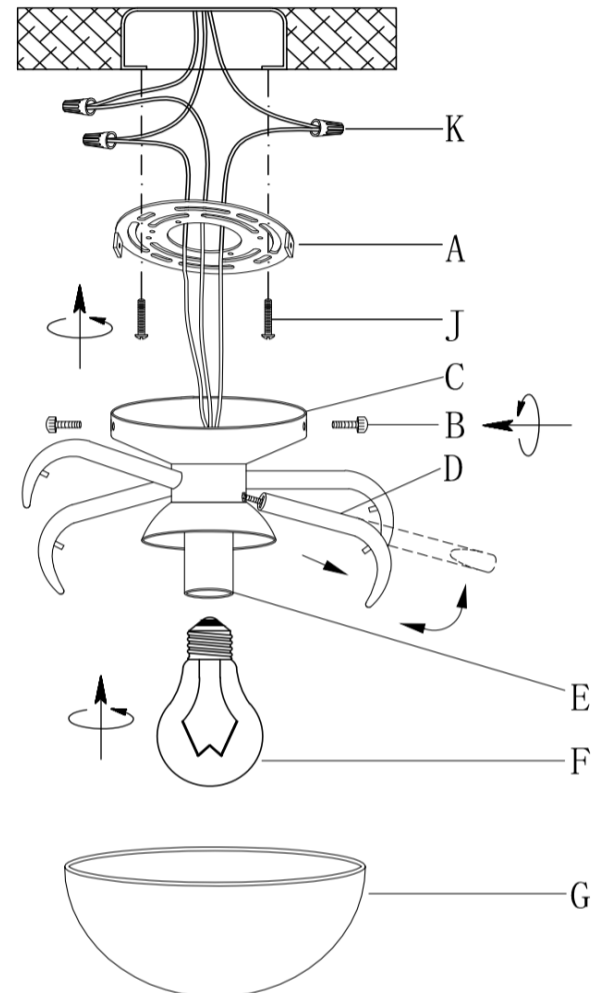

## ASSEMBLY INSTRUCTIONS

1. REMOVE ALL PACKING CONTENTS AND PARTS FROM THE CARTON(S) CAREFULLY.
2. PLEASE BE SURE YOU HAVE ALL PARTS INDICATED BEFORE YOU BEGIN ASSEMBLY.
3. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
4. REMOVE THE MOUNTING PLATE (A) FROM THE LAMP BODY (C) BY TURNING SET SCREW (B) IN AN ANTI-CLOCKWISE DIRECTION.
5. CAREFULLY INSPECT THE FIXTURE WIRES. THE NEUTRAL FIXTURE WIRE HAS VERY FINE RIDGES MOLDED INTO ITS PLASTIC COVERING. THE HOT FIXTURE WIRE HAS A SMOOTH COVERING. THE BARE WIRE IS THE GROUNDED WIRE.
6. ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
7. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
8. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (K) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
9. GENTLY TUCK THE WIRE CONNECTIONS (K) NEATLY INTO THE CEILING JUNCTION BOX.
10. ATTACH THE MOUNTING PLATE (A) TO THE OUTLET BOX USING THE MOUNTING SCREWS (J) AND TIGHTEN SCREWS (J) WITH A SCREWDRIVER.
11. ATTACH THE LAMP BODY (C) TO THE MOUNTING PLATE (A) BY USING THE ENCLOSED 2PCS OF SET SCREWS (B) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
12. INSERT 1 TYPE A 60W or /CFL 13W or LED 8W BULB (NOT INCLUDED) INTO THE SOCKET (E). **DO NOT EXCEED SPECIFIED WATTAGE**
13. PUT THE ROTATABLE ARM (D) TO LEFT OR RIGHT SIDE AS IMAGE SHOWN. TURN THE ROTATABLE ARM (D) SETBACK IN THE VERTICAL DIRECTION TO SECURE THE GLASS SHADE.
14. PUT THE GLASS SHADE (G) INTO THE LAMP BODY (C) CAREFULLY.
15. RESTORE POWER TO THE JUNCTION BOX AND TEST FIXTURE.

## CARE & MAINTENANCE

DUST WITH A DRY CLOTH.  
 FOR CUSTOMER SERVICE QUESTIONS CALL 1.888.488.8866  
 ARTERIORS HOME: 972.488.9800  
 ARTERIORS CONTRACT: 972.488.9800 EXT. 321

## DISCLAIMERS

WE RECOMMEND THE INSTALLATION OF THIS ELECTRICAL LIGHT FIXTURE TO BE DONE BY A LICENSED ELECTRICIAN.

# ARTERIORS