# ASSEMBLY INSTRUCTIONS

### ITEM DESCRIPTION:

ITEM NO.: DWI07NAME: Brass Sculptural Flush Mount

MATERIAL TYPE: Brass FINISH: Antique Brass

SOCKET TYPE: Type A E26 SOCKET QTY: 1 PC

BULB WATTAGE: 60 W VOLATGE: \_\_\_\_\_

ITEM NET WEIGHT:\_\_3.150 KGS.\_\_\_\_

# PARTS INCLUDED:

| MOUNTING PLATE | QTY: 1   | QTY: |
|----------------|----------|------|
| BACK PLATE     | QTY: 1   | QTY: |
| PLATE SCREW    | QTY: 2   | QTY: |
| SOCKET ASSEMBL | Y QTY: 1 | QTY: |
| METAL RING     | QTY: 1   | QTY: |
|                | QTY:     | QTY: |
|                | QTY:     | QTY: |
|                | QTY:     | QTY: |
|                |          |      |

#### HARDWARE INCLUDED:

| Mounting Screws         | QTY: 2 |  |  |
|-------------------------|--------|--|--|
| Plastic Wire Connectors | QTY: 2 |  |  |
|                         | QTY:   |  |  |

#### TOOLS NEEDED (NOT INCLUDED):

1 SCREWDRIVER

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.




# TO ASSEMBLE:

- Shut off the main electrical supply from the main fuse box/circuit breaker.
- Attach mounting plate to wall or junction box using mounting screws (C).
- Connect ground wire from wall to ground wire from lamp using wire caps (A).
- 4. Attach house wire to lamp wires as shown. Fasten the pairs together with a **wire cap.**

# DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

- Attach front face of light to back plate by inserting canopy screws (B) through predrilled holes in front face and into back plate as shown. Tighten using screwdriver.
- 6. Insert light bulb.
- Restore power to junction box and test fixture. DO NOT EXCEED SPECIFIED MAX WATTAGE.

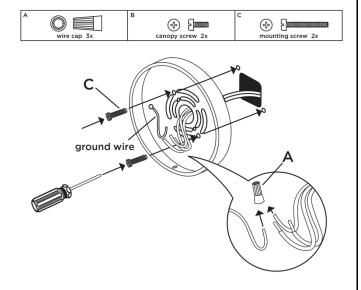

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.