




# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: GAWMC01 NAME: Travertine Wall Mirror

MATERIAL TYPE: Steel FINISH: Bronze

ITEM NET WEIGHT: 37.5 LBS

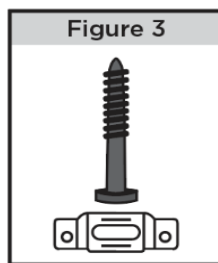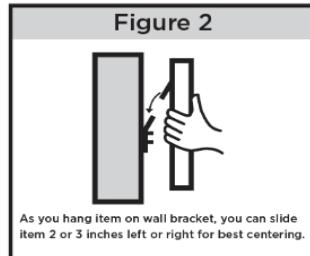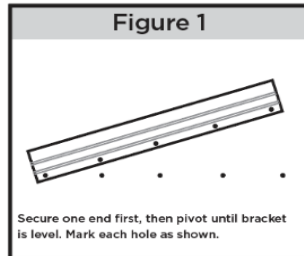


## PARTS INCLUDED:

Mirror	Qty: 1
--------	--------

Security Cleat	Qty: 1
----------------	--------

Drywall Anchors	Qty: 4
-----------------	--------

Screws	Qty: 4
--------	--------

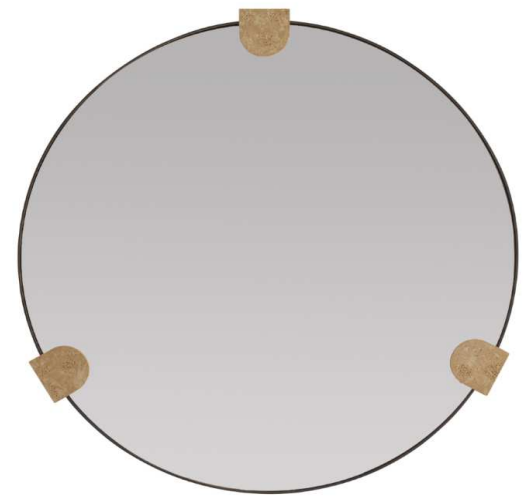

- Do not throw away packaging materials until assembly is complete
- Stud mounting is recommended. Use proper hardware for your wall type, these instructions are for drywall. When in doubt, consult your local hardware store. For your safety, installation by two people is recommended.
- This mirror can be mounted vertically or horizontally OR this mirror can only be mounted vertically OR this mirror can only be mounted horizontally

## TO ASSEMBLE:

1. Position mirror in desired location on wall.
2. Position **security cleat** in desired location and mark location of each dry wall anchor installation, as shown in **Figure 1**.
3. Remove **security cleat** from the wall.
4. Drill 5/16" pilot holes in wall. Position **dry wall anchor** over hole and gently tap anchor into wall until cap prongs are embedded in wall and cap is snug against surface. Turn **screw** clockwise pressing firmly to prevent anchor from rotating. Tighten screw until resistance is felt, this will fully expand the anchor. Turn screw counter clockwise to remove screw. Anchor will remain embedded in wall.
5. Place **security cleat** over anchors and insert; then tighten all screws.
6. Hang mirror on wall bracket, as shown in **Figure 2**.
7. Now, align Bottom T-Screw on wall with Bracket, as shown in **Figure 3** and use wrench clockwise on T-Screw so that it locks mirror from moving forward.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.