


D36"H19"L6

Installation instructions:

- 1. Install the metal tube (P9) on the lampbody (P12)
- 2. Black wire from ceiling (junction box) attaches to "L" wire from the fixture.
- 3. White wire from ceiling (junction box) attaches to "N" wire from the fixture.
- 4. "E" wire from the fixture is attaced to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
- 5. Secure mounting bracket to the junction box.
- 6. Insert screws (P2) in side of top unit the mounting bracket.
- 7. Fix the loop(P3) to screw tube, then cover the canopy (P4) and fix it by canopy ring(P5).
- 8. Install the bulbs (not included) into the lamp fixture

The end!

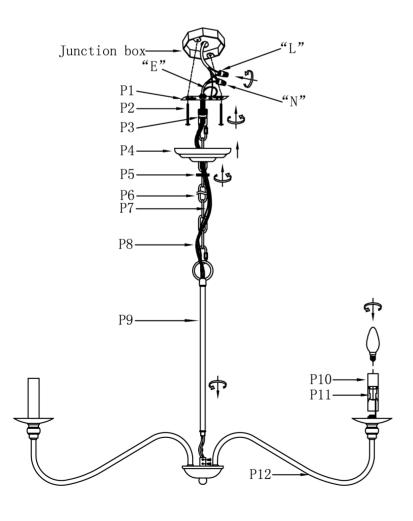

"L" = Hot wire "N" = Neutral wire "E" = Ground wire

PARTS LIST

part	picture	Description	Ωt v	Check	list
P1	precure	L4" Mounting bracket	1	Oncek	1130
P2	-	8/32-32 Screw	2		
Р3	•	Canopy loop (Canopy part)	1		
P4	$\left\ \begin{array}{c} \\ \end{array} \right $	∅ 5.2″ canopy plate	1		
P5	1	Canopy ring (Canopy part)	1		
Р6		L59"CHAINO4PBK/BR/PN Plain Desigm	1		
P7	\	Ground wire	1		
Р8	{	Power Cord 79" SPT-1-18#	1		
Р9	•	L16.0" tube	1		
P10		D1"*3.5"tube	6		
P11	4	E12 lampholder	6		
P12	t~	D30"*H8.4" lampbody	1		