MOVENTO

Ablum°

Locking Devices

Standard

One right and one left required per drawer



- Captive right device and self-aligning left device
- Self-adjusting drawer length tolerance
- Steel base with synthetic, spring-loaded release levers
- Minimum inside drawer width 170 (6-11/16")
- Side-to-side adjustment ±1.5 (1/16")

Part no.

Right locking device	T51.7601 R
Left locking device	T51.7601 L
Installation screw	606N or 606P

Vertical mount

One right and one left required per drawer



- Vertical mount locking device used to minimize sub-front splitting
- Captive right device and self-aligning left device
- Self-adjusting drawer length tolerance
- Steel base with synthetic, spring-loaded release levers
- Minimum inside drawer width 170 (6-11/16")
- Side-to-side adjustment ±1.5 (1/16")
- Minimum sub-front thickness 16 (5/8")
- Designed for 13 (1/2") drawer bottom recess

Part no.

Right locking device	T51.7601.20 R
Left locking device	T51.7601.20 L
Installation screw	606N or 606P

Narrow drawer

One right and one left required per drawer



- For use with narrow drawers
- Maximum dynamic load capacity 25 lb
- Captive right device and self-aligning left device
- Self-adjusting drawer length tolerance
- Vertical mount, two-piece nylon
- Minimum inside drawer width 95 (3-3/4") without TIP-ON BLUMOTION
- Minimum sub-front thickness 16 (5/8")
- Designed for 13 (1/2") drawer bottom recess

Part no.

Right locking device	T51.0501.20 R
Left locking device	T51.0501.20 L
Installation screw	606N or 606P

Locking device spacer for thin fronts Works with MOVENTO locking devices 12 (15/32") and 13 (1/2") sub-fronts only Part no. T59.K010M Installation screw

Rear Attachment Options

MOVENTO



Screw-on bracket

Two required per drawer




For MOVENTO 763H series runners

Lateral self-alignment 3 (1/8")

Non-handed, one-piece stamped steel design, zinc-coated

Use at least three #6 wood screws

Not for use with TIP-ON BLUMOTION

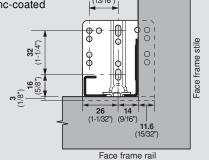

Part no.

Screw-on bracket

295.3750.02

NOTE: Illustration is for 763H series

Installation screw


606N or 606P

Screw-on socket

Two required per drawer



- For MOVENTO 763H series runners
- Lateral self-alignment
- Non-handed, two-piece design
- Synthetic, natural color
- Use two #6 flat head wood screws
- Not for use with TIP-ON BLUMOTION

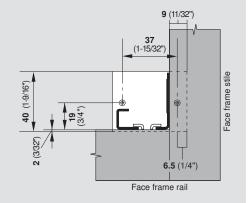

Part no.

Screw-on socket

295.6400

Installation screw


606N or 606P

Plug-in socket

Two required per drawer



- For MOVENTO 763H series runners
- Lateral self-alignment feature
- Non-handed, two-piece design
- Synthetic, natural color
- Non-detachable 8 (5/16") dowels, 9.5 (3/8") long
- 6 (1/4") minimum back panel thickness
- Use two #6 flat head wood screws
- Not for use with TIP-ON BLUMOTION

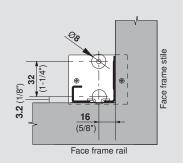

Part no.

Plug-in socket

Installation screw

295.6410 606N or 606P