

# ASSEMBLY INSTRUCTIONS

**Item:EC-1017FL**

**CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.**

**1. SCREW POLE (B) TO BASE(A), POLE (C) TO POLE (B), POLE (D) TO POLE (C) AND SOCKET PART (E) TO POLE (D) IN TURN. IF NECESSARY ,USING A WRENCH TO LOOSE THE HEX NUT UNDER THE BASE , ALIGN THE SOCKET WITH THE BASE TO THE SAME DIRECTION AND TIGHTEN THE HEX NUT AGAIN.**


**2. ALIGN SHADE (F) TO THE SOCKET PART (E) AND TIGHTEN WITH SOCKE RING(G).**

**3. INSTALL RECOMMENDED BULB (H) (NOT INCLUDED IN THIS PACKAGE).**

**5. INSERT THE PLUG TO AN OUTLET.**

**ENJOY YOUR LIGHT!**

USE MAX 60W ON/OFF TYPE  
A BULB (BULB NOT INCLUDED)

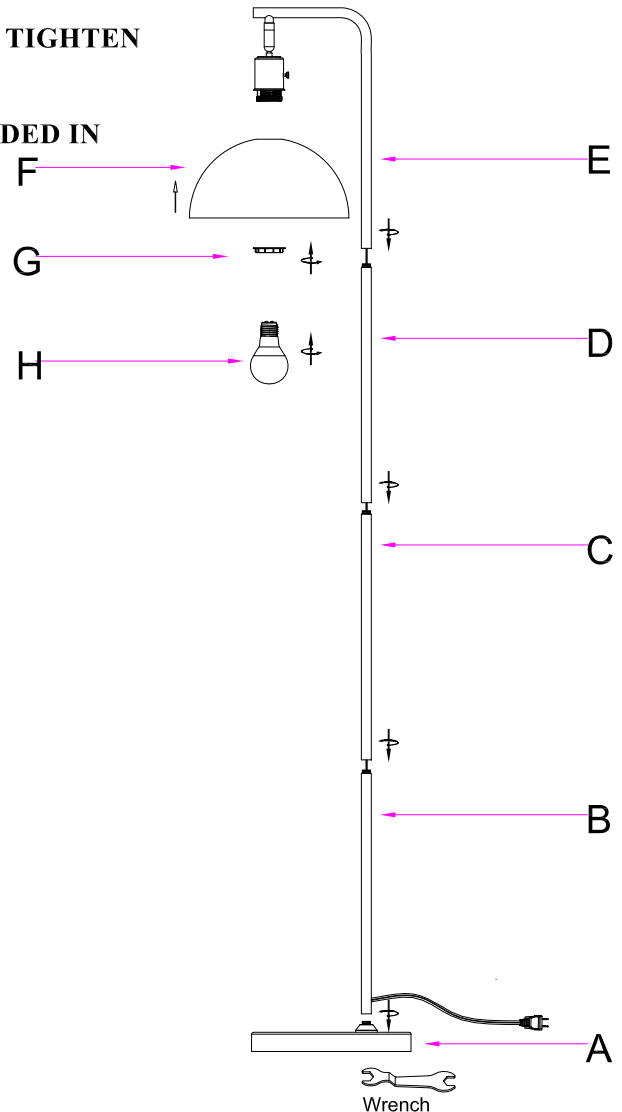

**TO REPLACE THE BULB:**

**TURN OFF POWER (UNPLUG FROM THE WALL OUTLET) BEFORE REPLACING THE BULB, MAKING SURE THE BULB HAVE SUFFICIENT TIME TO COOL DOWN.**

**DO NOT SUBJECT THIS FIXTURE TO ANY SHOCK WHILE LIT AS SHATTERING OF BULBS MAY RESULT.**

**THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.**

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**