harmonizedhome

# **EASY CONNECT** TM **INSTALLATION INSTRUCTIONS**

IOL600 10/22

**NEED HELP?** Call or Email us first

Our service team is ready to answer your questions... 1-800-265-1833 (English) / 1-800-567-2513 (French)

Monday – Friday 8 AM - 5 PM E.S.T.

IN CANADA - ressalescanada@canarmna.ca - IN USA - ressalesusa@canarmna.ca



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS **READ ALL INSTRUCTIONS** 

## **IMPORTANT SAFETY INSTRUCTIONS** SAVE THESE INSTRUCTIONS

#### **TOOLS AND MATERIALS REQUIRED:**






### **SAFETY PRECAUTIONS:**


- 1.TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
- 2. WIRING SUPPLIES AS REQUIRED BY LOCAL ELECTRICAL CODE.
- 3. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- 4. TO CLEAN THE FIXTURE, TURN OFF THE POWER, WAIT FOR IT TO COOL, AND WIPE THE FIXTURE WITH A CLEAN, SOFT CLOTH.

NOTE: Product may not look exactly as shown in figures.

#### **INSTALLATION:**

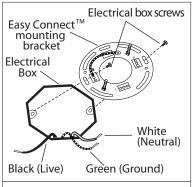


<sup>1</sup> ₀ Attach Easy Connect™ mounting bracket to electrical box with electrical box screws (not included).

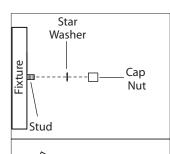



Wheather Resistant Caulk (not included)

4. Tuck electrical wires into electrical box and position fixture over studs on mounting bracket assembly. Secure fixture in place with star washers and cap nuts.




2. Option 1: Connect (push) electrical wires from electric box (house wiring) into correct






6. Install specified bulb type

and wattage (not included).

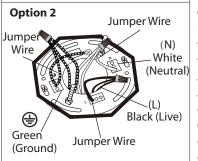


Option 2: For multiple green (ground), black (live) and white (neutral) wires joined in the electrical box (house wiring), attach a single "green", "black" and "white" jumper wire before connecting. Strip 7mm from the 6" jumper wires supplied. Then connect (push) wires into the correct inserts.

 $\mathbb{Z}_{\circ}$  Re-install the bottom cap to the fixture.

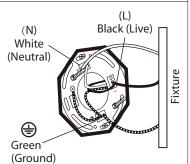

 Sonnect (push) electrical wires from fixture into correct inserts.

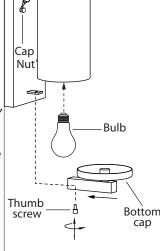

8. After installation, seal around the top and side perimeter between the fixture and the wall surface with weather resistant caulk. The bottom should be left un-caulked to prevent moisture build-up. Apply a small amount of weather resistant caulk around the side perimeter between the cap nuts and mounting plate.