

EASY CONNECT ™ INSTALLATION INSTRUCTIONS

IWF740B01 10/20

NEED HELP? Call or Email us first

Our service team is ready to answer your questions... 1-800-265-1833 (English) / 1-800-567-2513 (French) IN CANADA - ressalescanada@canarmna.ca - IN USA - ressalesusa@canarmna.ca

Monday – Friday 8 AM - 5 PM E.S.T.



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS **READ ALL INSTRUCTIONS**

IMPORTANT SAFETY INSTRUCTIONS

TOOLS AND MATERIALS REQUIRED:






SAFETY PRECAUTIONS:

- 1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
- 2. WIRING SUPPLIES AS REQUIRED BY LOCAL ELECTRICAL CODE.
- 3. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- 4. TO CLEAN THE FIXTURE, TURN OFF THE POWER, WAIT FOR IT TO COOL, AND WIPE THE FIXTURE WITH A CLEAN, SOFT CLOTH.

NOTE: Product may not look exactly as shown in figures.

INSTALLATION:

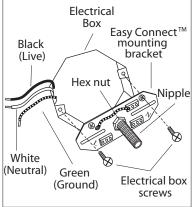


 $\mathbb{1}_{\circ}$ Attach nipple to mounting bracket. Adjust so it will clear hole in back of fixture and then lock nipple in place with hex nut. Attach mounting bracket to electrical box with electrical box screws (not included).

2 **Option 1:** Connect

into correct inserts.

(push) electrical wires from

electric box (house wiring)

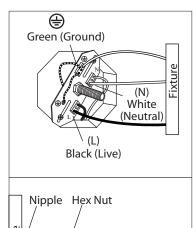

Star

Washer

Finial

 \mathfrak{Z}_{\circ} Connect (push) electrical wires from fixture into correct inserts.


4. Once connections of wires are completed, carefully tuck wires and wire nuts into the electrical box making sure no bare wire (on the black and white) is visible at the wire nuts.

5. Secure the fixture to the nipple tightening by star washer and hex nut. Screw the finial to the nipple.

6. Remove spinner nut from lamp and secure with spinner nut.

socket. Position the glass on

 \mathbb{Z}_{\circ} Install proper bulb type and wattage (not included).

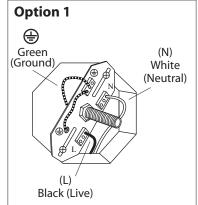

Option 2: For multiple green (ground), black (live) and white (neutral) wires ioined in the electrical box (house wiring), attach a single "green", "black" and "white" jumper wire before connecting. Strip 7mm from a 6 in. jumper wires supplied. Then connect (push) wires into the correct inserts.

