

**Central Brass Company, Inc.**  
3325 S. Garfield Ave.  
Commerce, CA 90040  
(800) 321-8630  
www.centralbrass.com

**Tools:**



Adjustable Wrench



Plumbers Putty



Teflon Tape



Rags

**Model Number: 1131-B, 1132-B**




**Warnings and Notes:**


Check with local plumbing code requirements before installation.  
This product should be installed by a local listed plumber.  
**Do not use plumbers putty on threads.**

**Installation Steps:**


Two Handle Shampoo Faucet

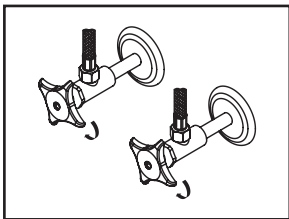


(1) Shut off water supplies. Remove old faucet. Clean mounting surface in preparation for new faucet.

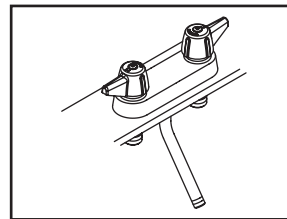


(5) Important: After installation is complete, turn on water supplies, turn on hot and cold handle to allow both hot and cold water to run at least one minute each. While water is running, check for leaks. Turn off handles.

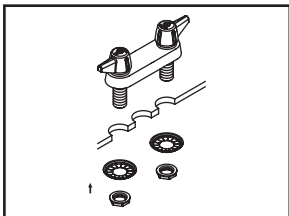

(2) Place the faucet through the mounting surface. Slide the crowfoot washer through shank from underneath of the mounting surface. Tighten the locknut with the help of 1-3/32" socket set.

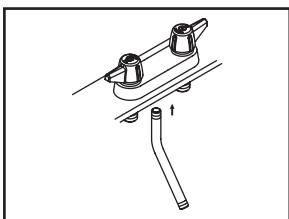

(3) Apply Teflon tape on both thread ends of brass nipple, carefully thread and tighten brass nipple into the faucet bottom center hole from underneath of the sink, adjust and make sure brass nipple faces straight forward.

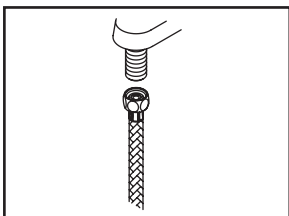

(4) When using stainless steel braided faucet supply hose; this faucet requires one end of the supply hose to have a 1/2" female IPS connection. The other end of this supply hose must match the thread on the water supply valve under your sink. Once you've identified the required size, carefully follow the manufacturer's installation instructions for each hose.