



QUICK + EASY 2-STEP INSTALLATION:

DRYWALL INSTALLATION

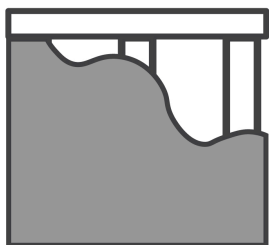


TOOLS REQUIRED:
DRILL + 3/8 IN. BIT

CONCRETE INSTALLATION

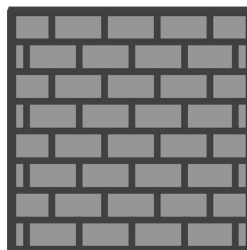


TOOLS REQUIRED:
DRILL + 1/4 IN. BIT

STUDS INSTALLATION

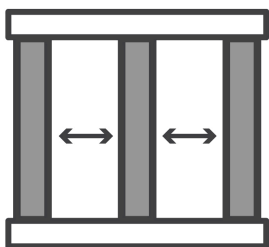

TOOLS REQUIRED:
SCREWDRIVER

■ CLOSETMAID® STANDARDS INSTALLATION

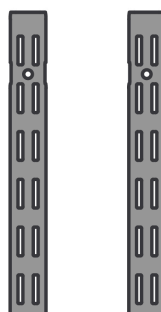

TOOLS REQUIRED:
RUBBER Mallet