

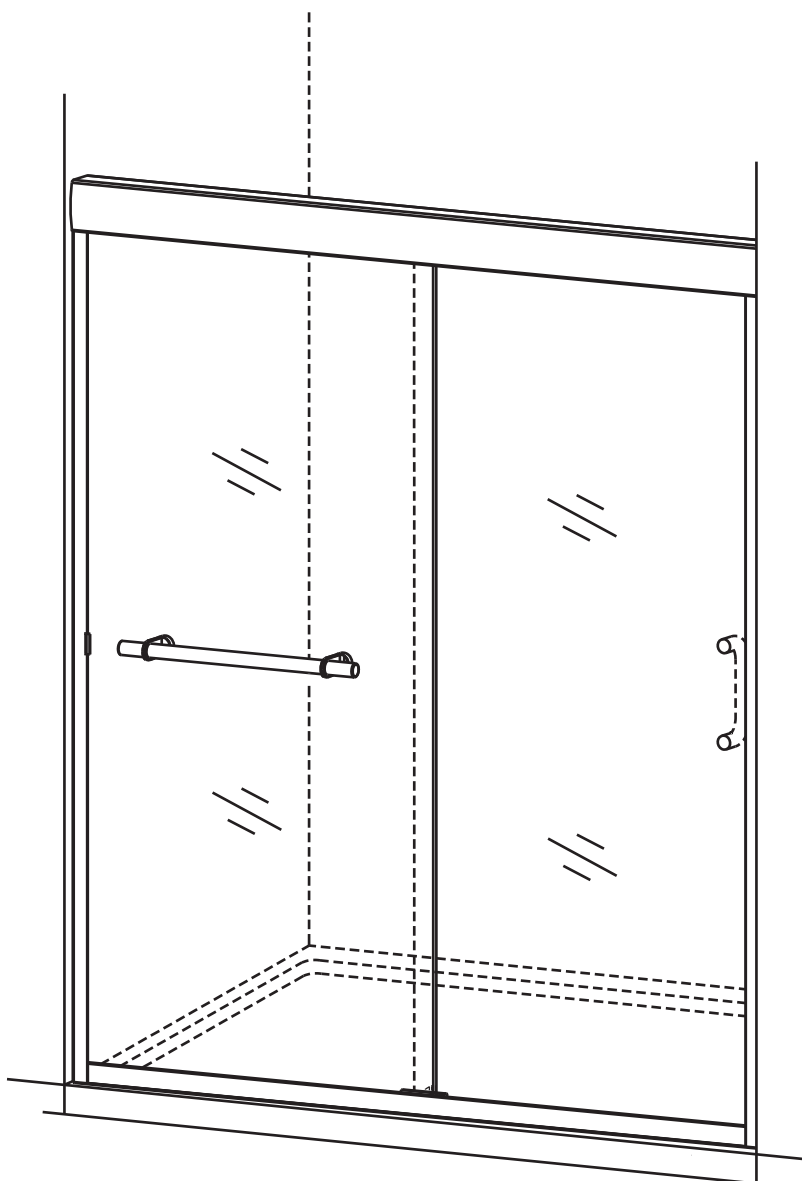
MARINA BY-PASS

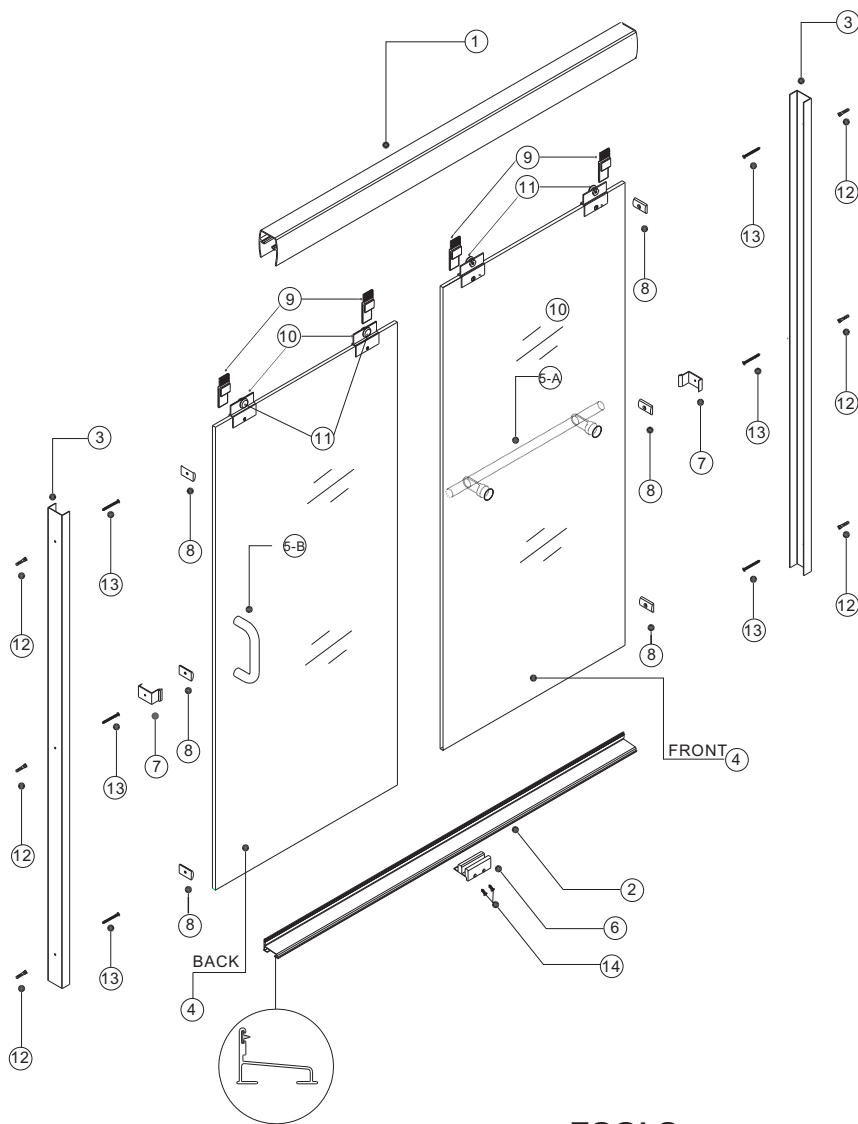
Installation Manual

IMPORTANT: Record the Model No.(see carton) of your tub or shower enclosure for future reference.

















Model No. _____

READ THE INSTRUCTIONS CAREFULLY, familiarize yourself with all the parts as shown in the exploded view. The exploded view will also provide a helpful reference when relating to the location of the various parts and how they are mounted.














• PART LIST.

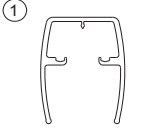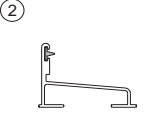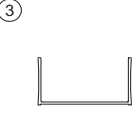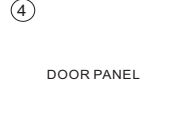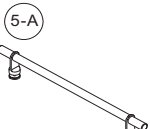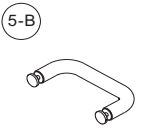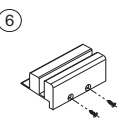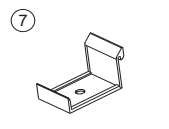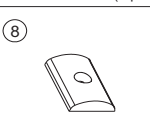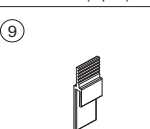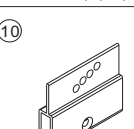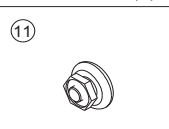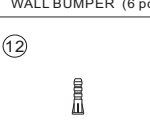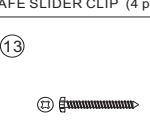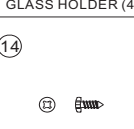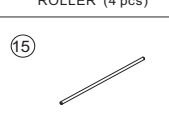
			
TOP TRACK (1 pcs)	BOTTOM TRACK (1 pcs)	WALL JAMB (2 pcs)	DOOR PANEL (FRONT/BACK)
			
TOWEL BAR (1 pcs)	HANDLE (1 pcs)	GUIDE (1 pcs)	BUMPER GUIDE (2 pcs)
			
WALL BUMPER (6 pcs)	SAFE SLIDER CLIP (4 pcs)	GLASS HOLDER (4 pcs)	ROLLER (4 pcs)
			
WALL PLUG (6 pcs)	SCREW (6pcs)	SCREW (2 pcs)	WRENCH (1 pcs)

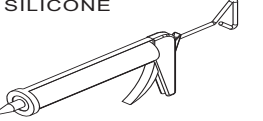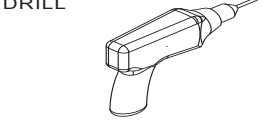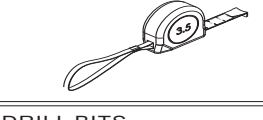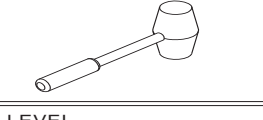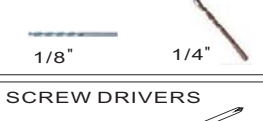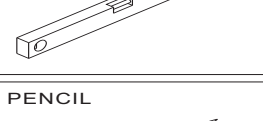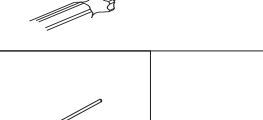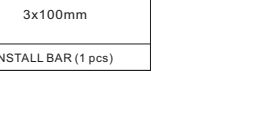• TOOLS.

	
SILICONE	DRILL
	
MEASURE TAPE	RUBBER MALLET
	
DRILL BITS	LEVEL
	
SCREW DRIVERS	PENCIL
	
HANDSAW	

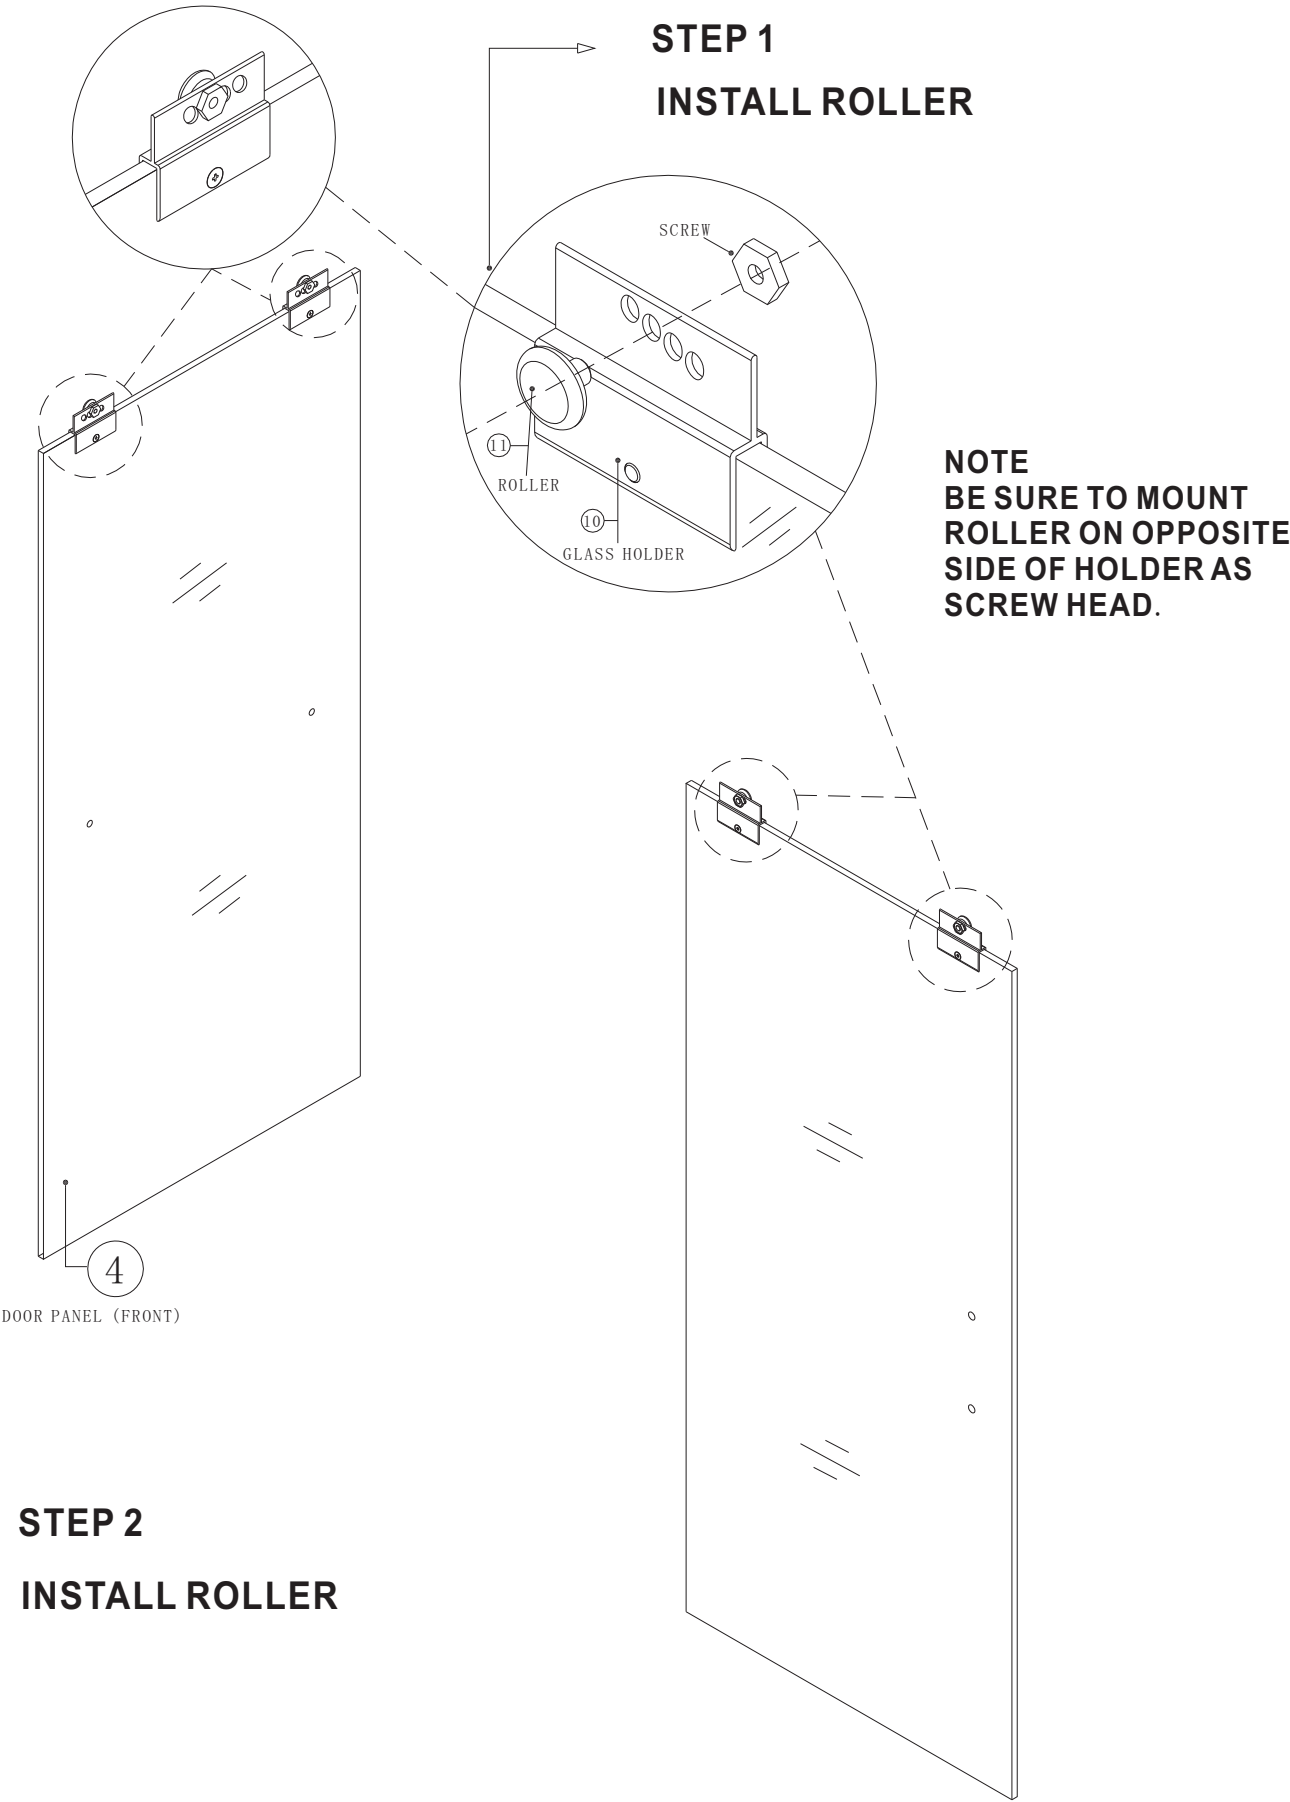


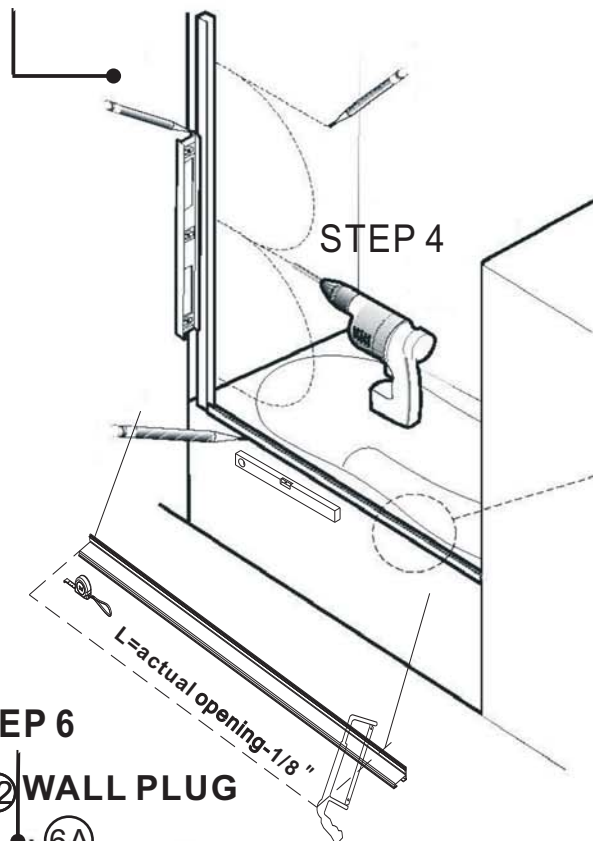STEP 3 REPEAT ON BOTH SIDE




STEP 6

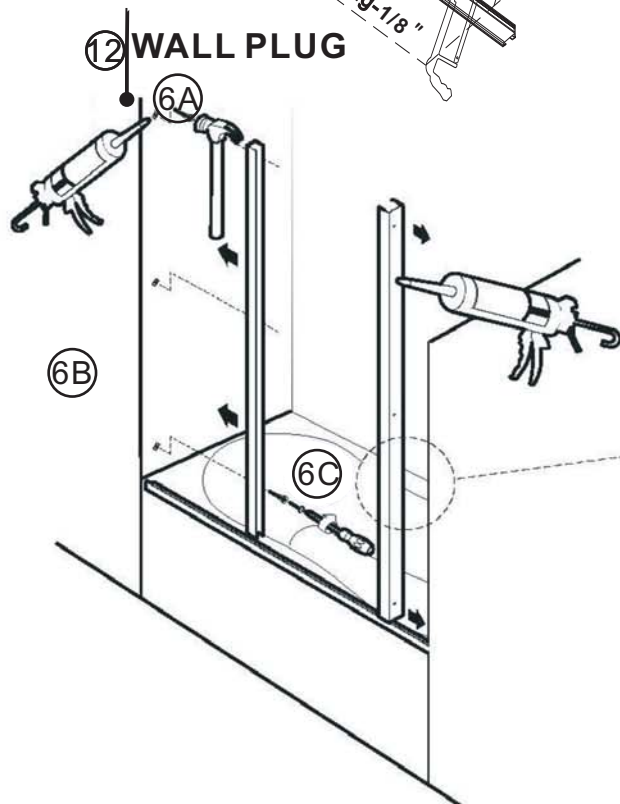12 WALL PLUG




STEP 5

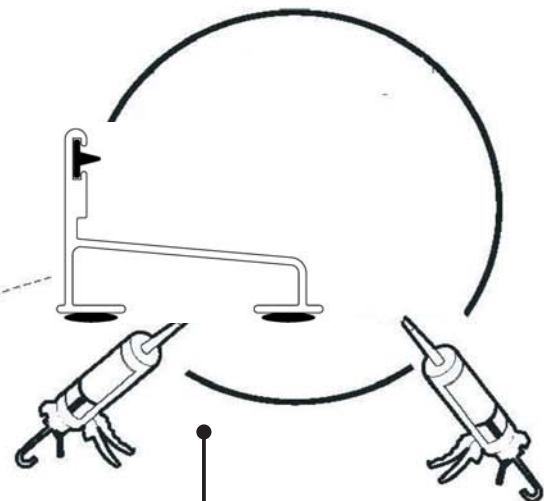BOTTOM TRACK SILICONE UNDERNEATH




STEP 7

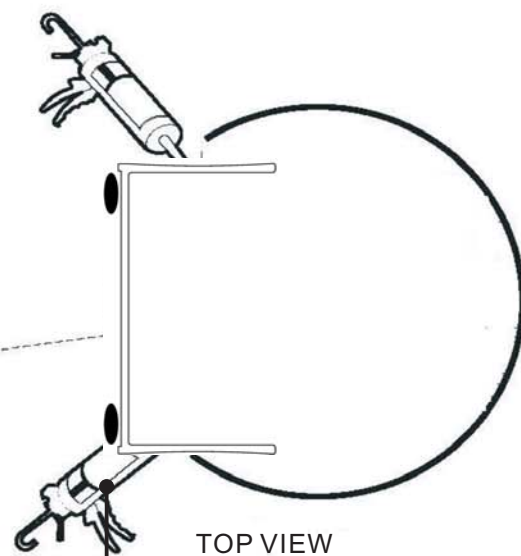WALL JAMB SILICONE ON BACK SIDE




STEP 8

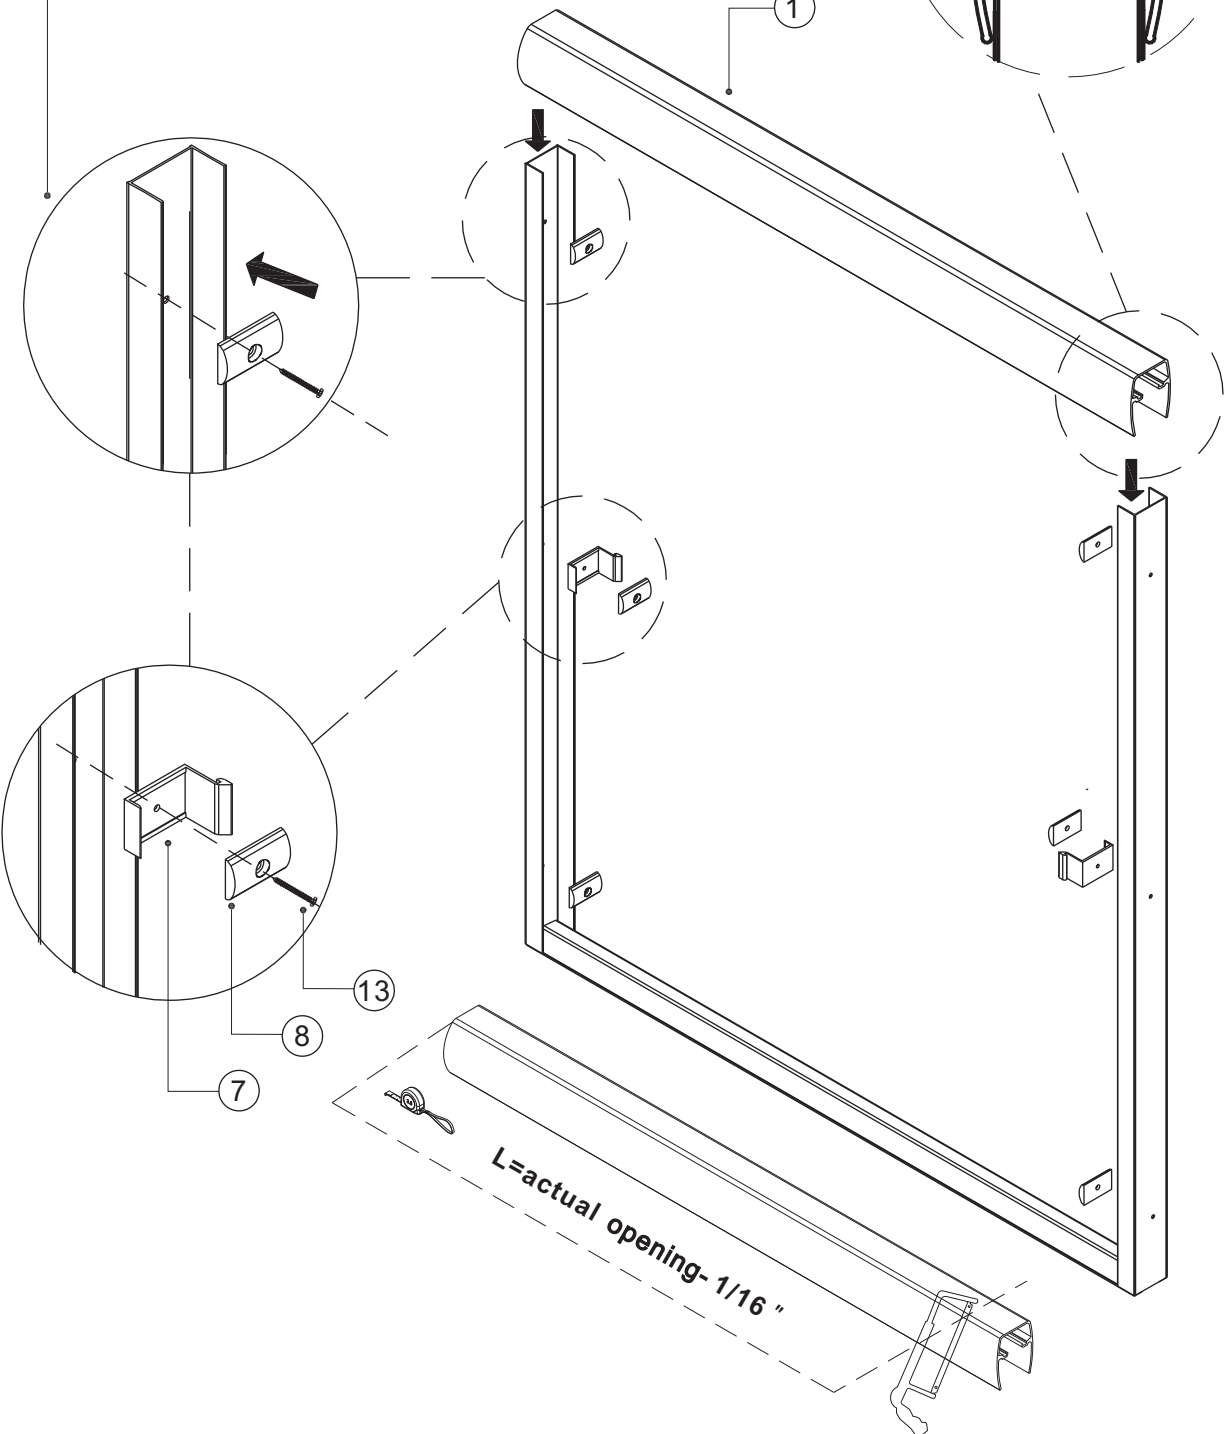
**FASTEN BUMPER GUIDE
AND WALL BUMPER ONTO BOTH
WALL JAMBS WITH 1-1/2" SCREW**



STEP 9

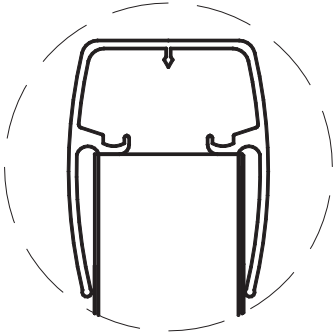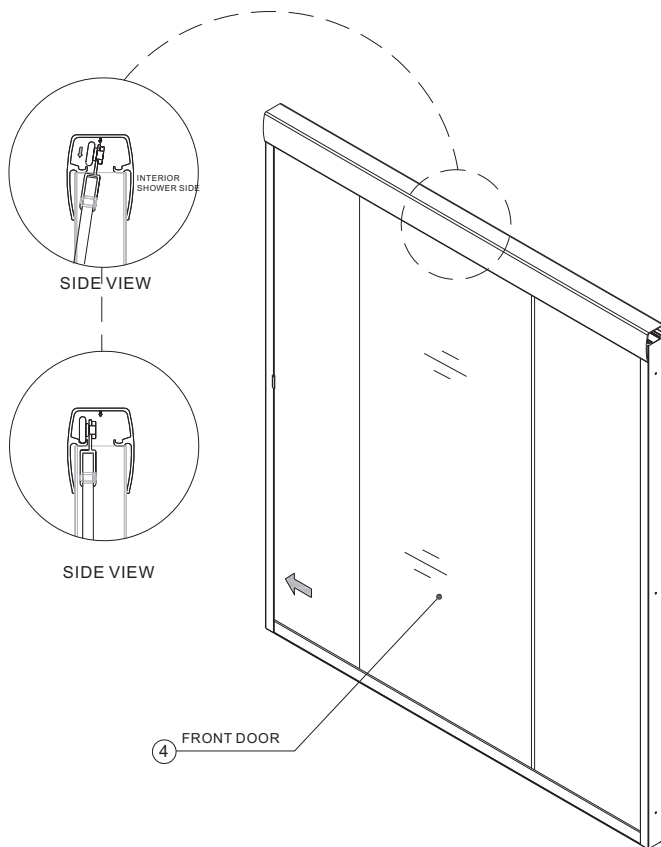**PLACE TOP RAIL ON THE
WALL JAMBS.**







STEP 10

**INSERT OUTER DOOR PANEL
BY LIFTING UP & INTO TOP TRACK**


STEP 11

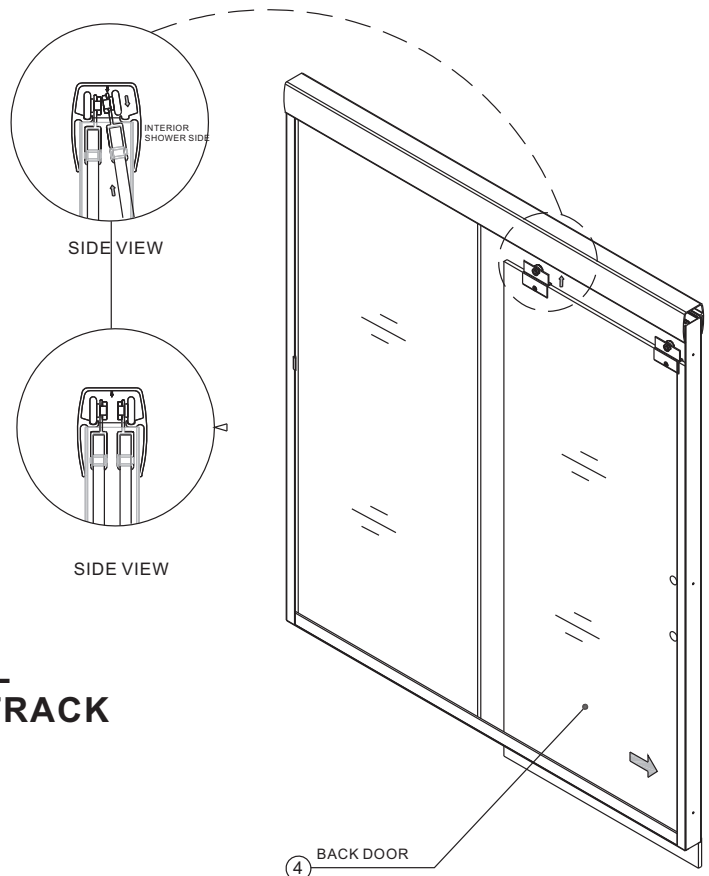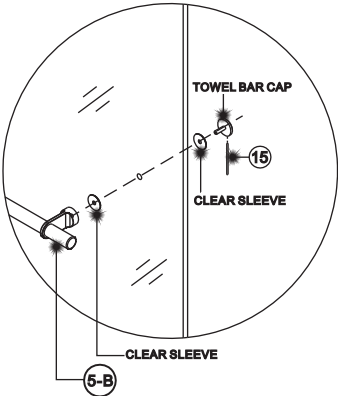**INSERT INNER DOOR PANEL
BY LIFTING UP & INTO TOP TRACK**







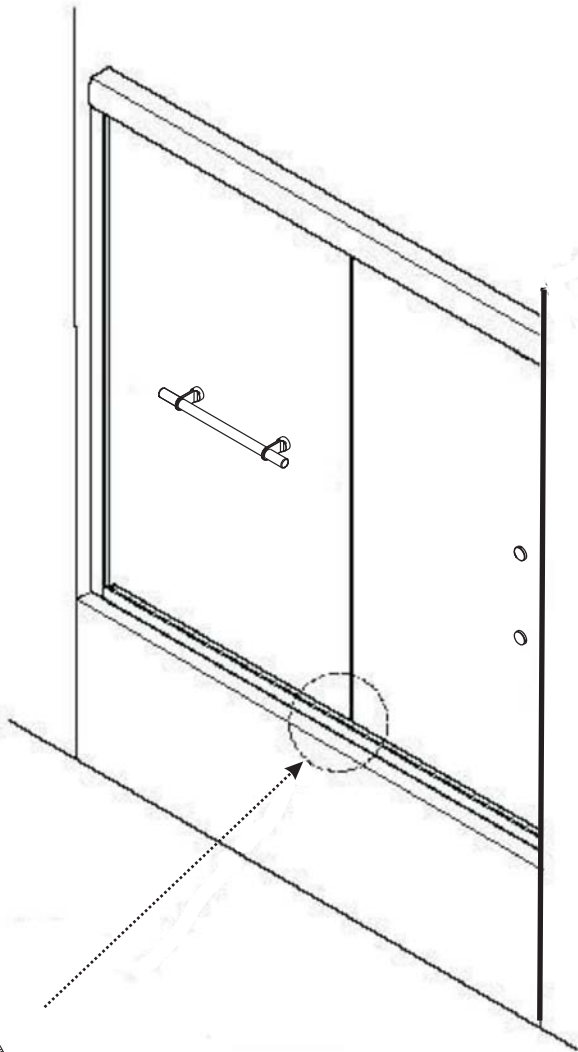STEP 12
INSTALL TOWEL BAR




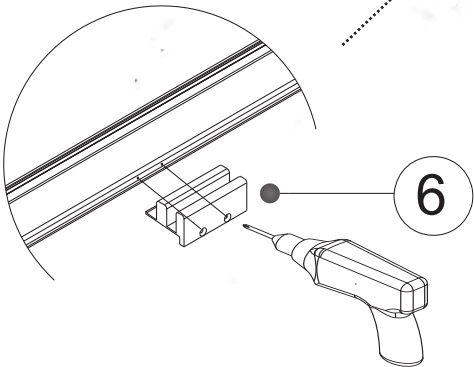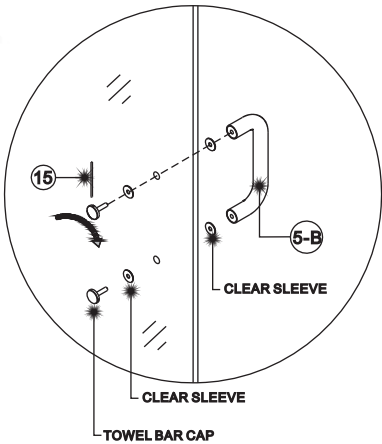STEP 13
INSTALL HANDLE




STEP 14

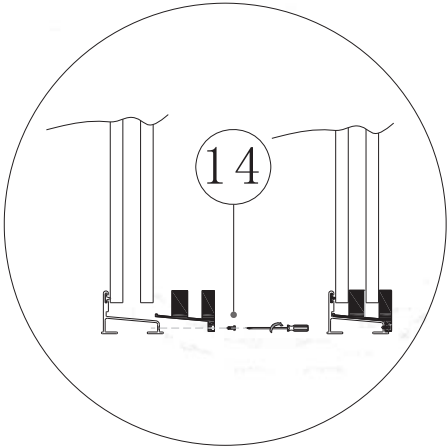INSTALL GUIDE WITH 3/8" SCREWS



SIDE VIEW


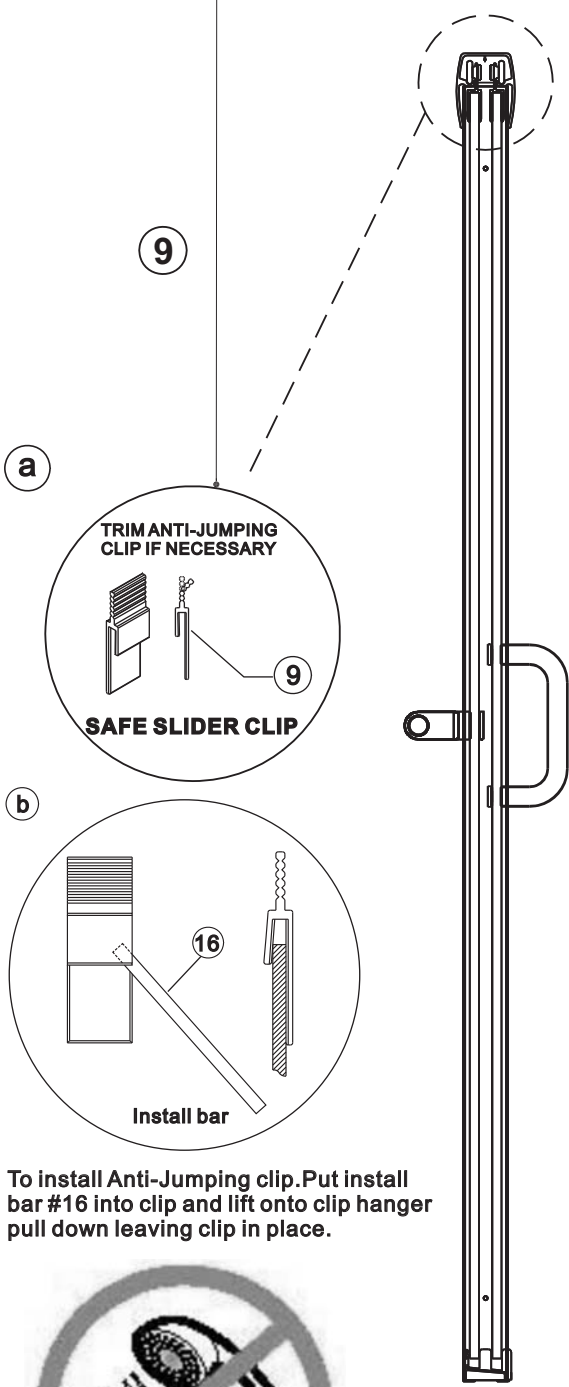
STEP 16 AT LAST. INSTALL SAFE SLIDER CLIP



To install Anti-Jumping clip. Put install bar #16 into clip and lift onto clip hanger pull down leaving clip in place.



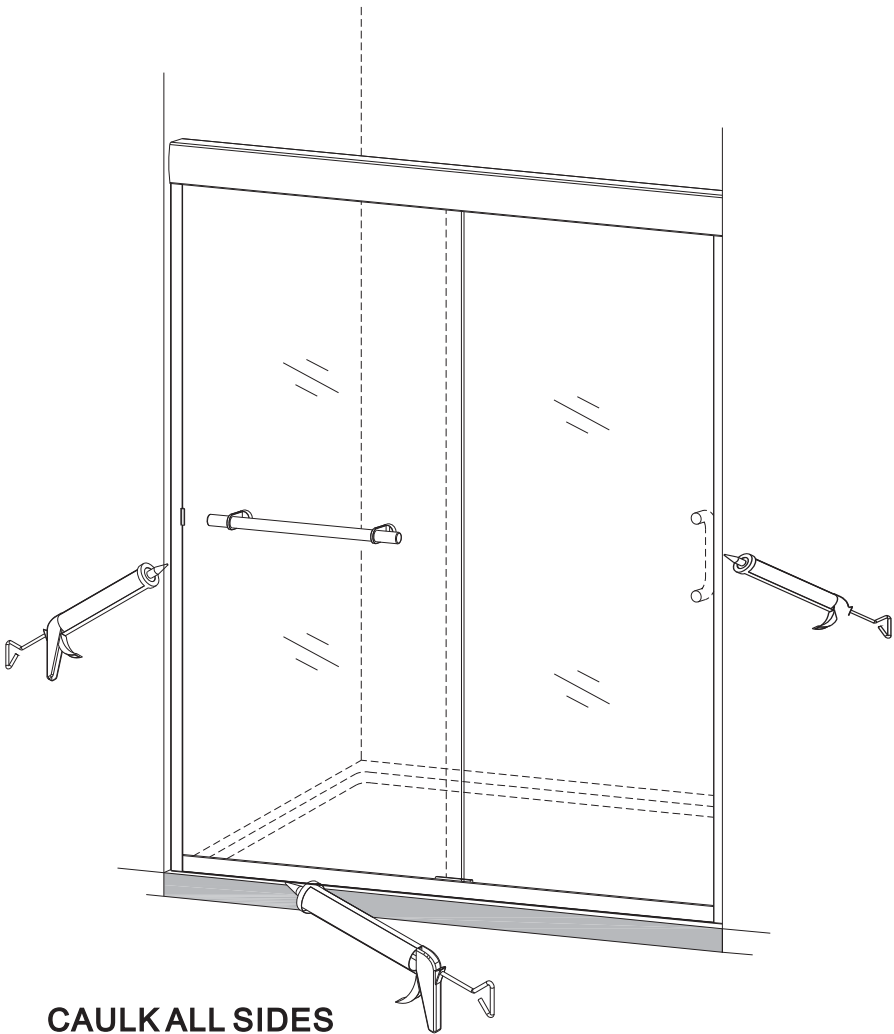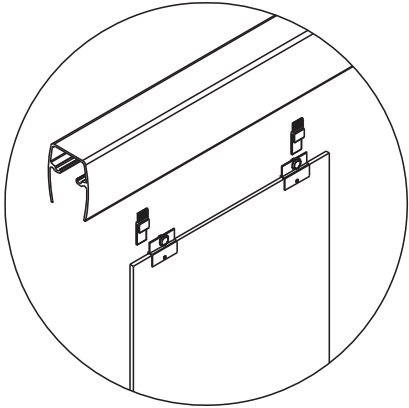24 Hours



CAULK ALL SIDES