



ASSEMBLY INSTRUCTION MODEL #ARC-1900-GA-CL-MWP



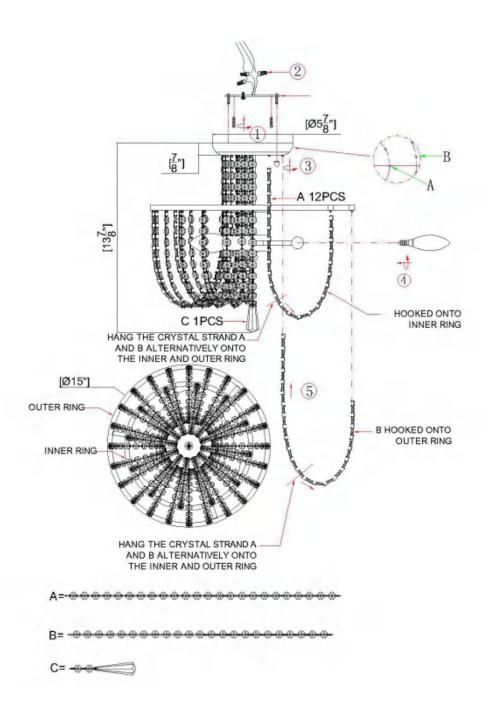

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate



You will need 3 Candelabra Base Bulb 40 Watts Recommended 60 Watts Max. USE LED BULBS FOR EXTENDED USE

How to Install


- 1) Secure mounting bar to outlet box with outlet box screw.
- 2) Connect wires with wire connector.
- 3) After wires are connected, raise canopy and secure to mounting bar with ball nut.
- 4) Install light bulb(not included).
- 5) Hang Crystal as illustrated.

Crystal Sets

A.12sets 24*14mm B.24sets 23*14mm C.1set 2*14mm+1*76mm



PART NUMBER MODEL #ARC-1900-GA-CL-MWP

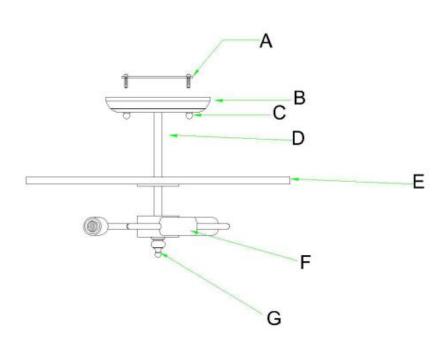

Part Number

Part Numbers

- A.(1)-Mounting Hardware
- B.(1)-Canopy ø5 7/8" (XBN1900GACAN5.875IN)
- C.(2)-Ball nut(XBN1900GABANUT)
- D.(1)-Center Stem L3.6"
- E.(1)-Center Ringø15" F.(3)-Socket L2"
- G.(1)-Bottom Finial H1 1/5" (XBN1900GAFIN)