

# CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS

## ASSEMBLY INSTRUCTION MODEL #8016-PN

### WARNING:




Electrical Danger



Turn Power Off


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.




You will need 6-Cand.BULB  
60 watts Max Bulb not included  
USE LED BULBS FOR EXTENDED USE

### How to Install

- 1.Insert the shade spoke in between top and bottom knurled nut.
- 2.Secure the shade by twisting the top knurled nut.
- 3.Install the recommended bulbs (not included) into each socket.
- 4.Screw the big crystal ball into the bottom box.

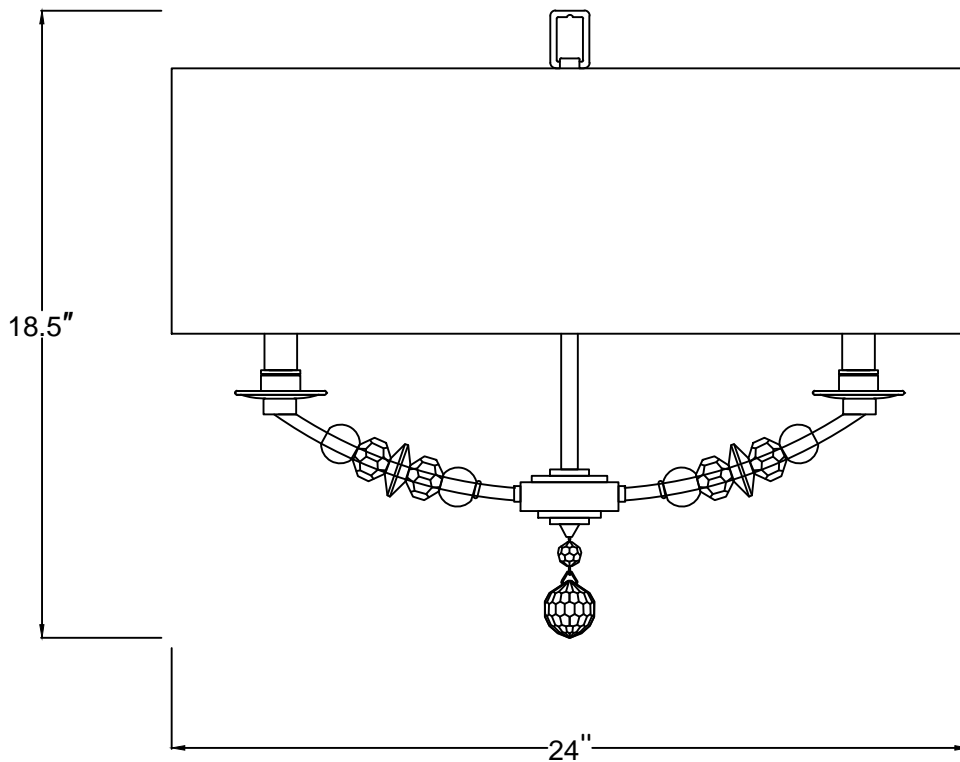

 **WARNING:** This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

# CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS

PART NUMBER MODEL #8016-PN

## Part Number

### Part Numbers

- A. Mounting Hardware
  - (1) Wire Nut
  - (1) Mounting Plate
  - (2) Canopy Screws
  - (2) Anchors
- B. (1) Canopy;  $\varnothing 5.5" \times 0.98" h$ ; XMO8005PNCAN5.5IN
- C. (1) Screw Collar Loop
- D. (1) Chain;  $72" L \times \varnothing 5.0mm T$ ; XMO8016PNCHA5MM
- E. (2) Quick Link
- F. (3) Shade Spoke
- G. (1) Fixture Loop
- H. (2) Knurled Nut
- I. (1) Fabric Shade;  $\varnothing 24" \times 8" h$ ; XMO8016PNSHA24IN
- J. (6) Socket
- K. (6) Arm;  $\varnothing 0.37"$
- L. (5) Crystal; 5 in each arm
- M. (1) Crystal Ball;  $\varnothing 2"$ ; XMO8016PNCRYBALL

