

LIGHTING THE WAY FOR SIXTY YEARS

ASSEMBLY INSTRUCTION MODEL#BRY-8008-BF



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.






You will need 8- Cand. Bulb
40 Watts Recommended 60 Watts Max.
USE LED BULBS FOR EXTENDED USE
THE FIXTURE IS DAMP RATED

How to install

- Place the frame on a soft cloth covered platform and lay two pieces of glass on the two adjacent cut outs of the frame. Hold the glass while aligning the holes on the metal strap with the holes on the frame. Two persons handling is recommended for this stap.
- Install the end of the rod(without the tab) onto the Lower canopy and secure with a nut. Repeat for all rods.Do not tighten the nut until the end of step #3.
- 3. Spread the rods out equally and align the holes at the tab of rod with holes in the bending ring. Secure the rods with flat head screws. Now the nuts inside the canopy can be tightened to secure the roads in place.
- $4.\,\mbox{Place}$ the plate over the top of canopy and secure with the loop.
- 5. Install the mounting bar to the outlet box using two outlet box screws.
- $6. \, \mbox{Decide}$ the desired hanging height and cut the chain to the proper length.
- 7. Install the canopy onto the mounting bar and secure with the screw collar loop ring.

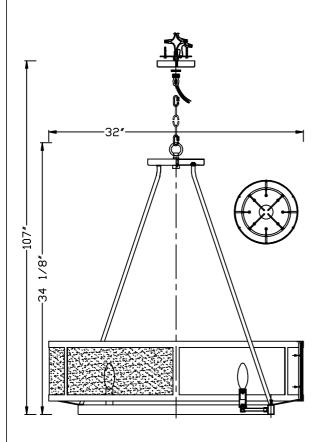

For Hanging



LIGHTING THE WAY FOR SIXTY YEARS

ASSEMBLY INSTRUCTION MODEL# BRY-8008-BF

For Hanging

Outlet Box A C

Part Number

- A. (1)-Mounting Hardware For Hanging
- B. (1)-Canopy For Hanging; W5-1/2"XH1"(XSU8004BFCAN5.5IN)
- C. (1)-Chain; 3.8MM(XSU8004BFCHA3.8MM)
- D. (1)-Lower Canopy; W7-1/8"XH3/4" (XSU8008BFCAN7.1IN)
- E. (6)-Metal strap
- F. (4)-Rods (XSU8008BFSIDEROD)
- G. (8)-Flat head Screw
- H. (1)-Loop(XSU8004BFLOOP)
- I. (6)-Glass; W15-5/8"XH7-1/4" (XSU8008GLA15.6IN)
- J. (12)-Machine Screws
- K. (8)- Bulb(Not Included)
- L. (1)- Plate

