




ASSEMBLY INSTRUCTION MODEL# BRH-M520-GA

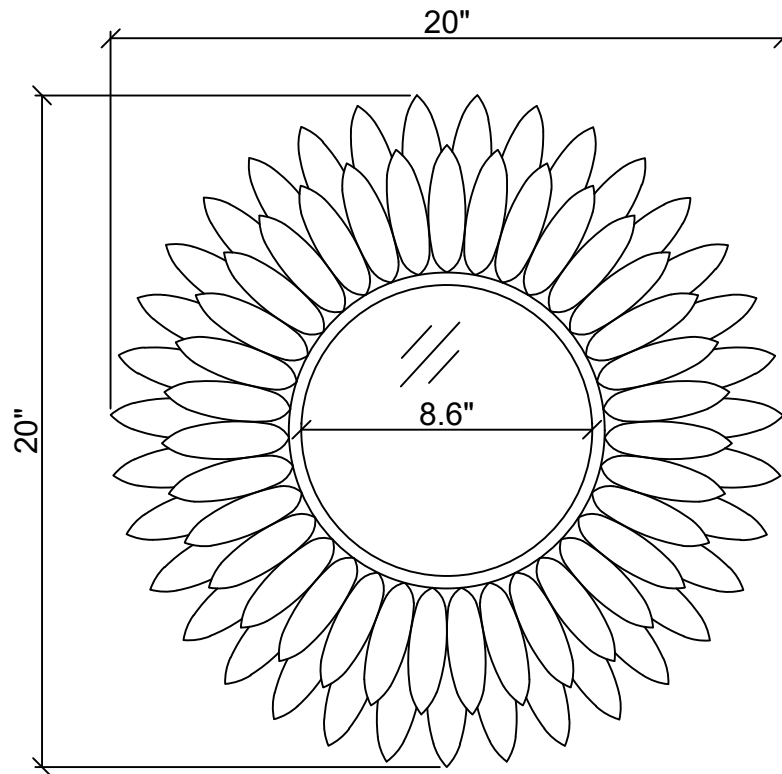

When removing the mirror from the box, please gently hold and lift from the outermost leaf ONLY.

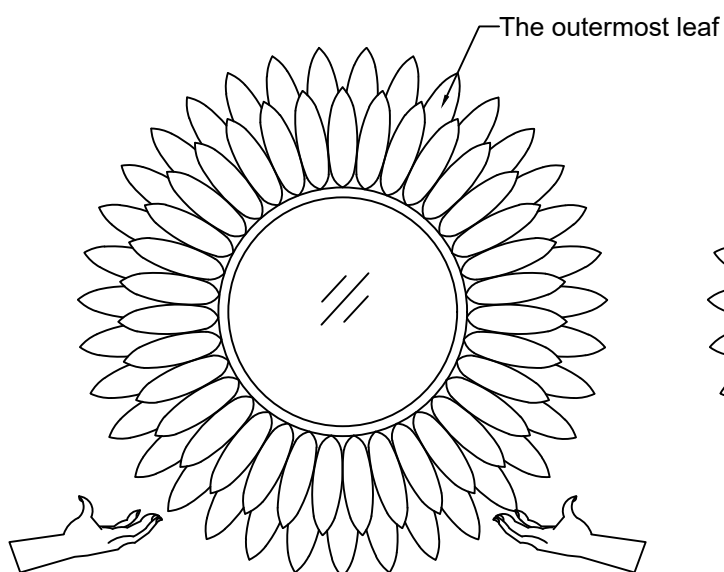




FRONT VIEW

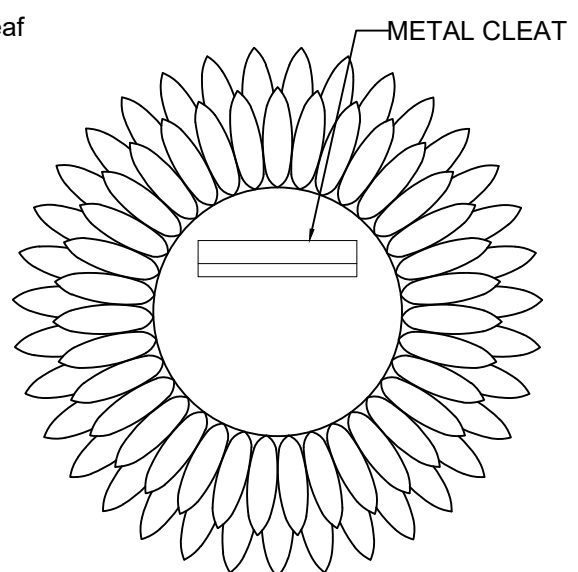


BACK VIEW





INSTALLATION INSTRUCTIONS

ITEMS INCLUDED

Anchor(A):  Ø7.5[mm]x36[mm]x2 Wall cleat:  x1
Screws(B):  Ø4[mm]x40[mm]x2

NECESSARY TOOLS (NOT INCLUDED)



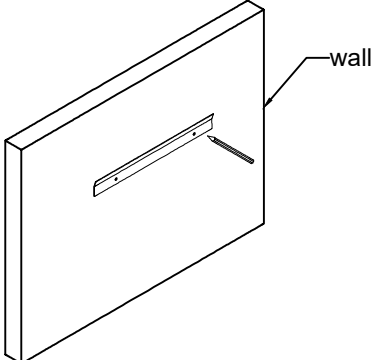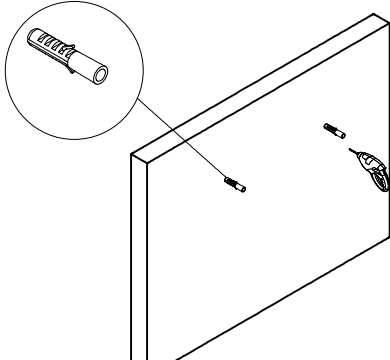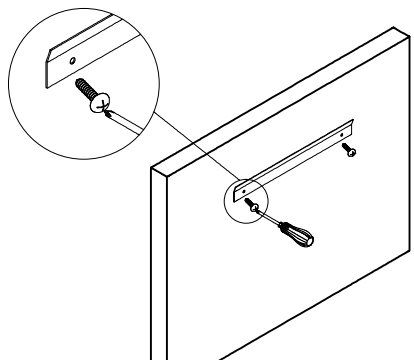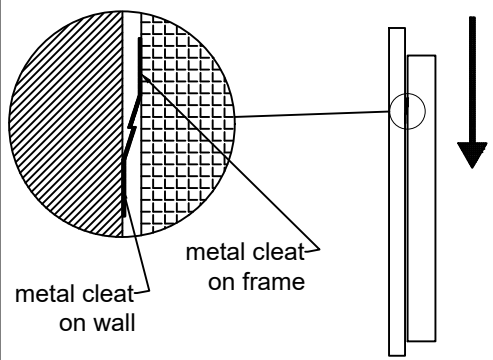	<p>Step 1</p> <p>Place the metal cleat at the desired wall location and mark three points at the center of the hole on the metal cleat using the pencil.</p>
	<p>Step 2</p> <p>Drill the holes at the marked points and insert the anchors into the hole.</p>
	<p>Step 3</p> <p>Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.</p>
	<p>Step 4</p> <p>Gently hold the outermost leaf of the mirror and hang it onto the metal cleat.</p>