




www.todaysdesignhouse.com

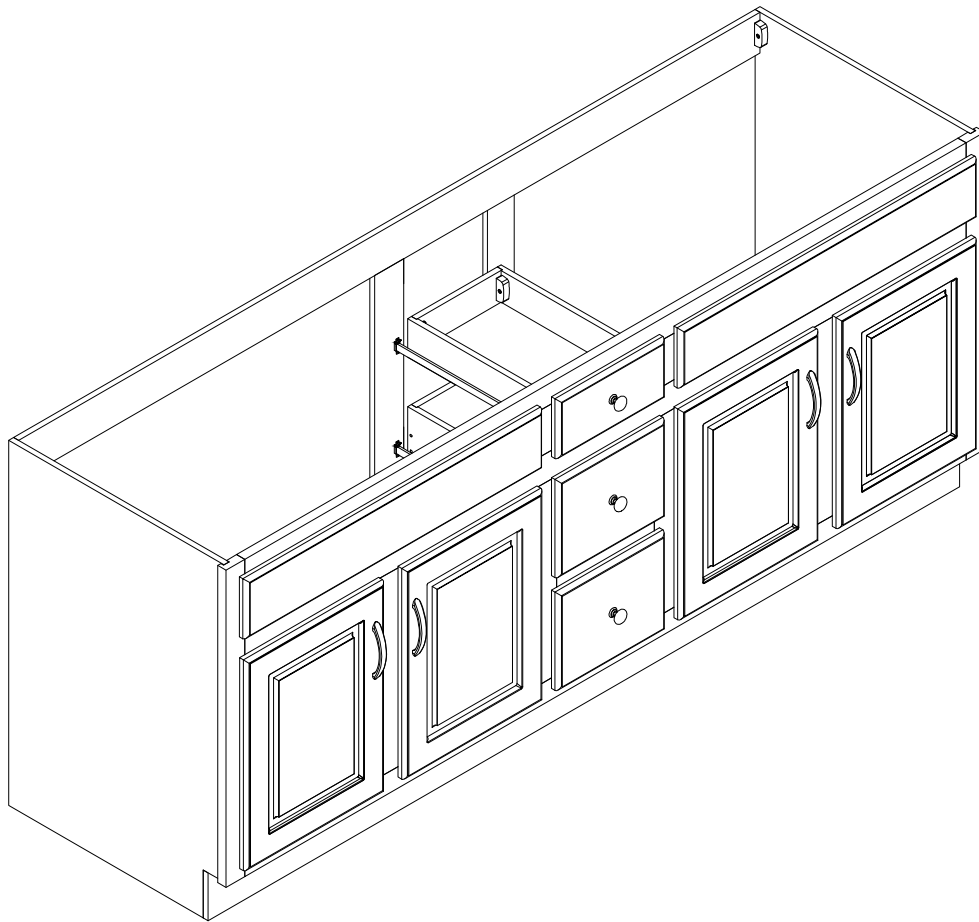


587048


ASSEMBLY INSTRUCTIONS

DHI Corp. • 5205 W. Donges Bay Rd. • Mequon, WI 53092 • 800.558.8700


PARTS LIST:

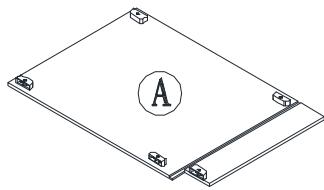


LEFT SIDE PANEL 1PCS

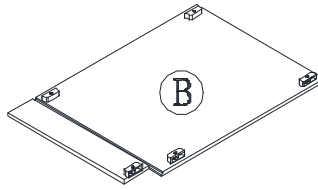


RIGHT SIDE PANEL 1PCS

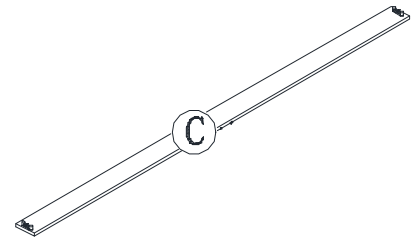


BACK UP CROSS BRACE 1PCS

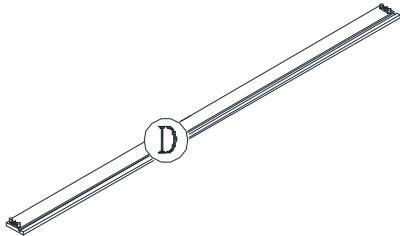


BACK DOWN CROSS BRACE 1PCS




BACK PARTITION PANEL 2PCS

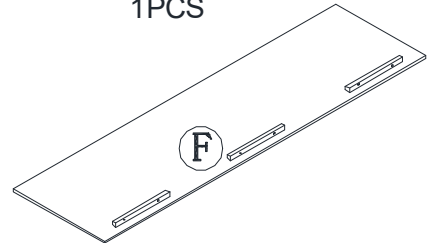


BOTTOM PANEL 1PCS

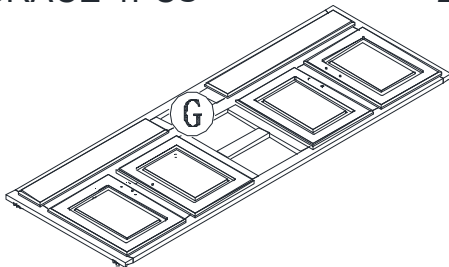

FRONT FRAME 1PCS

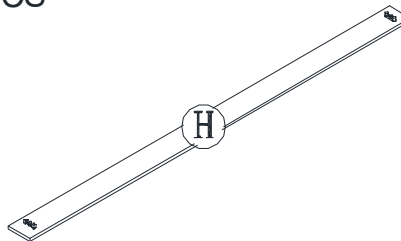


TOE KICK PANEL 1PCS




SMALL DRAWER FRONT PANEL 1PC



SMALL DRAWER BACK PANEL 1PC

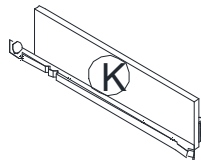


SMALL DRAWER LEFT SIDE PANEL 1PC

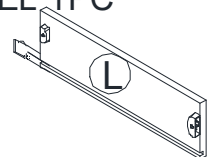


SMALL DRAWER RIGHT SIDE PANEL 1PC




DRAWER BOTTOM PANEL 3PCS




BIG DRAWER FRONT PANEL 2PC



BIG DRAWER BACK PANEL 2PC

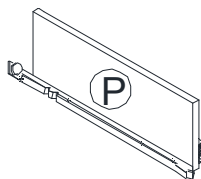

BIG DRAWER LEFT SIDE PANEL 2PCS

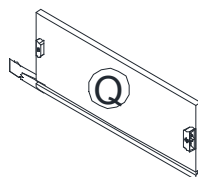


BIG DRAWER RIGHT SIDE PANEL 2PCS


HARDWARE LIST:




a. WOOD DOWEL 16PCS




b. ROUND HEAD SCREW
12PCS

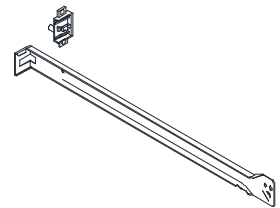


c. RIGHT DRAWER GUIDE
2PCS

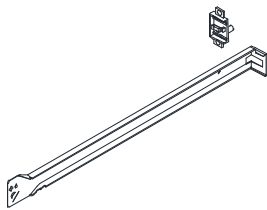


d. LEFT DRAWER GUIDE
3PCS



e. FLAT SCREW 6PCS

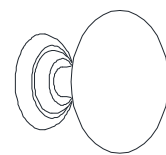


f. KNOB 3PCS

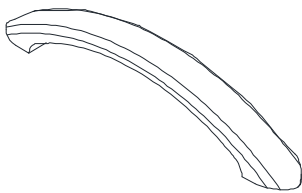

g. HANDLE 4PCS



h. 3/4" L HANDLE BOLT
8PC




i. 7/8" L HANDLE BOLT
3PC




j. 1" L FLAT HEAD SCREW
6PCS


STEP 1

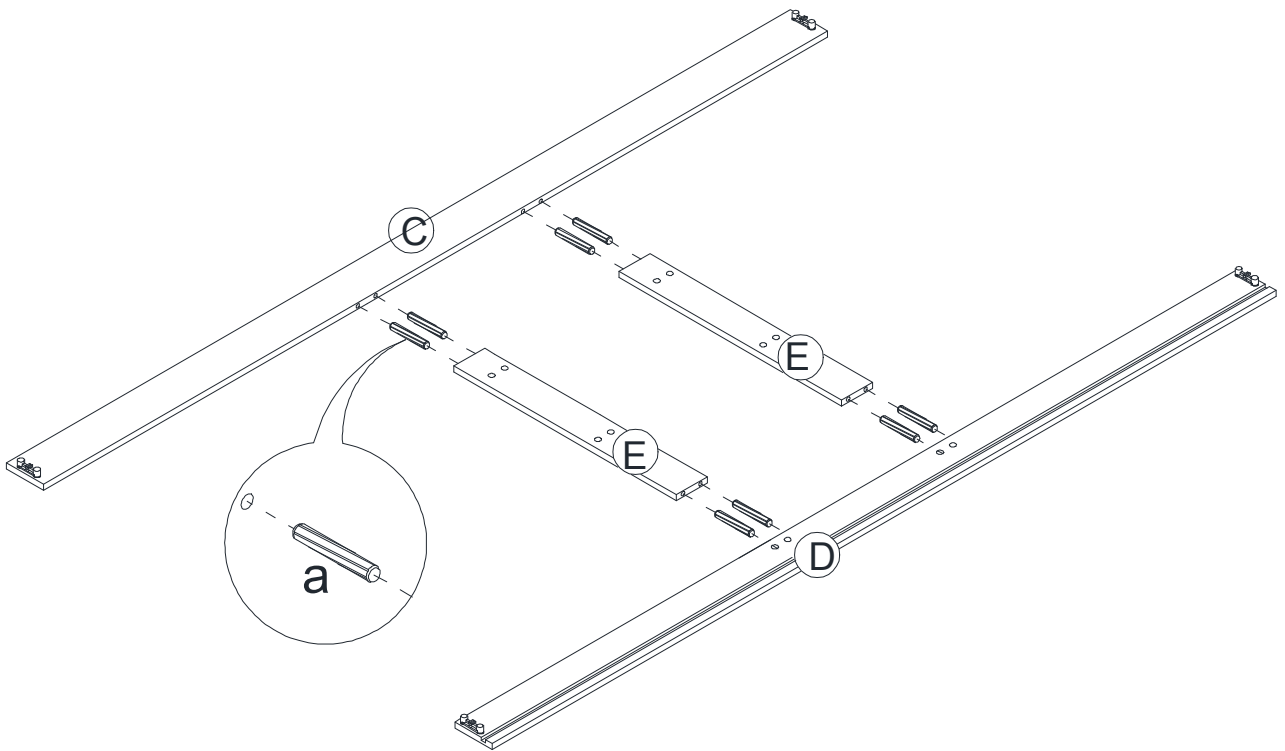


STEP 2

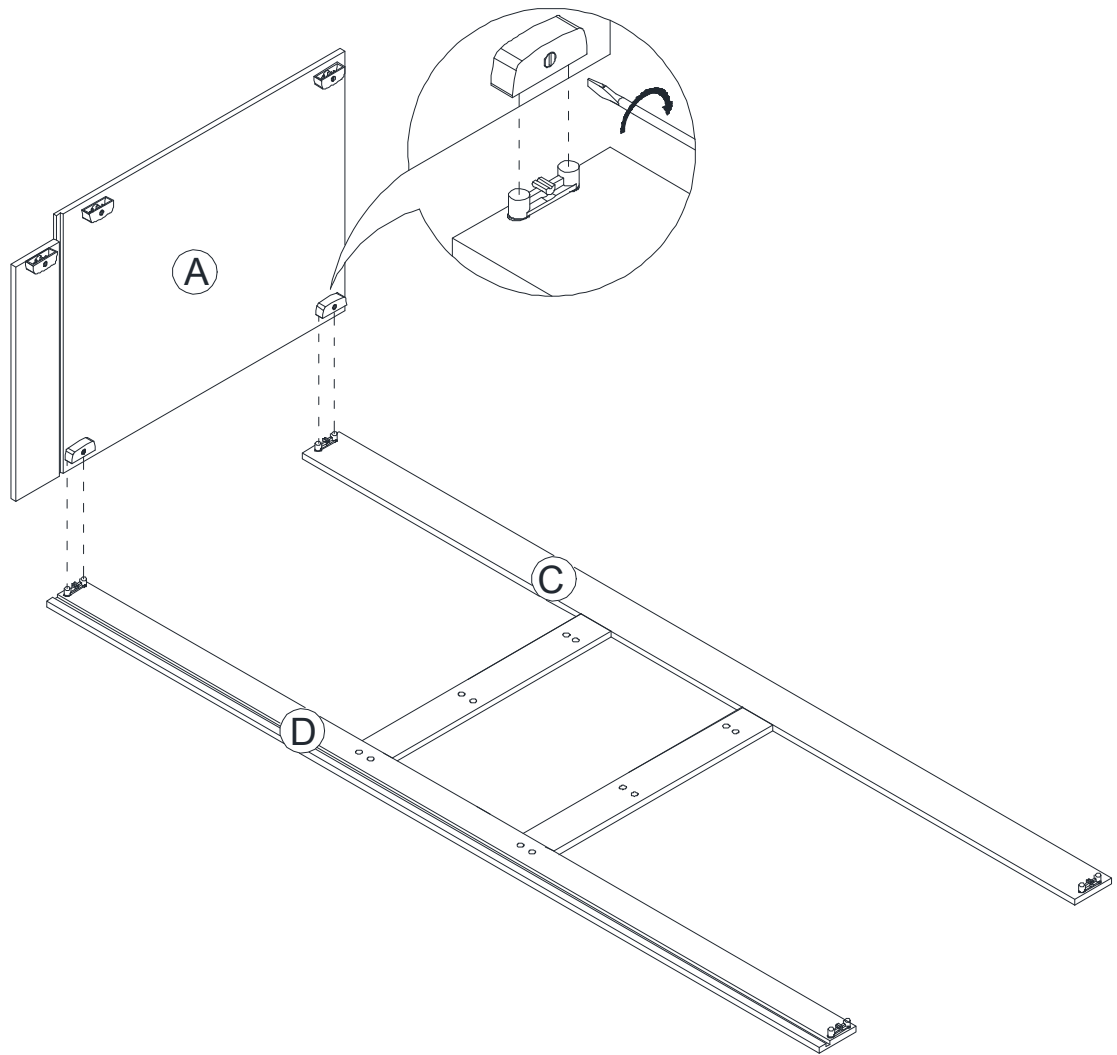


STEP 3

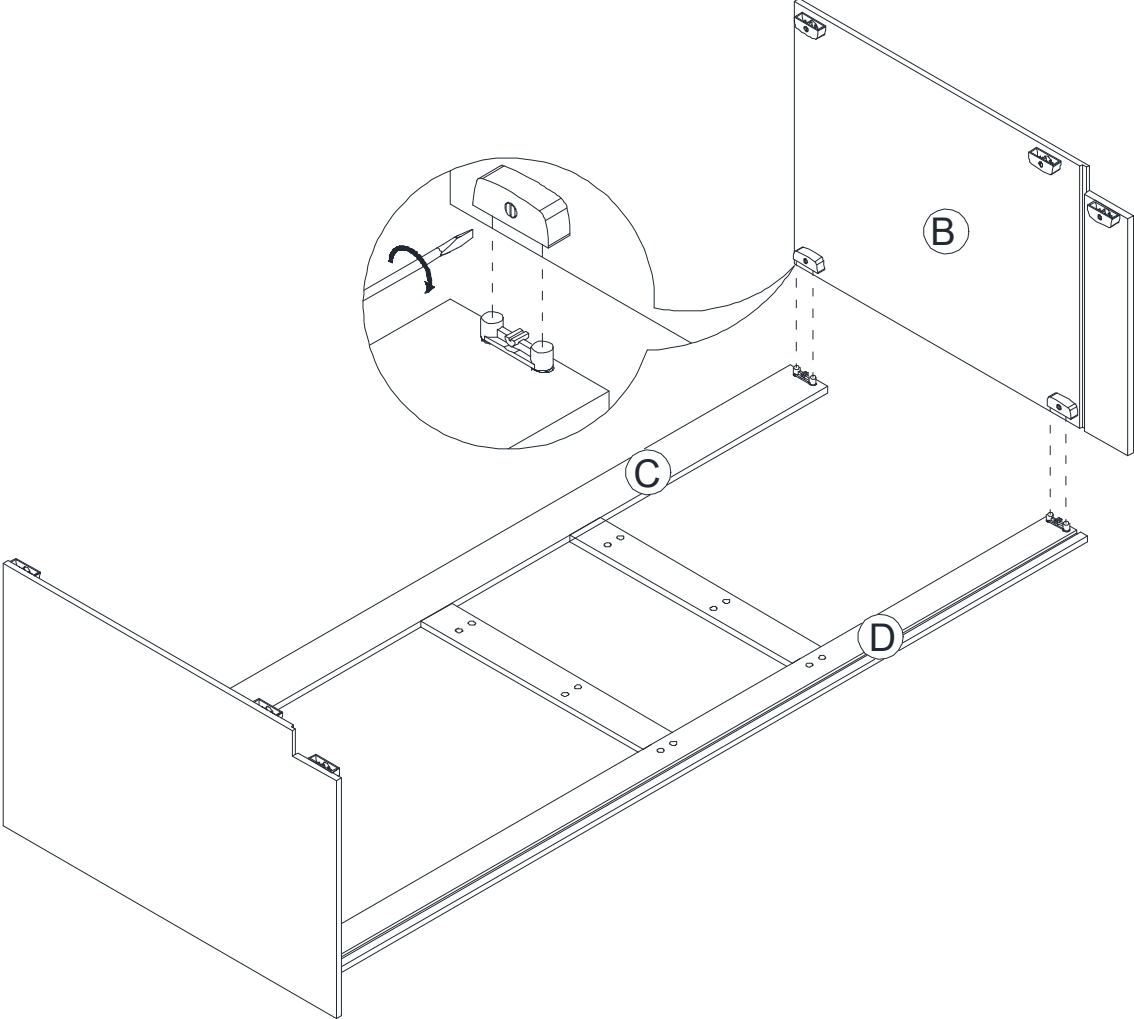


STEP 4

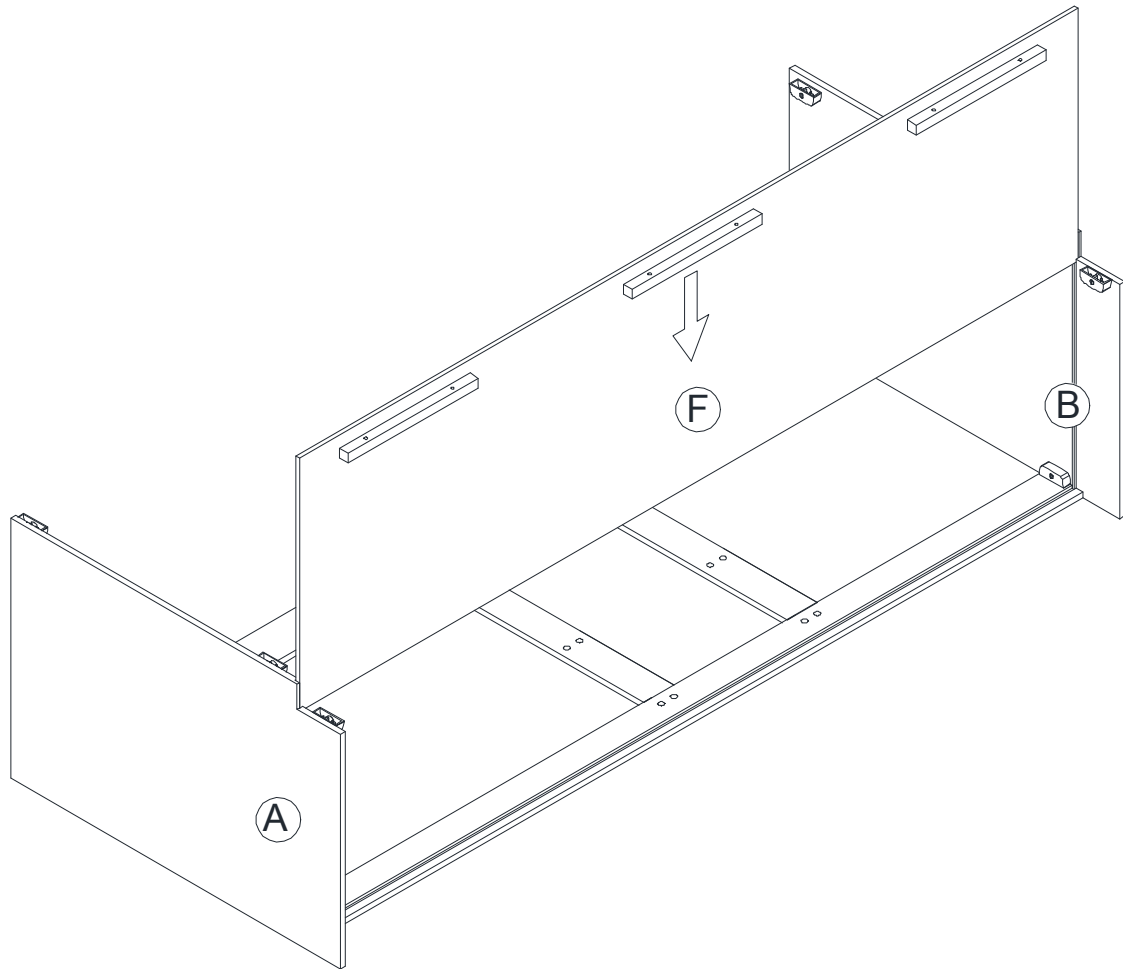


STEP 5

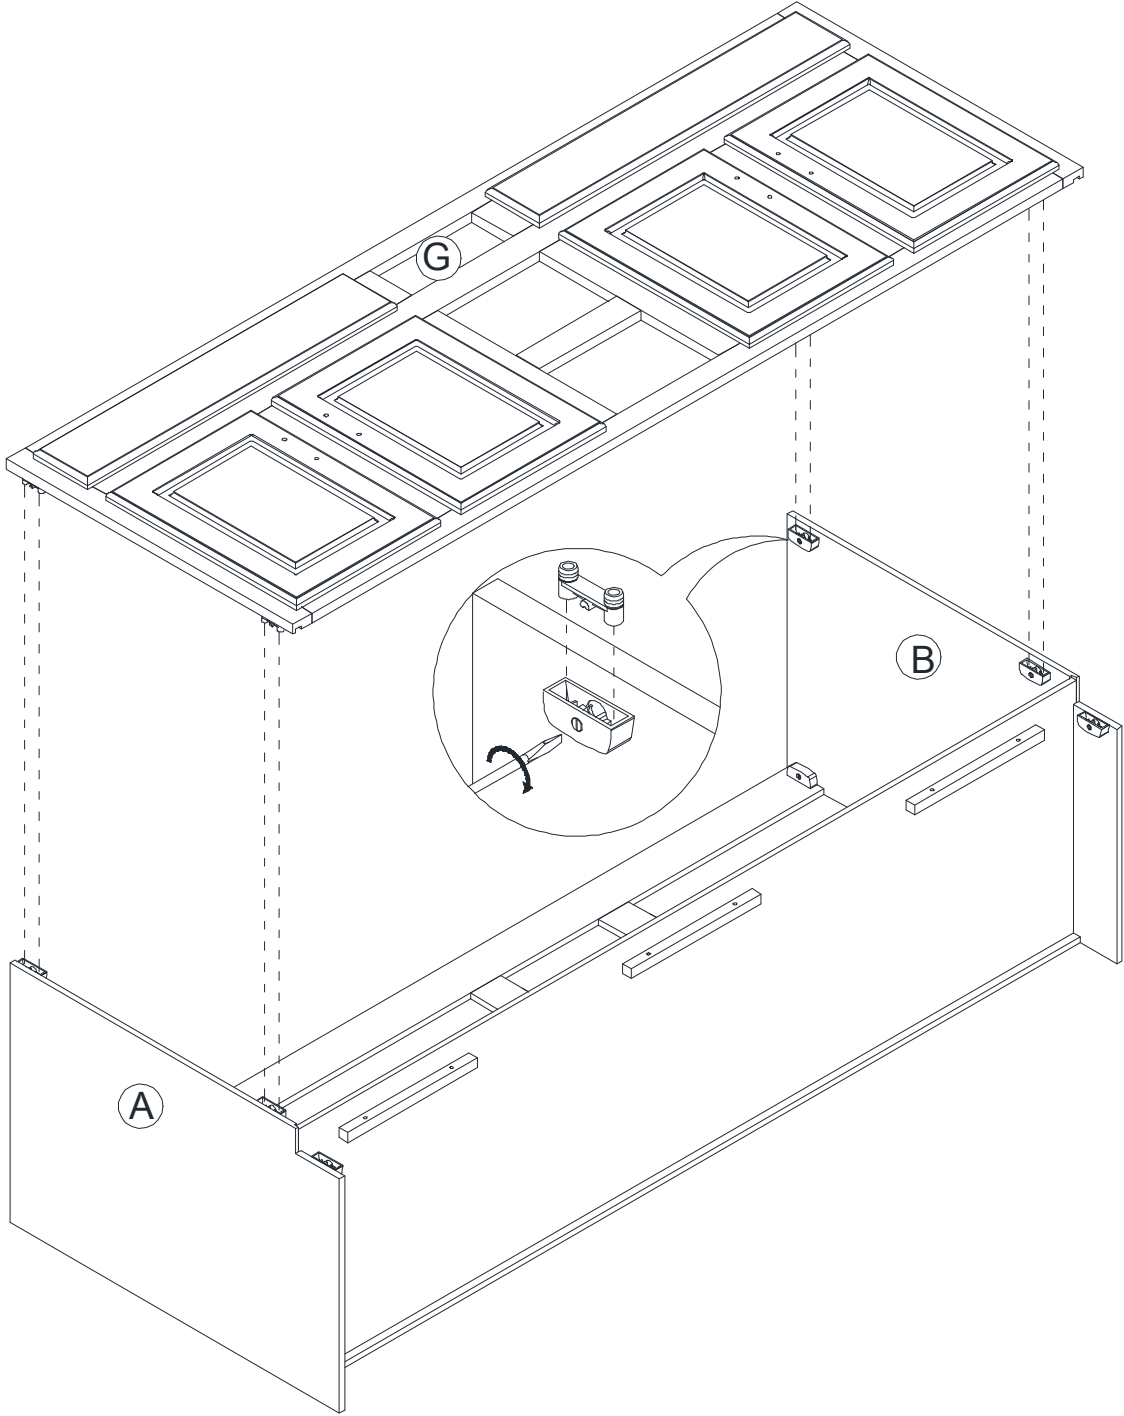


STEP 6

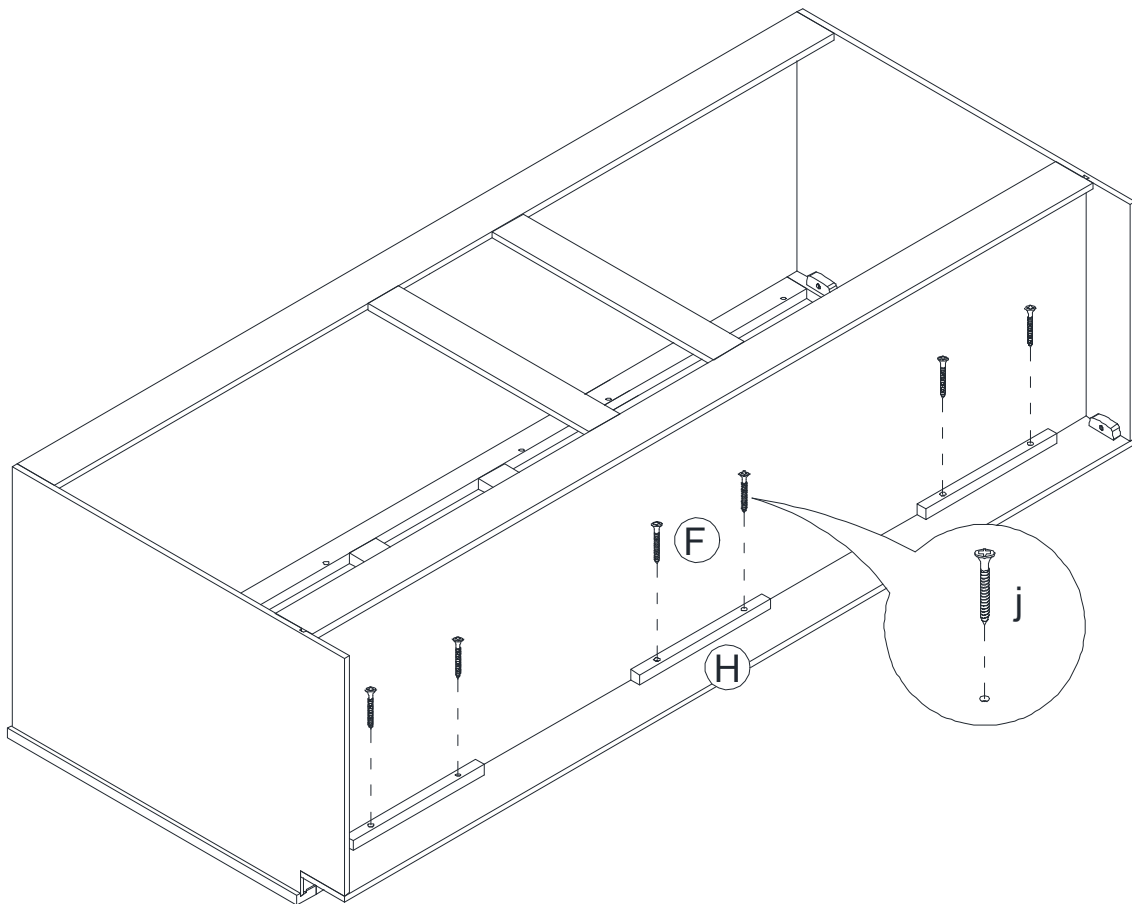


STEP 7

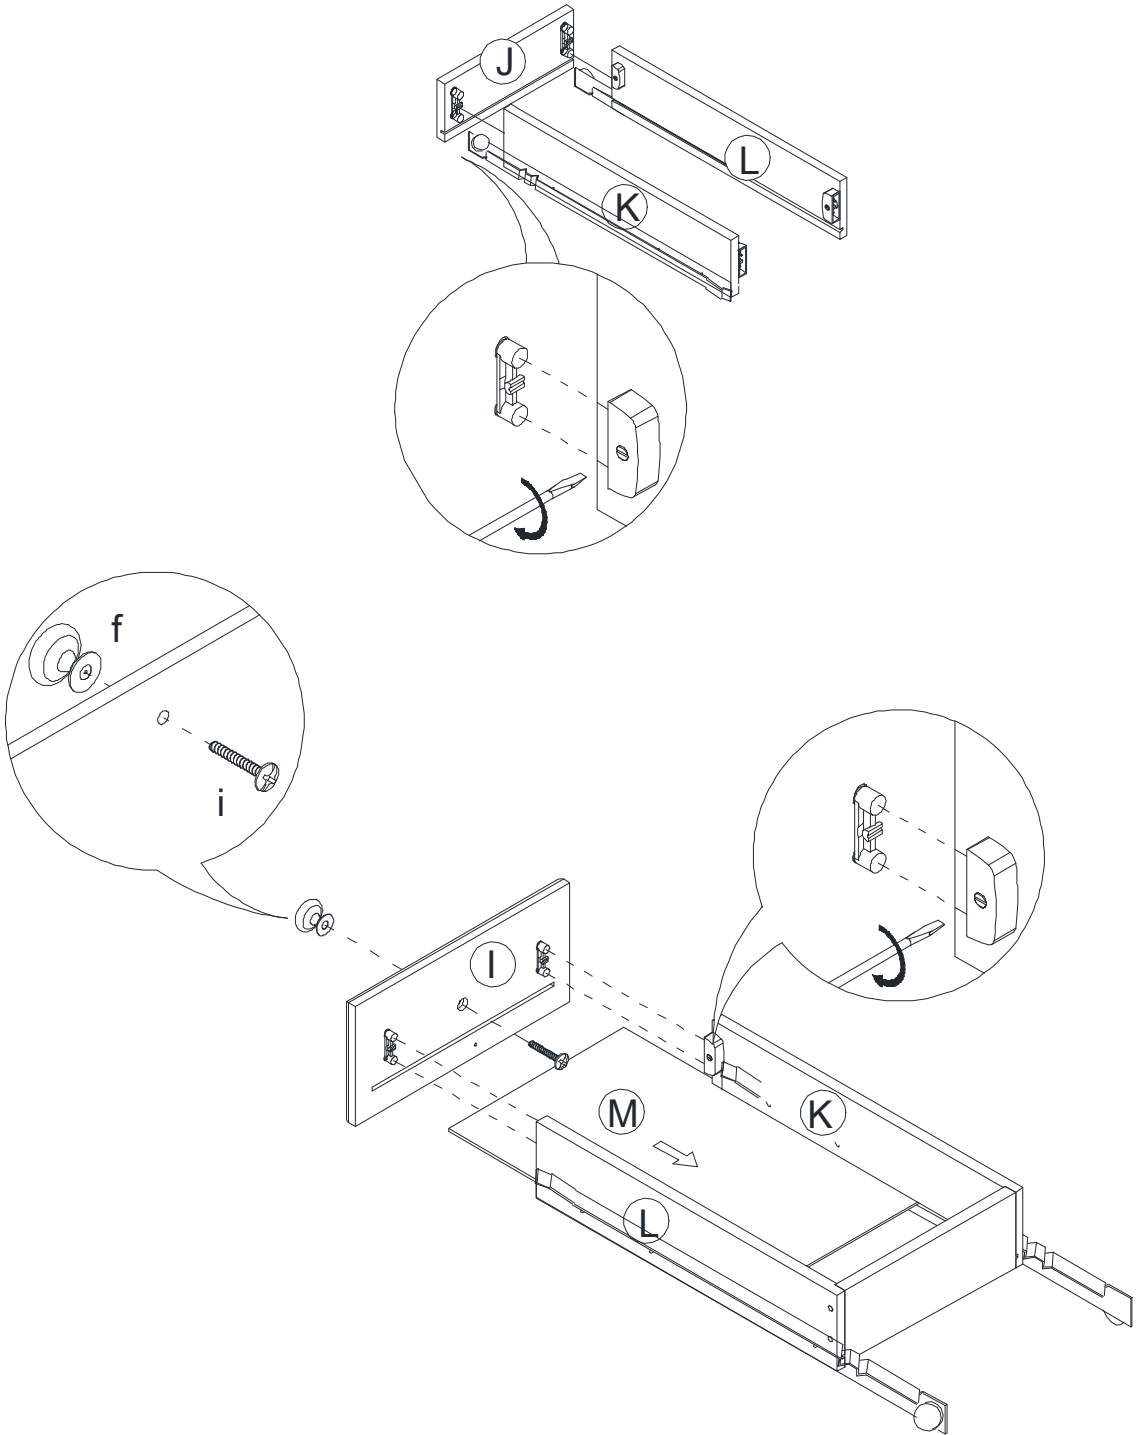

STEP 8

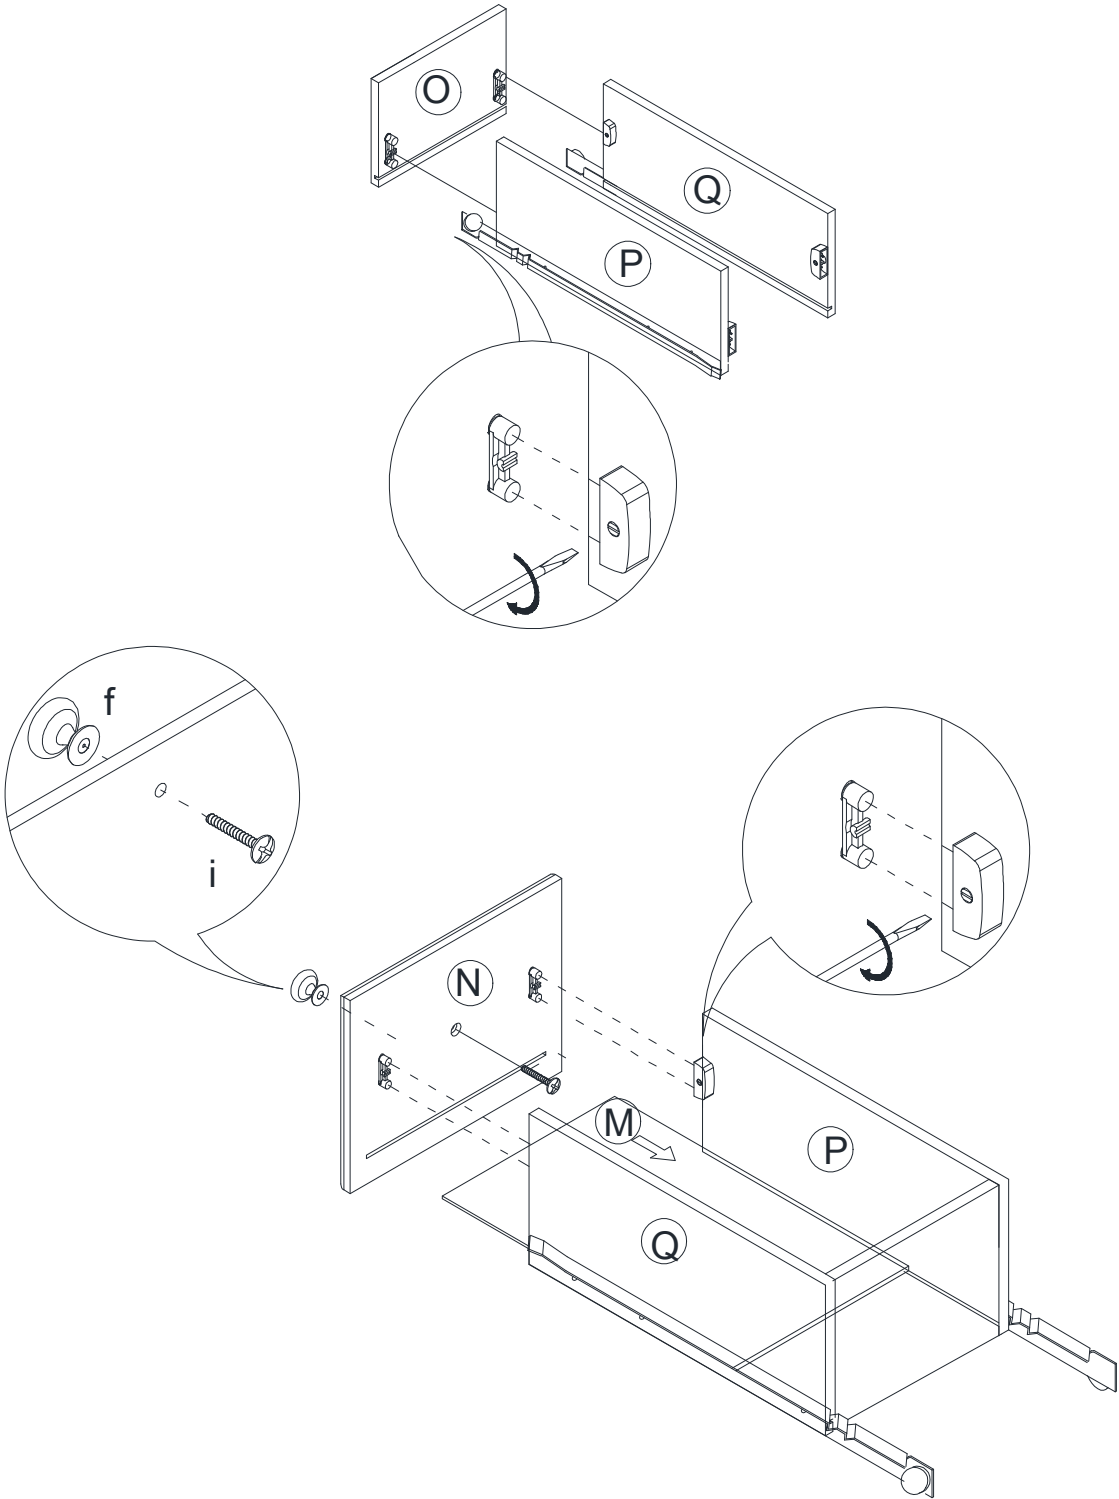

STEP 9

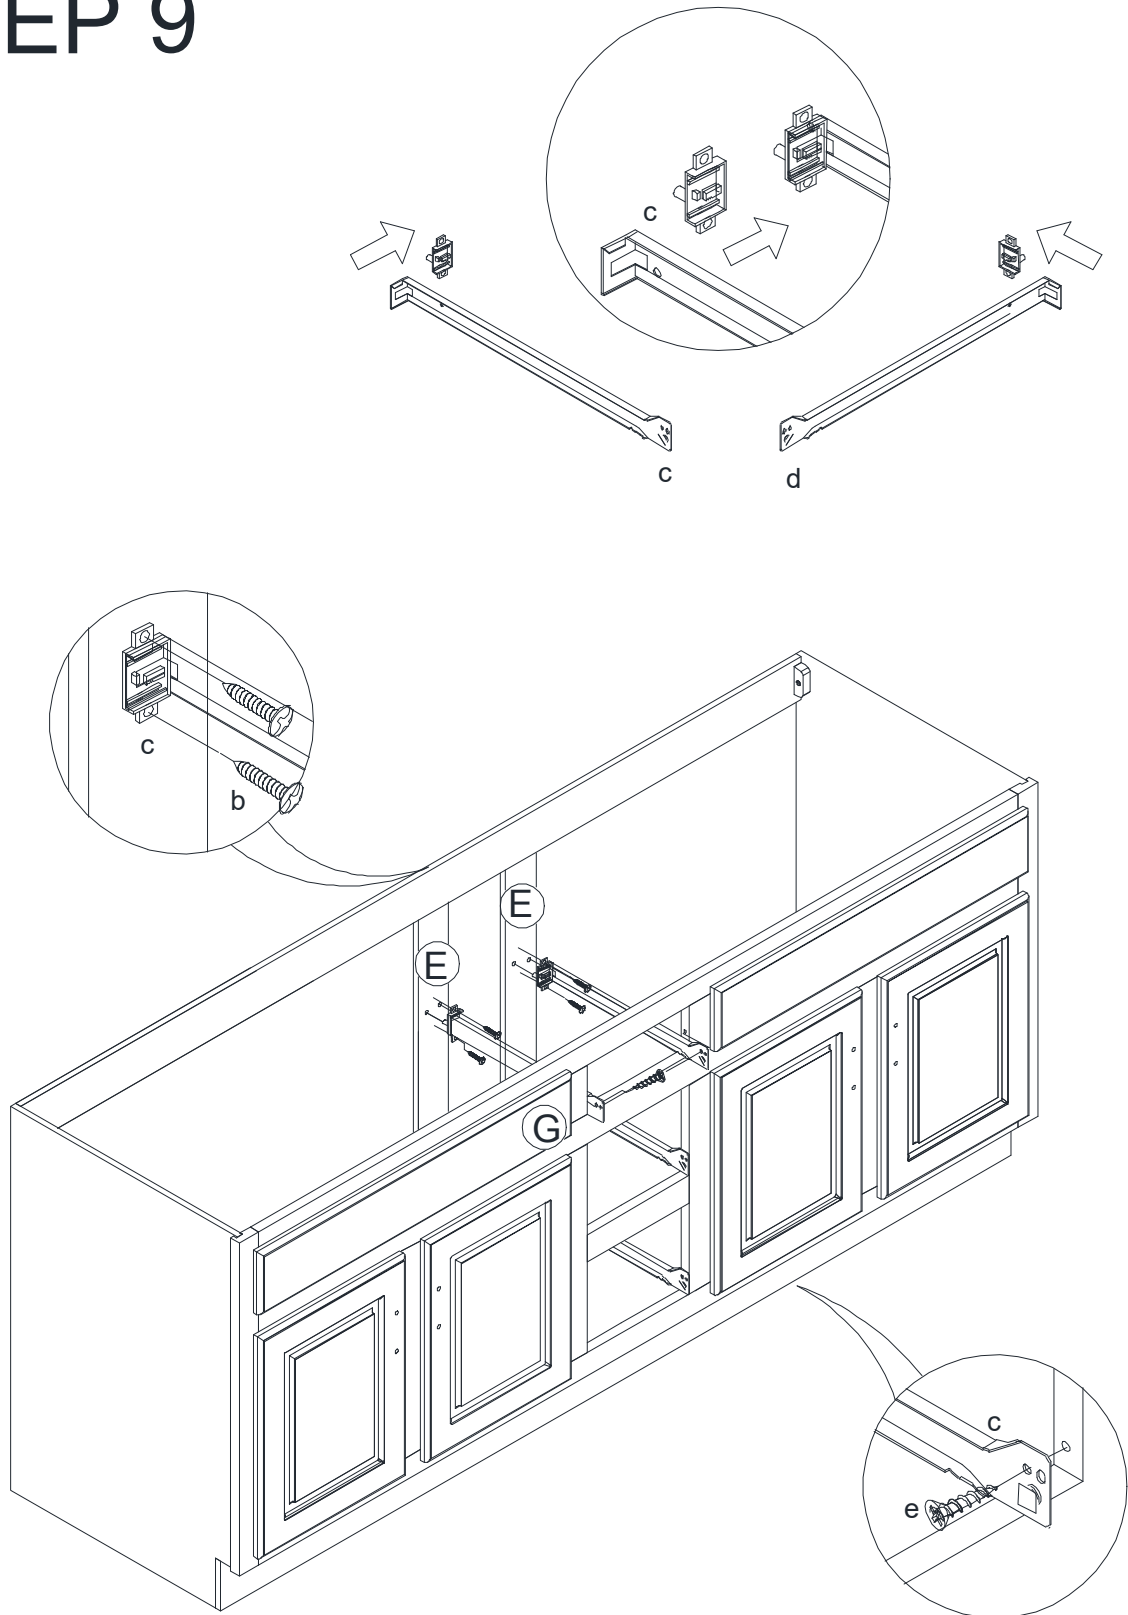

STEP 10

