



TORINO 3 LT/ 5 LT CHANDELIER ASSEMBLY/INSTALLATION INSTRUCTIONS

1. Before beginning the installation, carefully unpack and identify all parts, referring to FIGURE 1. Be sure the power to the installation point is OFF.
2. Slide FIXTURE LOOP down along wires and thread securely onto the nipple located on top of the FIXTURE ASSEMBLY (Carefully pulling excess wire through FIXTURE LOOP).
3. Locate the CROSSBAR and secure to JUNCTION BOX with (2) JUNCTION BOX SCREWS. Thread HEX NUT and VIBRATION PROOF WASHER onto top end of the NIPPLE. Thread the NIPPLE into the center of the CROSSBAR.
4. Locate the FIXTURE CHAIN and determine desired hanging height of fixture. Adjust chain by removing links if needed. Please note that depending on chain material thickness, you might be required to use chain pliers to spread links open (See Figure 2). Attach one end of chain to FIXTURE LOOP at the top of fixture. Unravel FIXTURE WIRES and GROUND WIRE and pass through FIXTURE CHAIN at least every 3 inches. Pass the fixture wires through the following mounting components: CANOPY LOCK RING, CEILING CANOPY, CANOPY CHAIN LOOP and VIBRATION PROOF WASHER.
5. **MAKE CONNECTIONS:** (We recommend 2 people for the remainder of installation) Position the FIXTURE under the JUNCTION BOX and pass the FIXTURE WIRES and GROUND WIRES through the center of the NIPPLE. Connect the SUPPLY GROUND WIRE to the FIXTURE GROUND WIRE with a wire nut and then secure them to the CROSSBAR with GREEN GROUND SCREW. Using wire Connectors, connect the SUPPLY WHITE WIRE(S) to the FIXTURE WHITE (or RIBBED) LEAD(S); Connect the SUPPLY BLACK (or RED) WIRE to the FIXTURE BLACK (or SMOOTH) LEAD(S). Wrap all connections with approved electrical tape.
6. With the connections properly made, carefully tuck all wires into JUNCTION BOX. Locate the CANOPY CHAIN LOOP and thread onto the end of the NIPPLE. Thread LOCK NUT B and VIBRATION PROOF WASHER down NIPPLE and tighten against CANOPY CHAIN LOOP. Pass the center hole in the CEILING CANOPY over the CANOPY CHAIN LOOP and secure to ceiling by threading CANOPY LOCK RING onto CANOPY CHAIN LOOP.
7. Locate the GLASS SHADES and pass over the SOCKETS, Thread SOCKET RINGS onto end of the SOCKETS and hand tighten until snug.
8. Install the bulb(s) (sold separately) referring to fixture labels for maximum wattage.
9. Restore electrical power to installation point. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN.**

*Customer Service:
1-800-558-8700*

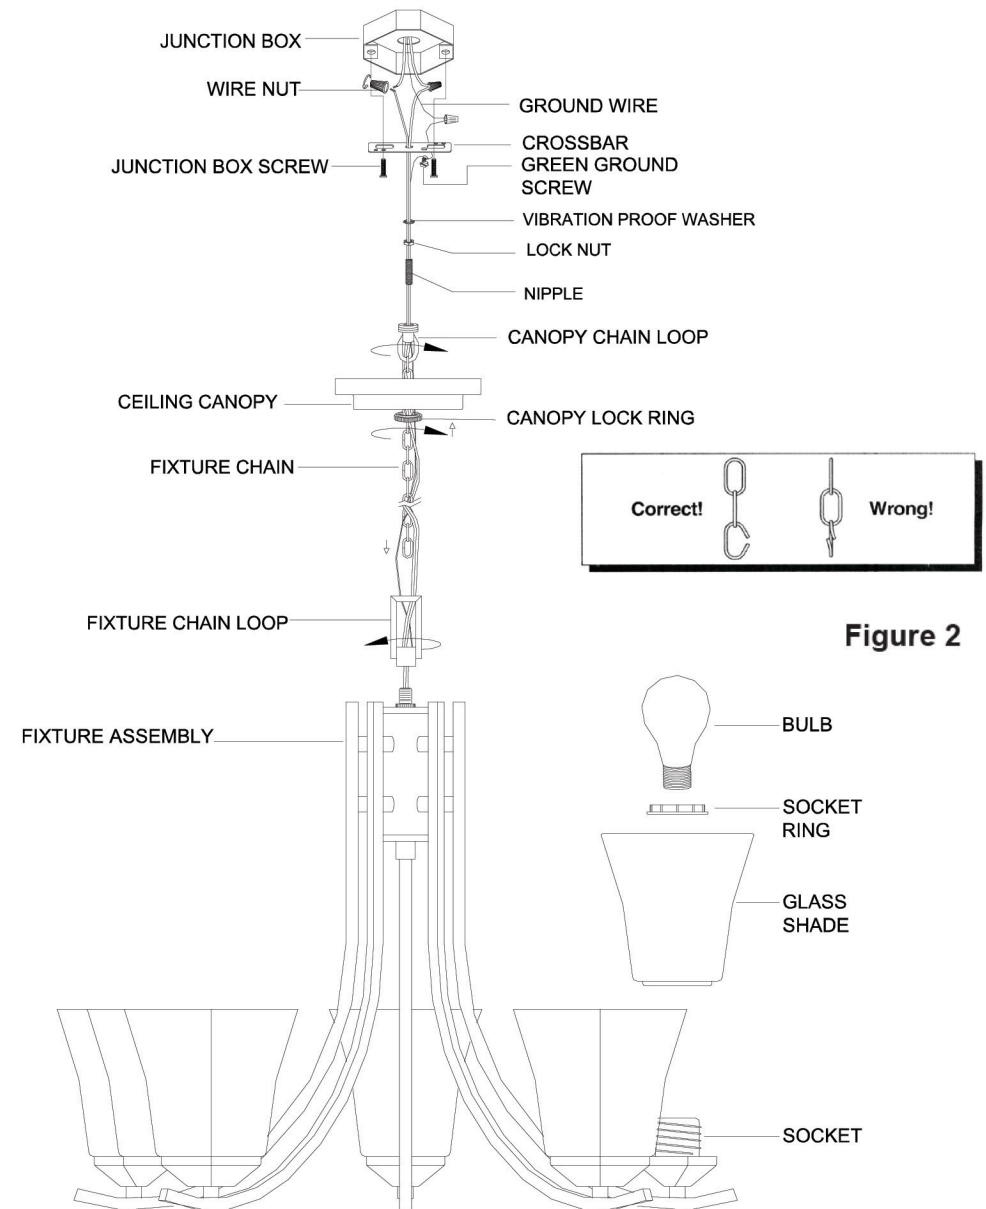


Figure 2

Figure 1.

Note: This illustration is based on #514836 577353(5Lights), the assembly/installation instructions for #514828 577361(3Lights) is the same as #514836 577353(5lights)