




www.todaysdesignhouse.com

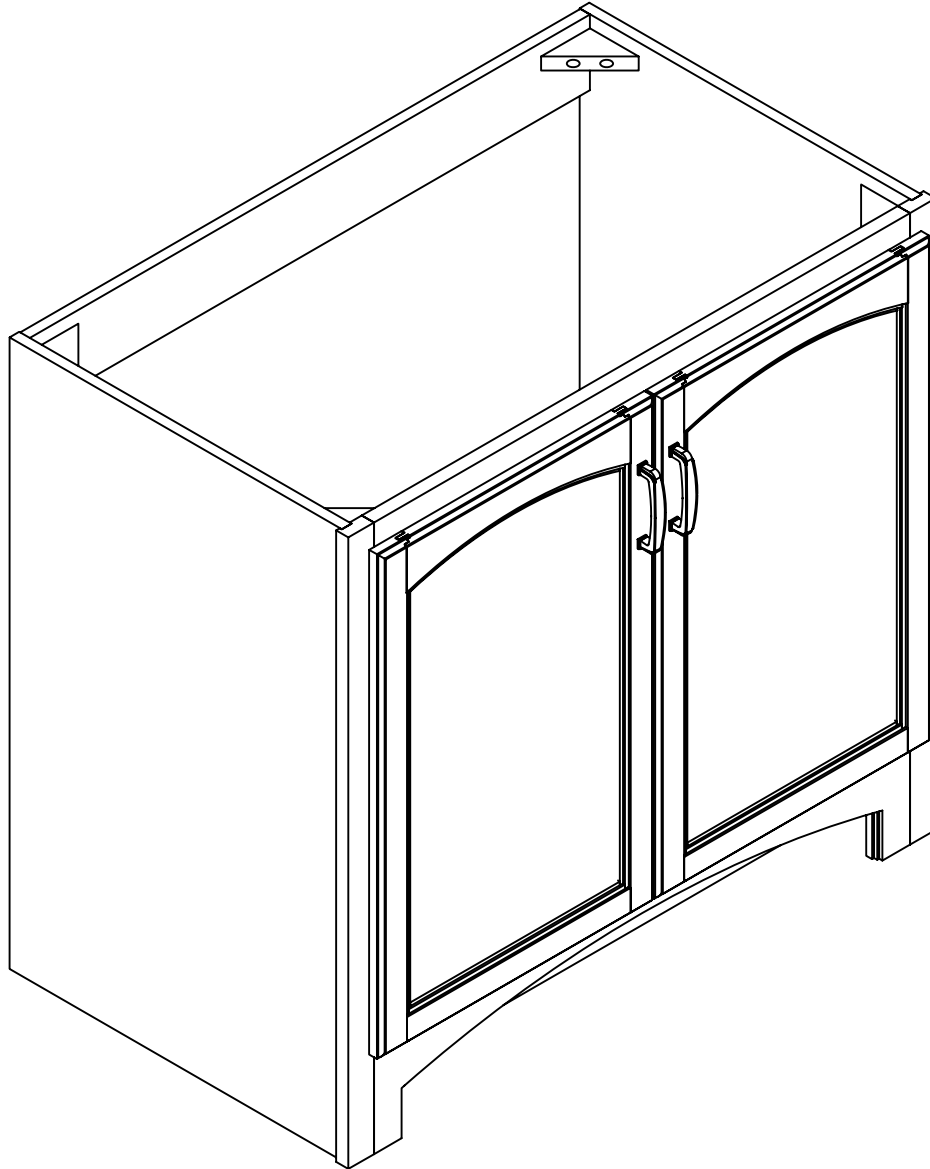


540807 • 540781 • 540799


ASSEMBLY INSTRUCTIONS

DHI Corp. • 5205 W. Donges Bay Rd. • Mequon, WI 53092 • 800.558.8700


PARTS LIST:

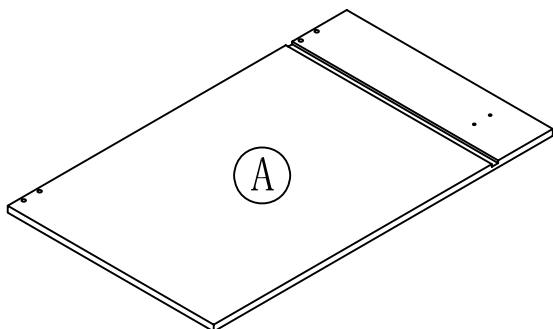


LEFT SIDE PANEL 1PC

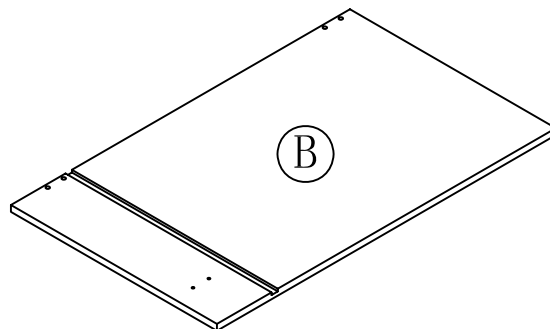


RIGHT SIDE PANEL 1PC

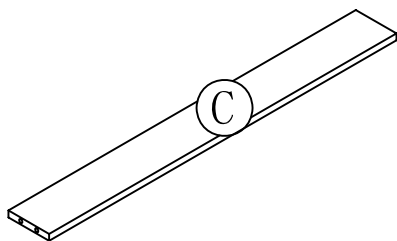


BACK CROSS BRACE 2PCS

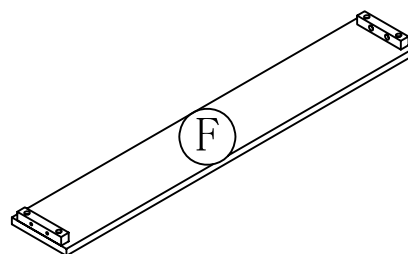


TOE KICK PANEL 1PC

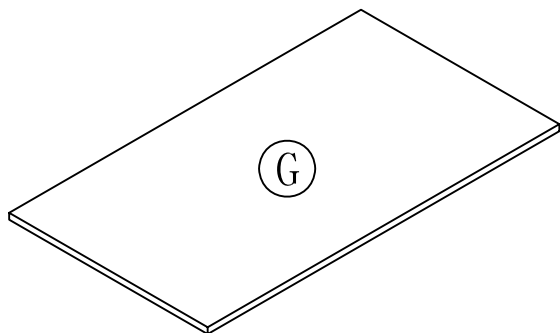

BOTTOM PANEL 1PC

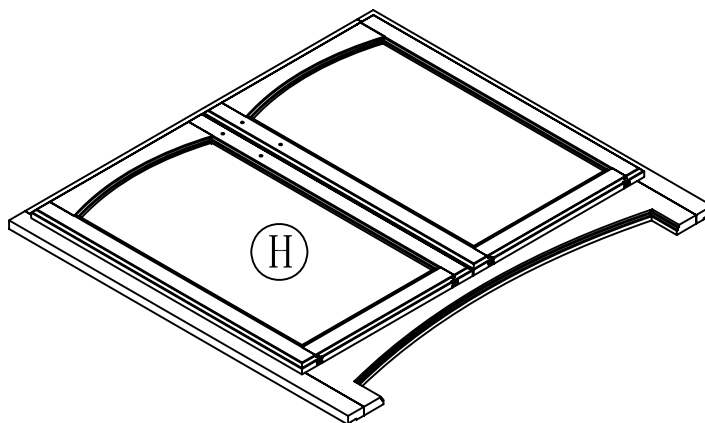

FRONT FRAME 1PC

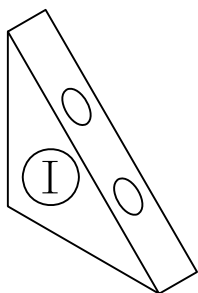

STRENGTH BLOCK 8PCS


HARDWARE LIST:




a. WOOD DOWEL 8PCS



d. 1" L FLAT HEAD
SCREW 20PCS

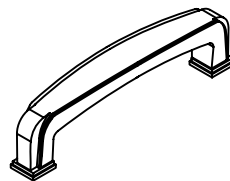

m. HANDLE 2PCS





n. HANDLE BOLT 4PCS





p. GLUE 1PC


STEP 1

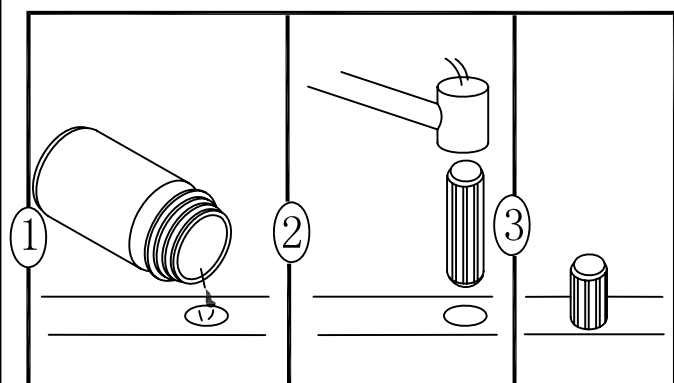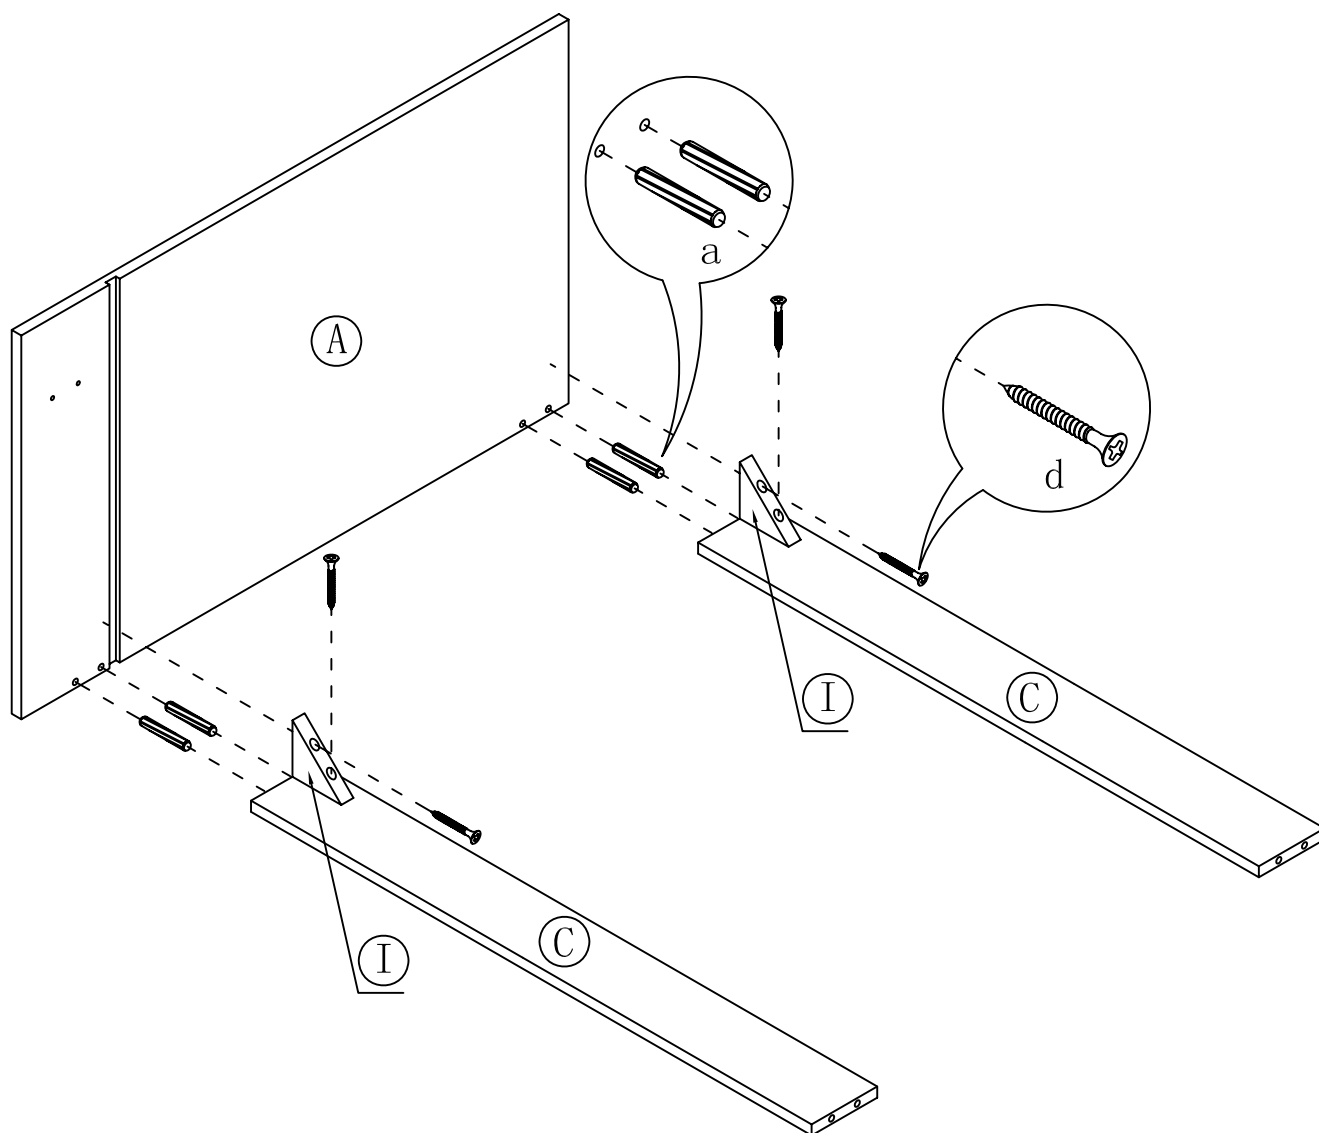


STEP 2

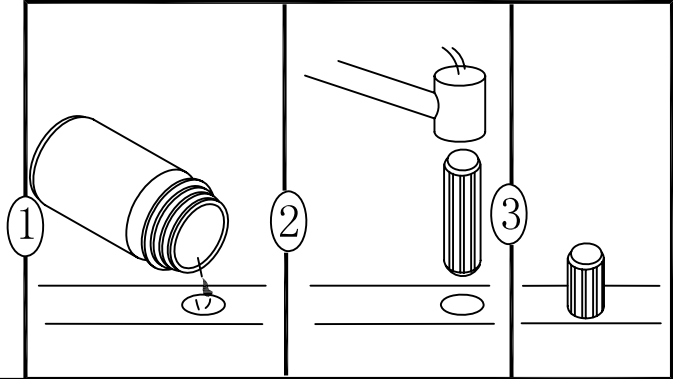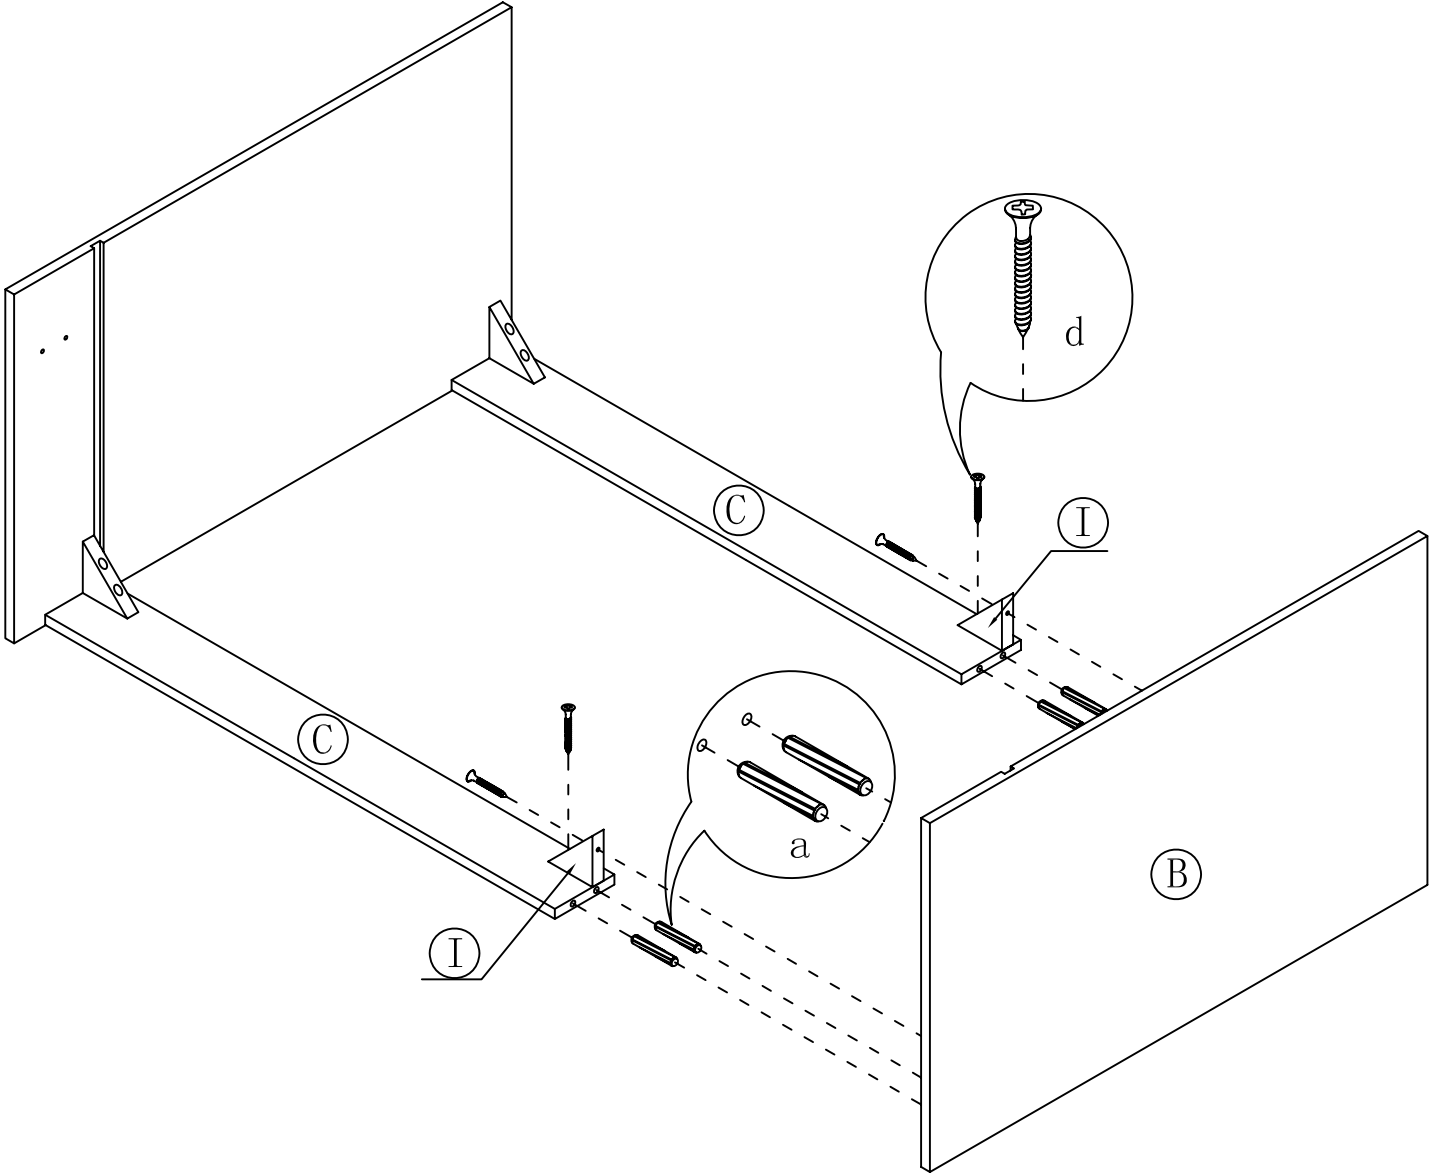


STEP 3

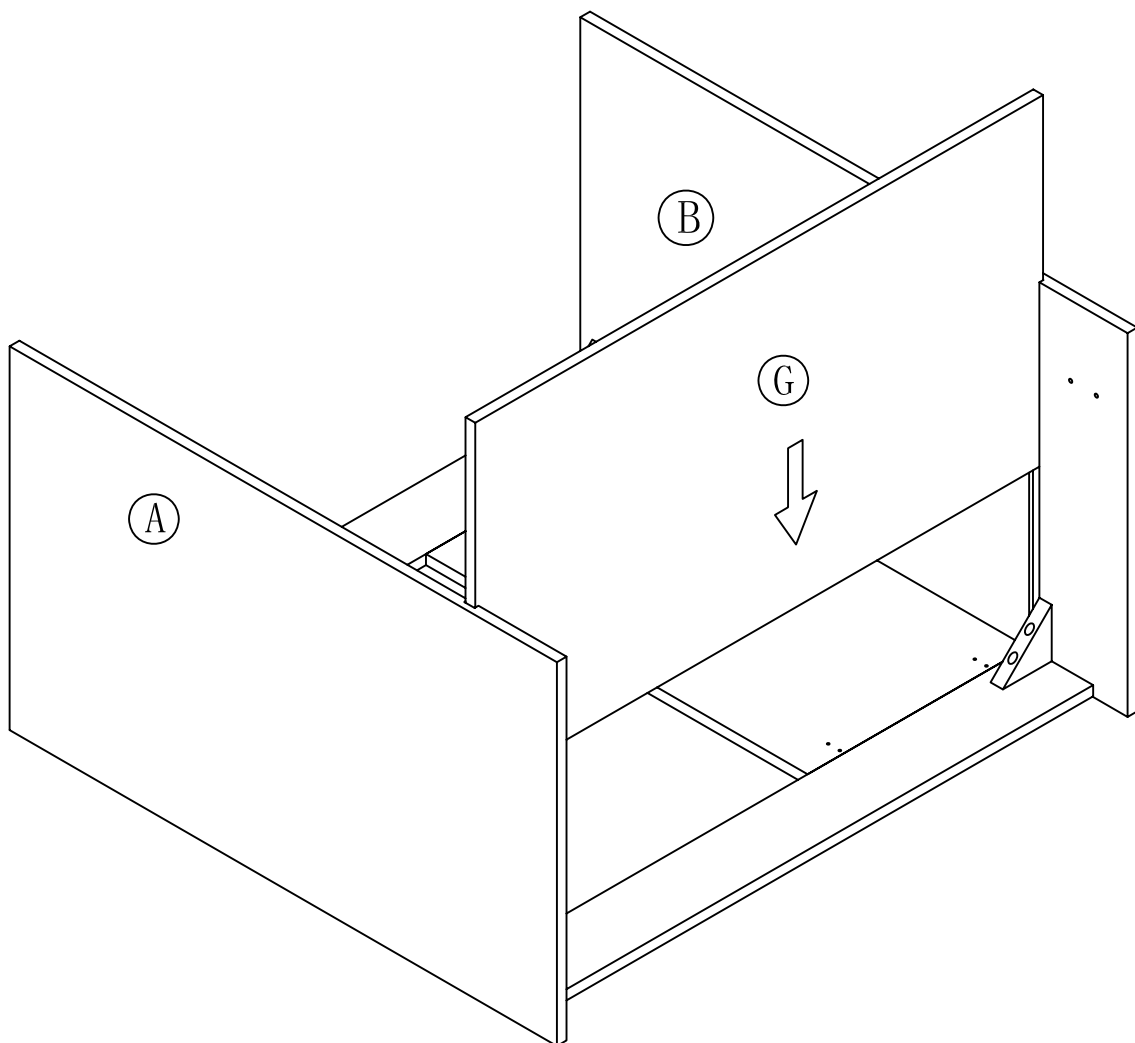

STEP 4

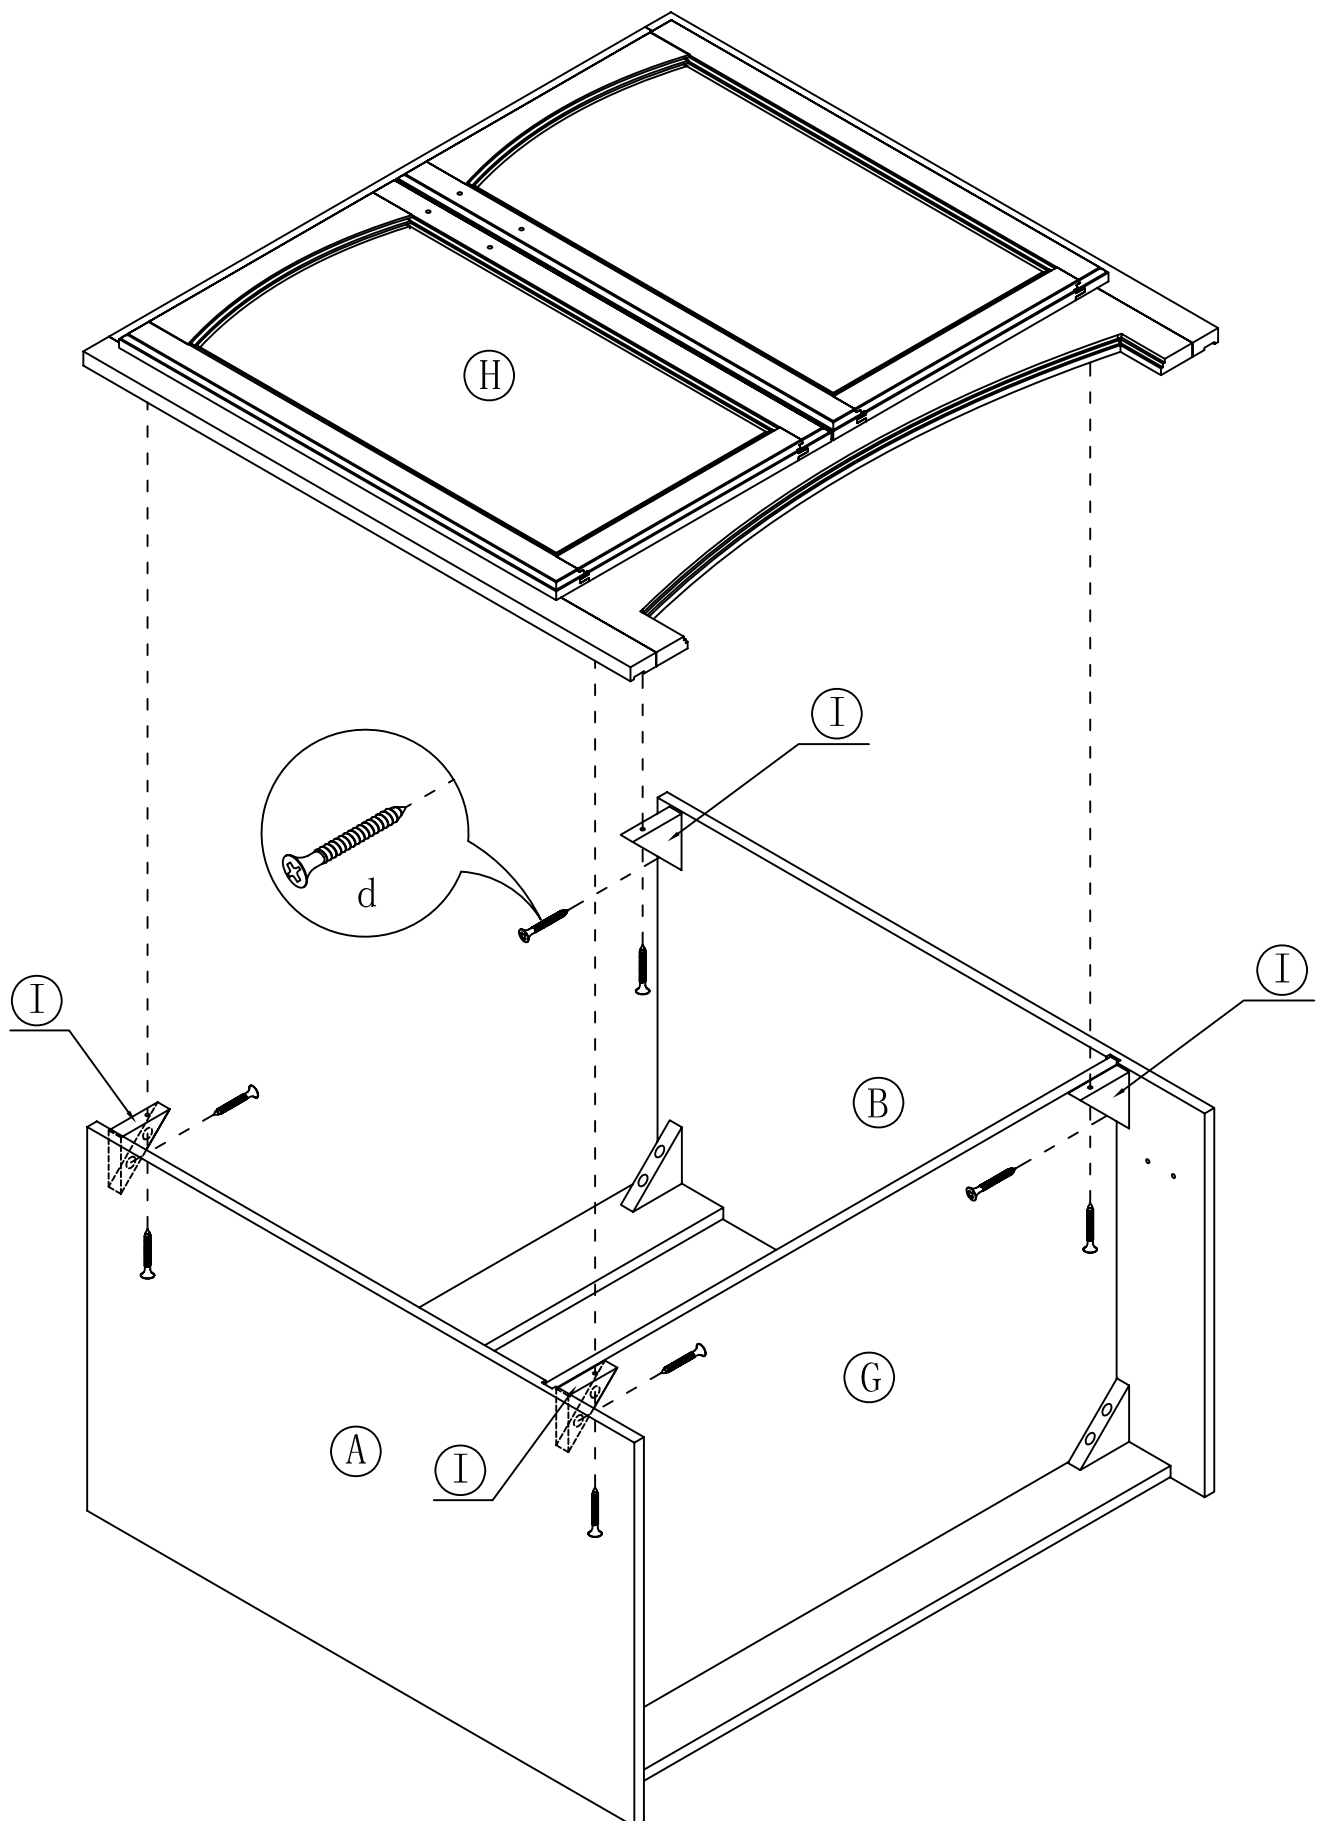

STEP 5

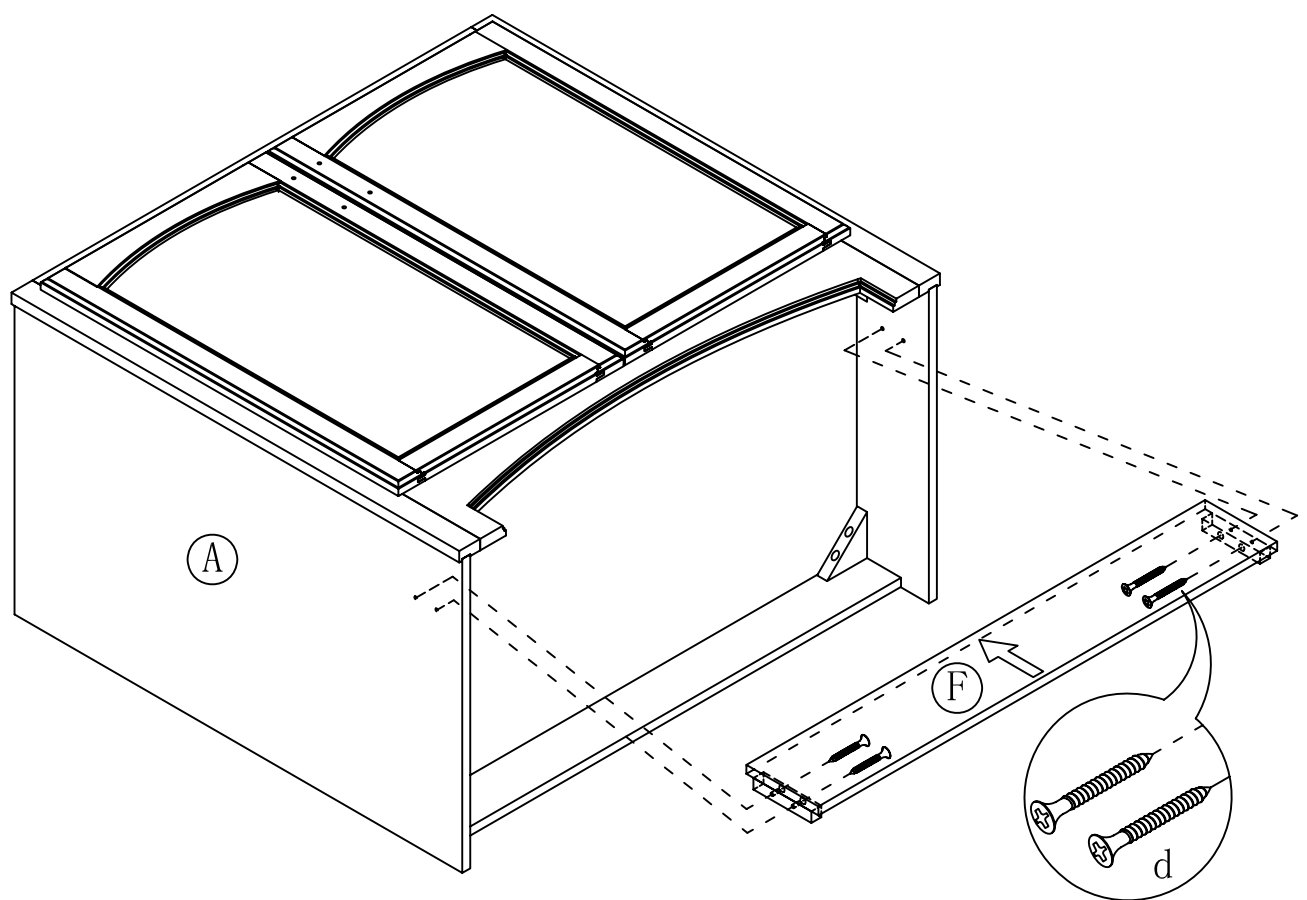

STEP 6

