



## Instructions for Installing the Design House Vanity Combo Collection

This instruction sheet is for the Euro Style, Solid Oak frame as well as the MDF Vanity Combo Units



**Vanity Top Installation** (for Models 541680, 541698, 541656, 541664, 541599, 541607, 541615, 545541, 545558, 545566)

*To achieve perfect alignment of the doors, it is essential that the vanity cabinet be properly leveled and installed in its desired location before any adjustments to the doors are made. Note: carpenter shims and levels may be used during the leveling process.* Attach vanity to wall with screws through the upper back brace (screws not included). Before mounting vanity top, set top on cabinet rim to check for an even level. Apply a bead of clear silicone in various spots along the top rim of the cabinet's unfinished edges and place sink firmly on to vanity. Allow caulk to dry 24 hours before using sink.

### Alignment of Cabinet Doors

Open one of the cabinet doors and locate the nickel plated steel hinges installed inside. First, remove the cover plate to expose the top screws by using a screwdriver (see Fig. A). There are two screws: one is the adjustable screw for the door-to-door alignment. It is the deep threaded screw closest to the hinge cup (see Fig. B). By unscrewing or loosening this screw, it allows the doors to move from side to side (left to right, right to left). When aligning the doors, it must be made to each door, adjusting the top and bottom hinges. Retighten the screws when doors are aligned. The second screw is for the door- to-cabinet alignment. A regular screwdriver allows for more precision than a power screwdriver.

Please note location of screw to make door-to-door alignment



Fig. A

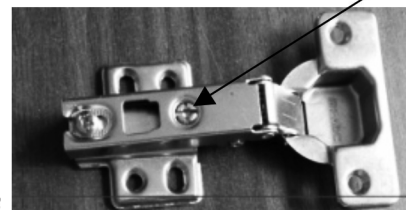


Fig. B