

# Duravit Drains

---

**Mounting instructions****Instrucciones de montaje****Notice de montage**

Duravit Brass Cable Drain with Waste and Overflow

Desagüe y rebosadero de Abierto PVC Duravit

Bonde et trop-plein en Open PVC Duravit

**For the following models:**  
**Para los siguientes modelos:**  
**Pour les modèles suivants :**

792824xx0000090

792825xx0000090

792826xx0000090

792827xx0000090

**Color Codes:**  
**Códigos de color:**  
**Codes couleur:**

00 White

04 Brushed Bronze

10 Chrome


37 Brushed Gold

46 Matte Black

70 Brushed Nickel







# Roughing-In Dimensions


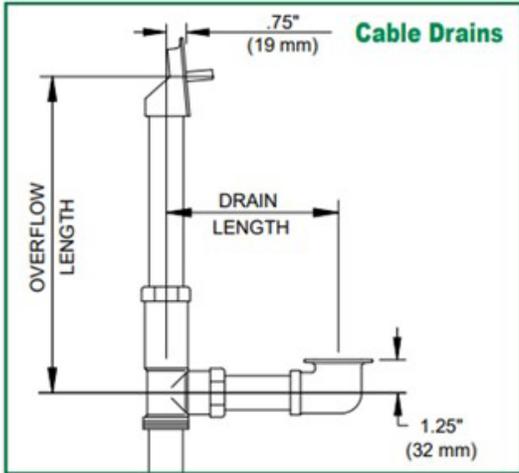


Models 792824xx0000090, 792825xx0000090:  
Overflow length plus drain length cannot exceed 28 inches.  
STANDARD:      Overflow Length = 20 inches  
                         Drain Length = 8 inches


Models 792826xx0000090, 792827xx0000090  
Overflow length plus drain length cannot exceed 38 inches.  
STANDARD:      Overflow Length = 28 inches  
                         Drain Length = 10 inches

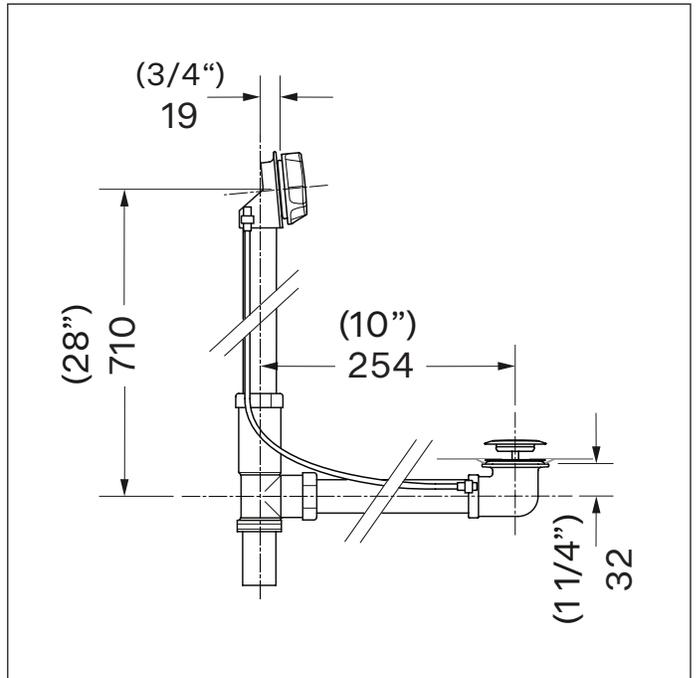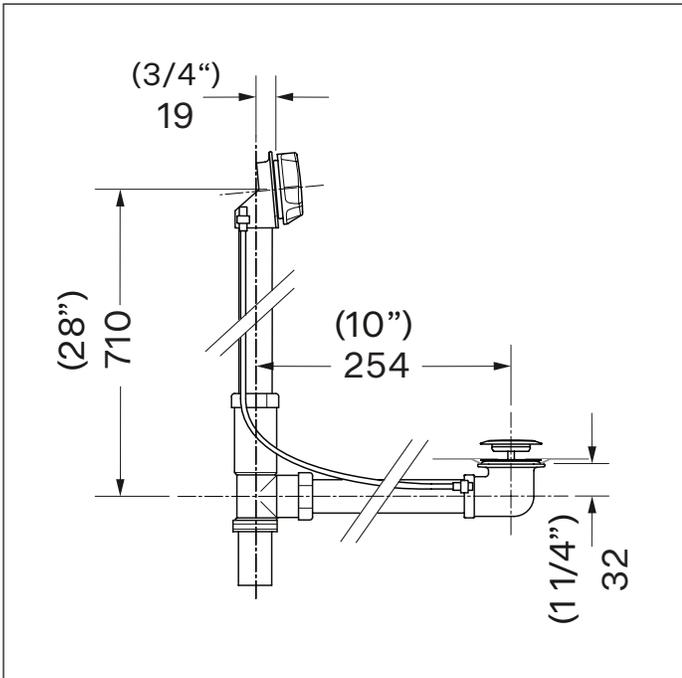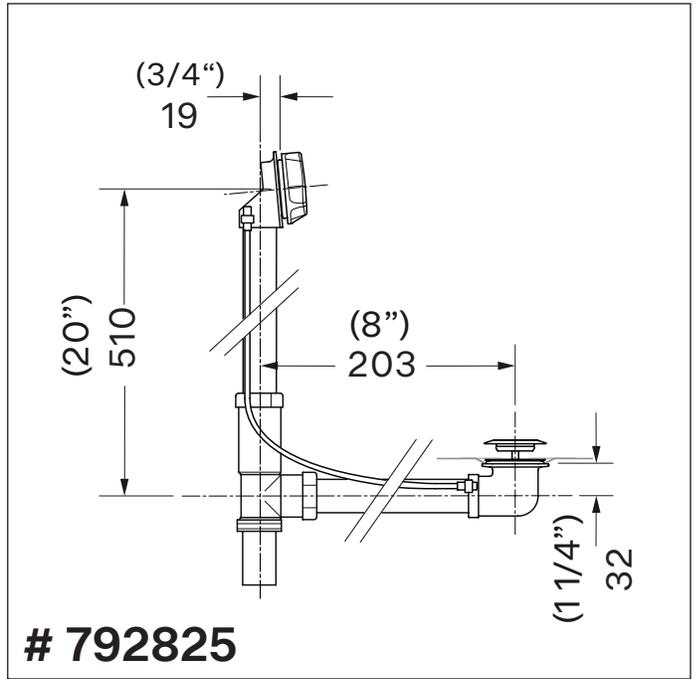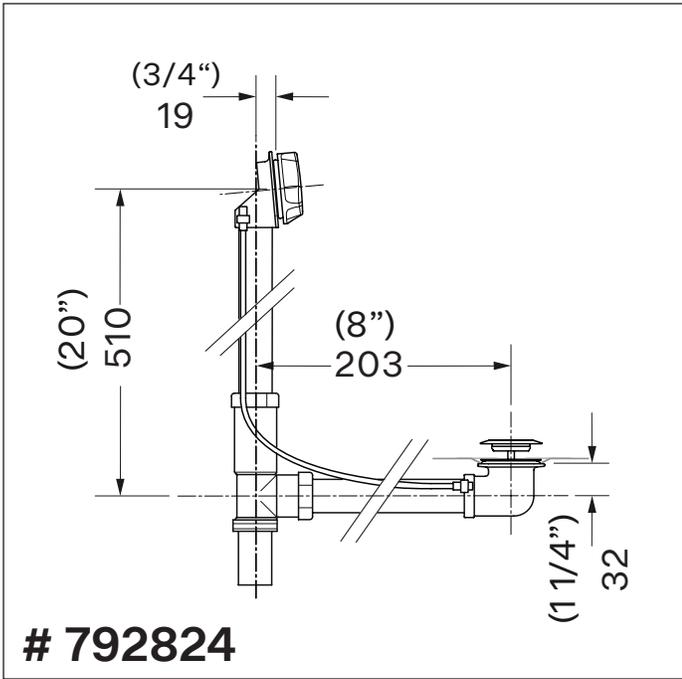

\* Products may differ in appearance and are for illustration only.

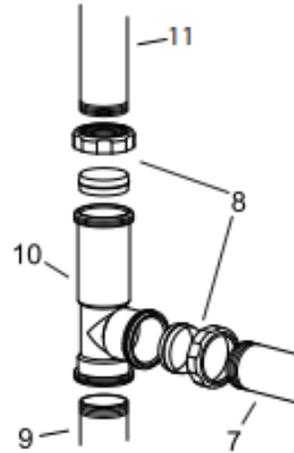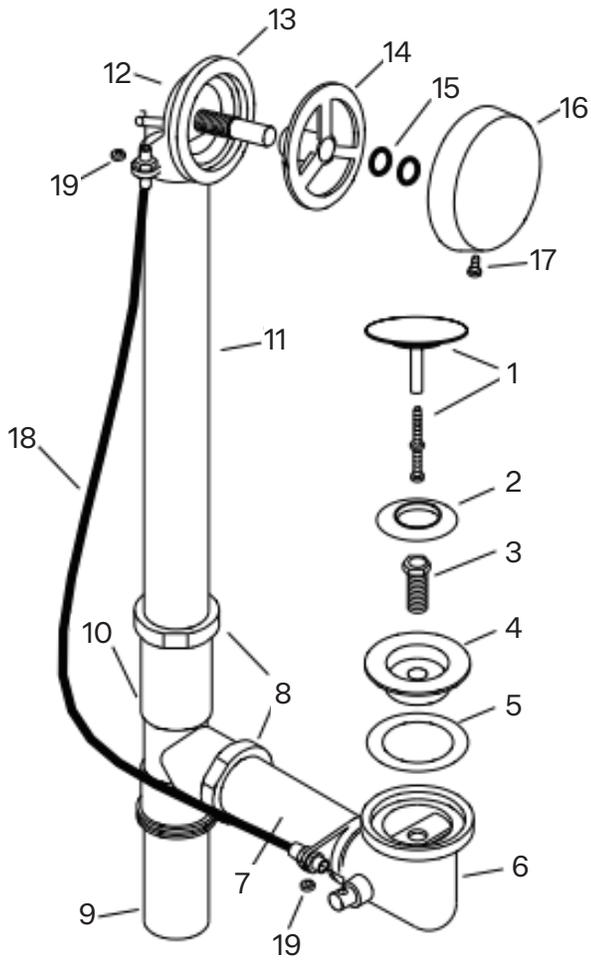


- 1. Attach Tee:** Use Item 8 (Brass Slip Nuts and Slip Joint Polywashers) to tighten Item 10 (Brass Tee) to Items 7 and 11 (Brass Piping).

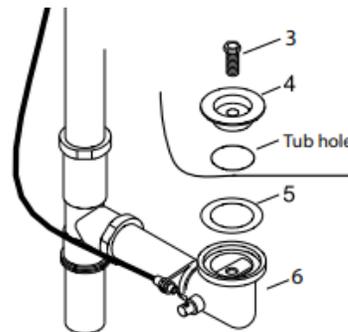


**2. Drain Ell Assembly:**

- Remove Item 3 (Cable Drain Ell Locking Pin) by unscrewing.
- Place Item 6 (Drain Ell) with Item 5 (Drain Ell Washer) under tub hole.
- Place Item 4 (Cable Strainer Body) into the tub hole.
- Screw Item 3 (Cable Drain Ell Locking Pin) into Drain Ell.

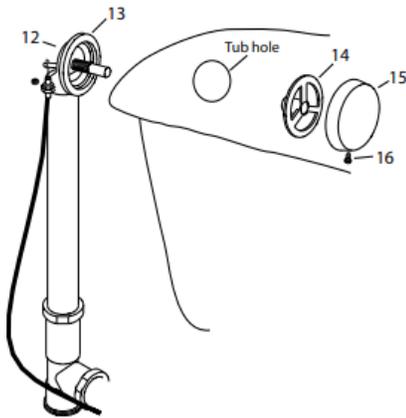


### 3. Overflow Assembly:

- Remove Item 15 (Overflow Plate) by loosening Item 16 (Overflow Plate Locking Screw) with a Phillips screwdriver.
- Unscrew Item 14 (Cable Overflow Mounting Bracket) by rotating counterclockwise.
- Place overflow through the tub hole.
- Re-attach Item 14 (Cable Overflow Mounting Bracket) by rotating clockwise.
- Install the two o-rings (see instructions below).
  - Remove overflow plate by inserting Phillips screwdriver into hole in overflow plate and loosening Overflow Plate Mounting Screw.
  - Push both o-rings onto Center Rotating Pin.
  - Using small screwdriver, push both o-rings into gap between Center Rotating Pin and the Wheel handle
  - Replace Overflow Plate and tighten Overflow Plate Mounting Screw
- Re-attach Item 15 (Overflow Plate) and secure with Item 16 (Overflow Plate Locking Screw).
- Leave at least a 1/8" gap between Item 14 (Cable Overflow Mounting Bracket) and Item 15 (Overflow Plate).

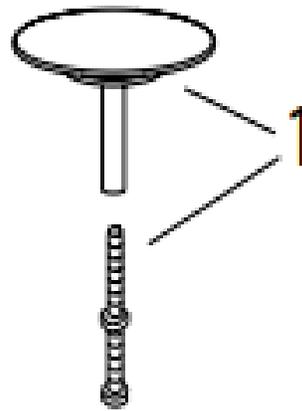

### 4. Pop-Up Adjustment

- Pop-up should open and close sufficiently; if not, adjust Item 1 (Cable Stopper Adjusting Nut) as needed.
- If the pop-up closes automatically, make sure both provided o-rings were installed as shown below.

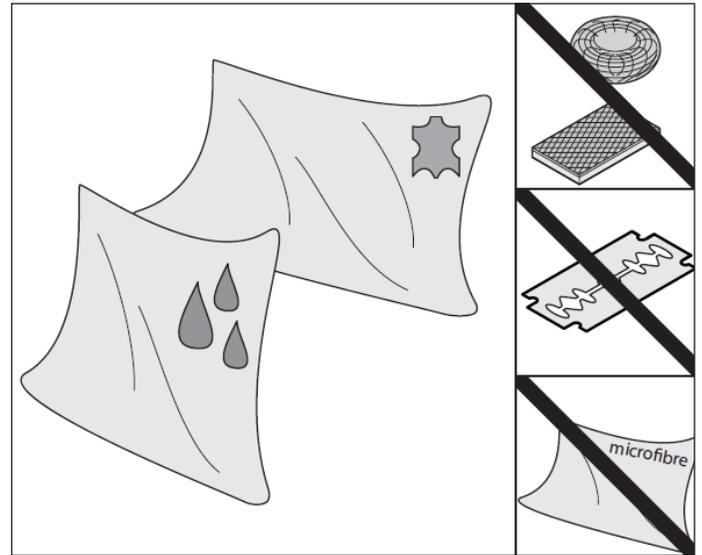

**Chemical/Cleaners to avoid:**

- Abrasives and polishes, including bleach based cleaners
- Products containing hydrofluoric
- Hydrochloric and/or phosphoric acids
- Anything with caustic agents
- Anything with ammonia, bleach or acid

**Chemical/Cleaners recommended:**

Mild cleaner (ph7) based on citric acid.

**Cleaning tools to avoid:**

- Abrasive cleaning pads
- Scraping tools
- Abrasive cleaning tools

**Cleaning tools recommended:**

- Moistened soft cloth
- Leather cloth

**NOTICE**

**Direct contact with cleaner and cleaner mist can cause damage to the material and finish.**

We recommend using a damp cloth to clean, followed by rinsing with water and drying with a clean cloth.



**Duravit USA**  
2735 N. Berkeley Rd. Ste. 100  
Duluth, GA 30096  
Phone +49 7833 70 0  
Fax +49 7833 70 289  
info@duravit.com  
www.duravit.us

REF: Cable-Inst. Rev. 6/09/24  
Watco 528, 538



We reserve the right to make technical improvements and enhance the appearance of the products shown.