

Collection: Mirin

Installation manual for:


LD6005D16 L16"W16"H18" L1

Installation instructions:

- 1. Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
- 2. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
- 3. "E" wire from the fixture is attaced to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
- 4. Secure mounting bracket to the junction box.
- 5.Insert screws (P2) in side of top unit the mounting bracket.
- 6.Put the canopy(P3) on the nipple(P4) and connect the canopy lock(P7), then use the canopy ring(P6) to screw tighten.
- 7. Put the shade(P17) to the lamp body and use the washer(P13) to screw tighten.
- 8. Hang the lamp body to the chain(P8) and connect the canopy lock(P7).
- 9.Install E26 light source, no include bulb.

The end!

"L" = Hot wire

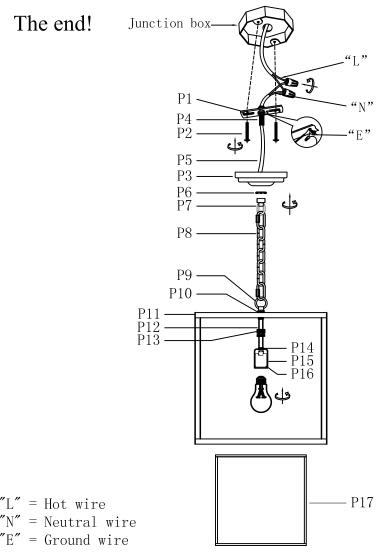

PARTS LIST

part	picture	Description	Qty	Check list
P1	— • —	L4" Mounting bracket	1	
P2		5/32-32 Screw	2	
Р3		D5.4" Canopy plat	1	
P4		Nipple	1	
Р5		Power Cord 7.3', 18AWG, SPT-1 Gold/Black	1	
Р6		Canopy ring	1	
P7	₽	Canopy lock	1	
P8		L5'CHAINO4P Plain Design	1	
P9	Q	D1.5" Loop	1	
P10		Washer	2	
P11		W16"*H16" Main lamp holder	1	
P12		L1. 57" Rod	2	
P13		Washer	1	
P14		Washer	2	
P15		Socket cover	1	
P16		E26 Socket	1	
P17		D11"*H11" Shade	1	