


Collection: Kenna Installation manual for:

LD2239BK D17. 3"H10. 8"L3

Installation instructions:

- 1. Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
- 2. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
- 3. "E" wire from the fixture is attaced to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
- 4. Secure mounting bracket to the junction box.
- 5.Insert screws(P2) in side of top unit the mounting bracket.
- 6.Fix the Mounting bracket(P1) to the Canopy and tighten by the nut(P5).
- 7.Install the bulbs into the lamp fixture.(Bulb not included).

The end!

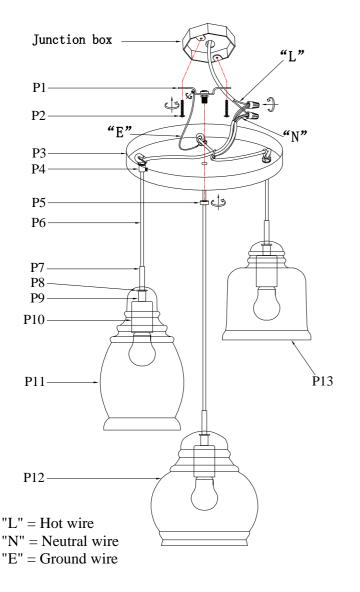

PARTS LIST

Degemention Oty Cheek ligt

P1 L4" Mounting bracket 1 P2 5/32-32 Screw 2 P3 Ø11.8" Metal Canopy 1 P4 Wire lock 3 P5 M10 Flat nut 1 P6 Power Cord 79" 18# Black 3 P7 L1.9" Metal Tube 3 P8 Silicone pad 3 P9 Wire lock 3 P10 E26 Metal Cup 3 P11 Ø6.3" Lampshade 1 P12 Ø8.1" Lampshade 1 P13 Ø6.7" Lampshade 1	part	picture	Description	Qty	Check list
P3	P1			1	
P3	P2	фининии	5/32-32 Screw	2	
P5	Р3			1	
P6 Power Cord 79" 18# Black 3 P7 L1.9" Metal Tube 3 P8 Silicone pad 3 P9 Wire lock 3 P10 E26 Metal Cup 3 P11 Ø6.3" Lampshade 1 P12 Ø8.1" Lampshade 1	P4		Wire lock	3	
P6	P5		M10 Flat nut	1	
P8 Silicone pad 3 P9 Wire lock 3 P10 E26 Metal Cup 3 P11 Ø6.3" Lampshade 1 P12 Ø8.1" Lampshade 1	P6	\(\)		3	
P9	P7		L1.9" Metal Tube	3	
P10	P8	0	Silicone pad	3	
P11	P9	C	Wire lock	3	
P12 ø8.1" Lampshade 1	P10		E26 Metal Cup	3	
	P11		ø6.3″ Lampshade	1	
P13 ø6.7" Lampshade 1	P12		ø8.1″ Lampshade	1	
	P13		ø6.7″ Lampshade	1	