
## **UVING** ISTRICT

Collection:Tevin Installation manual for: LD7321W19BRA L18.6"x H9.8"x E7.7" L2

## Installation instructions:

- 1. Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
- 2. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
- 3. "E" wire from the fixture is attaced to the mounting bracket and an additional
- "E" wire from the mounting bracket must be secured to the junction box.
- 4. Secure mounting bracket to the junction box.
- 5.Install the lamp body to the mounting bracket by Nut(P3).
- 6.Locking the glass shade(P11) on the lamp body by socket rings(P8).
- 7.Install E26 light source.(Bulbs not supplied) .

The end!

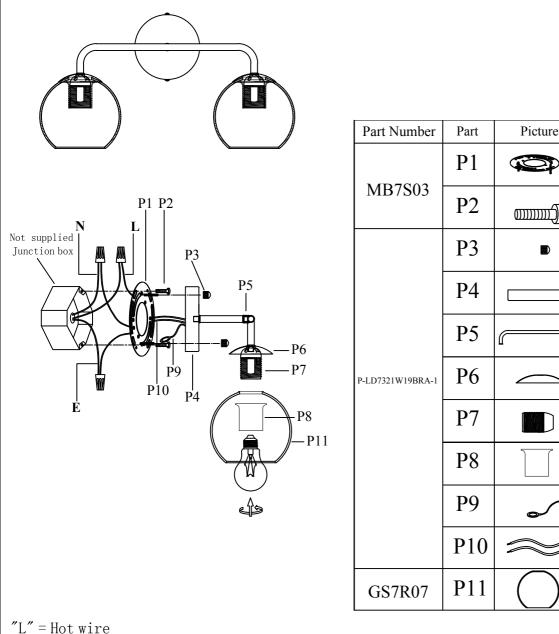

Part	Picture	Description	Qty
P1		Mounting bracket Φ4"*H1.2"	1
P2		Mounting bracket screw	2
Р3	D	Nut	2
P4		Backplate (Ø4.7"*H1")	1
P5		Lamp arm(L13.2"*H2.2")	1
P6	$\bigcirc$	Dish (Ф3.1"*H0.6")	2
P7		E26 holder	2
P8		Socket rings	2
P9		UL18#Ground wire,L9.8"	1
P10	$\approx$	UL18#,L8"	1
P11	$\bigcirc$	Glass shade (Φ5.9"*H5.2")	2
-	P1 P2 P3 P4 P5 P6 P7 P8 P9 P10	P1 Image: Additional symbols in the	P1 Mounting bracket Φ4"*H1.2"   P2 Mounting bracket screw   P3 Mounting bracket screw   P3 Nut   P4 Sackplate (Ø4.7"*H1")   P5 Dish (Ø4.7"*H1")   P6 Dish (Ø3.1"*H0.6")   P7 Socket rings   P8 Socket rings   P9 Lull8#Ground wire,L9.8"   P10 Ull18#,L8"   P11 Glass shade

Otv

Description

"L" = Hot wire "N" = Neutral wire "E" = Ground wire