





Collection: York
Installation manual for:

OD305W16BK W10" H15.5" E11" L1

Installation instructions:

1. Install E26 light source. (Bulbs not supplied)
2. Put glass (P20) into body (P14) and stick sponge on clips (P13). Finally curve clips to fix glass.
3. Connect cover (P9) with body (P14) and put rubber ring (P5) and screw (P4) to fixable
4. Secure mounting bracket to the junction box.
5. Black wire from ceiling (junction box) attaches to "L" wire from the fixture
6. White wire from ceiling (junction box) attaches to "N" wire from the fixture
7. "E" wire from the ceiling attaches to "E" wire from the fixture.
8. Install the lamp body to the mounting bracket by rubber ring (P11) and screw (P12).

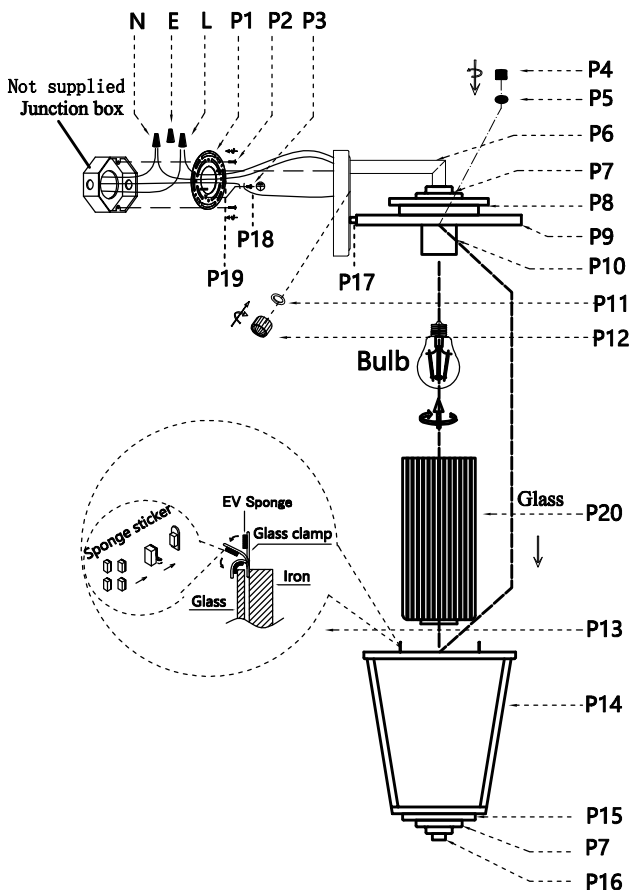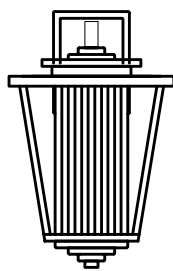

Part Number	Part	Picture	Description	Qty	
MB12W01	P1		Mounting bracket Ø3.94	1	
	P2		Mounting bracket screw M4	2	
	P3		Screw M4	1	
P-OD305W16BK-1	P4		Screw cap	2	
	P5		Rubber ring	2	
	P6		115*170*160MM Arm	1	
	P7		70*70*18MM Box	2	
	P8		150*150*25MM Box	1	
	P9		250*250*15MM Box	1	
	P10		E26 Holder	1	
	P11		Rubber ring	2	
	P12		Screw cap	2	
	P13		EV Sponge Sponge sticker	4	
	P14		230*230*245MM Body	1	
	P15		110*110*10MM Box	1	
	P16		Ø20*12MM Column parts	1	
	P17		Φ8*10MM Column part	1	
	P18		UL18#Ground wire, L9.8"	1	
	P19		UL18#, L12" Black+White	1	
	GS12L4	P20		110*110*240MM Glass	1