


Collection:Memphis

Installation manual for:

OD310H13BK L6" W6" H13" L1

Installation instructions:

- 1.Install E26 light source.(Bulbs not supplied)
- 2.Put glass(P16)into body(P14)
- 3.stick sponge on clips(P15).Finally curve clips to fix glass
- 4.Use hook(P10)connect(P11).Twist off screw and mat from the hanging ring(P8) and across the middle hole of canopy(P5) and use screw and mat lock in again.
- 5.Use explosion screw (P1) to ceiling
- 6.Use screw(P4) fixable mounting bracket(P3)
- 7.Black wire from ceiling(junction box)attaches to "L"wire from the fixture.
- 8.White wire from ceiling(junction box) attaches to "N"wire from the fixture.
- 9."E" wire from the ceiling attaches to "E"wire from the fixture.
- 10.Screw (P2) through to canopy hole(P5) and then put rubber ring(P6) and twist screw cap(P7) to fixable

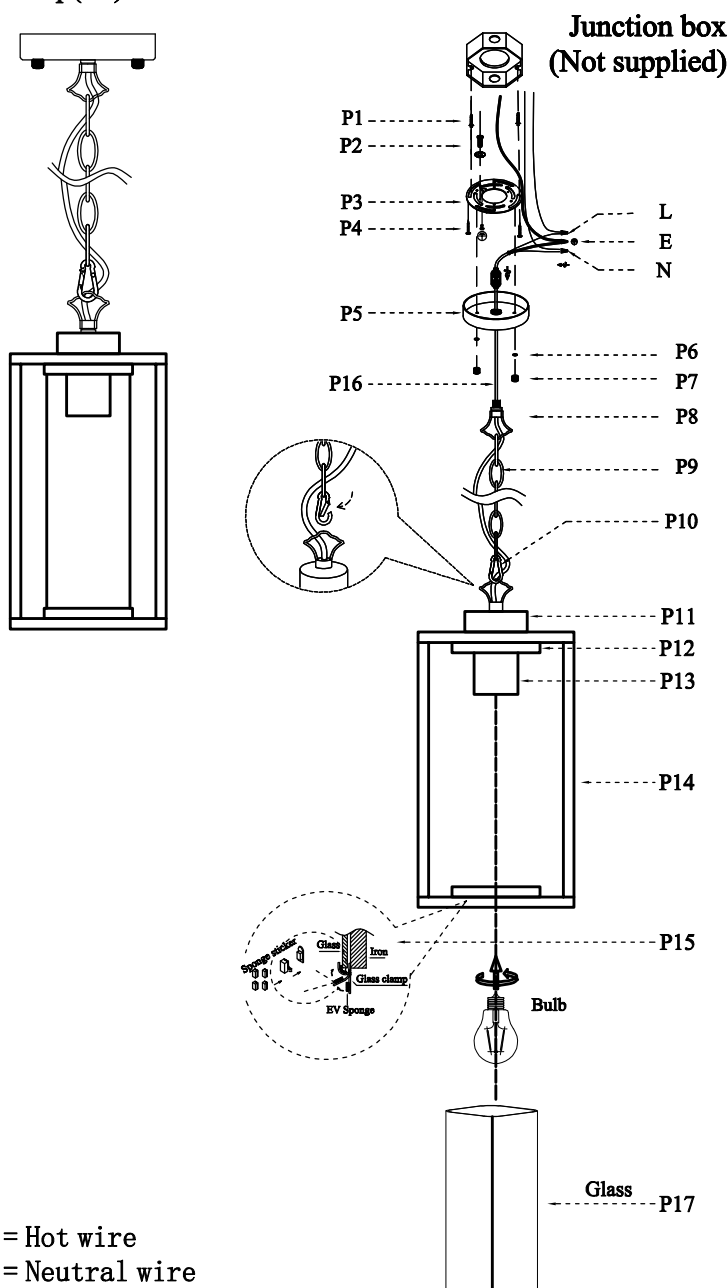

Part Number	Part	Picture	Description	Qty
CP12H01BK	P1		Explosion screw	2
	P2		Screws M4	2
	P3		Mounting bracket Ø3.94	1
	P4		Screws M4	2
	P5		Canopy (Ø4.7"×0.78")	1
	P6		Rubber ring	2
	P7		Screw cap	2
Chain04PBK	P8		Hanging rings L1.57"×W0.59"×H1.57"	1
	P9		Chain (L59")	1
	P10		Hook (L1.57"×W0.78"×H0.15")	1
P-OD310H13BK-1	P11		60*60*20MM Box	1
	P12		85*85*10MM Box	1
	P13		E26 Holder	1
	P14		150*150*265MM Body	1
	P15		EV Sponge Sponge sticker	4
Cord-59-18#-BK	P16		UL18#, L79" Black	1
GS12R1	P17		80*80*260MM GLASS	1

"L" = Hot wire

"N" = Neutral wire

"E" = Ground wire