




Collection:Collins

Installation manual for:

OD316P19BK W7" L7" H18.5" L1

**Installation instructions:**

- 1.Install E26 light source.(Bulbs not supplied)
- 2.Put glass(P17) into body(P10) and stick sponge mat on clips(P9).Finally curve clips to fixed glass.
- 3.Connect cover(P8)with body(P10) and use rubber ring(P4) with screw caps(P3) to fixable.
- 4.Black wire from ceiling(junction box) attaches to "L"wire from the fixture
- 5.White wire from ceiling(junction box) attaches to "N"wire from the fixture
- 6."E" wire from the ceiling attaches to "E" wire from the fixture.
- 7.Use explosion screw (P1)to fix base(P2) into land
- 8.Put lamp pole (P13) into base (P2)and use screw (P14) to lock in

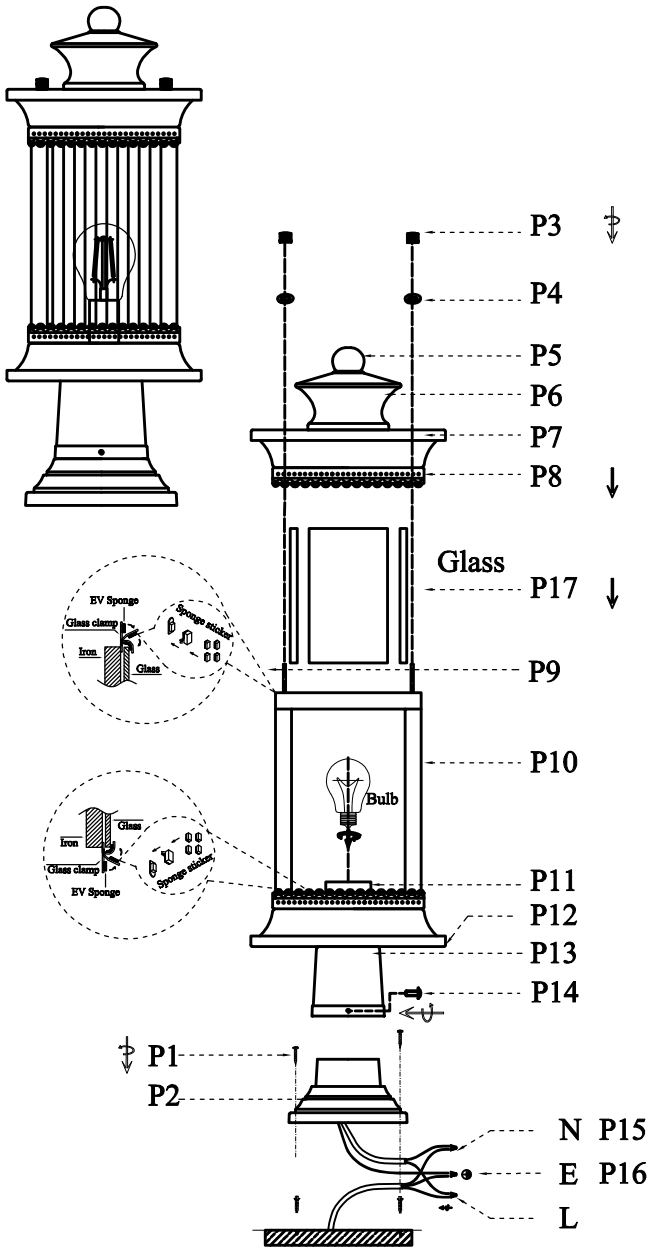

Part Number	Part	Picture	Description	Qty	
LB12P01	P1	↑ ↓	Explosion screw M4	4	
	P2		5.5"*2.95" Lamp base	1	
P-OD316P19BK-1	P3	■	Screw cap	2	
	P4	●	Rubber ring	2	
	P5	○	∅20MM Dome	1	
	P6		∅98*54MM Cap-A	1	
	P7	—	185*185*10MM Box-A	1	
	P8		180*180*53MM Cover	1	
	P9		EV Sponge Sponge sticker	16	
	P10		180*180*235MM Body	1	
	P11		E26 Holder	1	
	P12	—	185*185*10MM Box-B	1	
	P13		lamp pole (3.38"*3.22")	1	
	P14	⇒	Screws M4	3	
	P15		UL18#,L11.8"Black+White	1	
	P16		UL18#Ground wire,L9.8"	1	
	GP12L2	P17		125*195MM Glass	4

"L" = Hot wire  
"N" = Neutral wire  
"E" = Ground wire