




Collection: Sheridan
Installation manual for:

OD324H16BK W9" H16" L9" L4

Installation instructions:

1. Install tube(P16) on lamp holder
2. Install E12*4 light source. (Bulbs not supplied)
3. Put glass(P25) into body(P23) and stick sponge on clips(P22). Finally curve clips to fix glass
4. Connect cover(P14) with body(P23) and put rubber ring(P12) with screw cap(P11) to fixable
5. Use hook(P10) connect(P13). Twist off screw and mat from the hanging ring(P8) and across the middle hole of canopy(P5) and use screw and mat lock in again.
6. Black wire from ceiling(junction box) attaches to "L" wire from the fixture
7. White wire from ceiling(junction box) attaches to "N" wire from the fixture
8. "E" wire from the ceiling attaches to "E" wire from the fixture.
9. Screw (P2) through to canopy hole(P5) and then put rubber ring(P6) and twist screw cap(P7) to fix mounting bracket(P3).

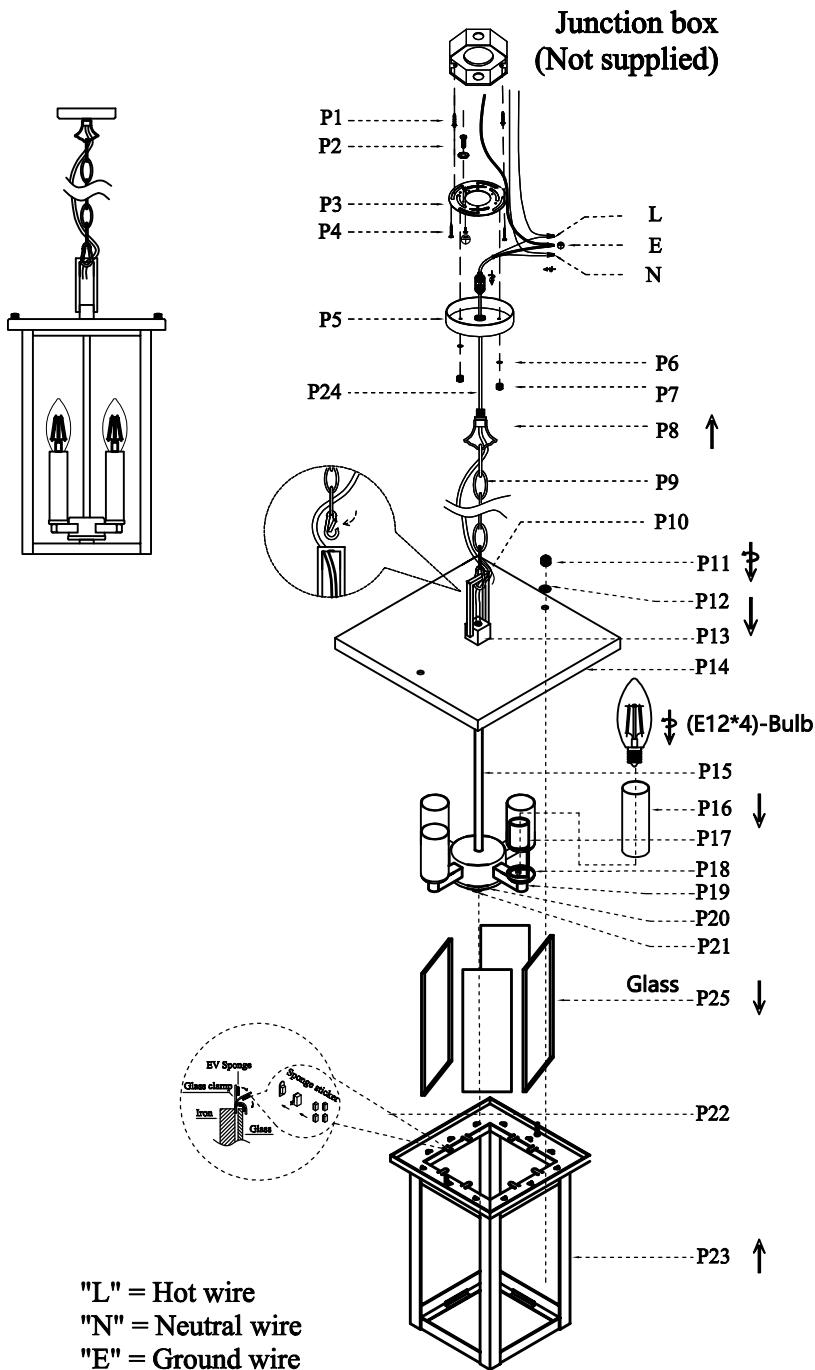

Part Number	Part	Picture	Description	Qty
CP12H01BK	P1	↓	Explosion screw	2
	P2	↑	Screws M4	2
	P3	○	Mounting bracket Ø3.94	1
	P4	↓	Screws M4	2
	P5	○	Canopy(Ø 4.7" * 0.78")	1
	P6	○	Rubber ring	2
	P7	■	Screw cap	2
Chain04PBK	P8	△	Hanging rings L1.57" * W0.59" * H1.57"	1
	P9	↓	Chain (L39")	1
	P10	◎	Hook (L1.57" * W0.78" * H0.15")	1
P-OD324H16BK-1	P11	■	Screw cap	2
	P12	○	Rubber ring	2
	P13		30*20*85MM Ring	1
	P14	—	220*220*15MM Cover	1
	P15	—	Ø9.3*275MM Tube	1
	P16	○	Ø22*H100MM Tube	4
	P17	↓	E12 Lamp Holder	4
	P18	○	Ø23*5MM Cover	4
	P19	○	130*130*H30MM Box	1
	P20	—	Ø62*5MM Cover	1
	P21	—	Ø15*8MM Column parts	1
	P22	↑	EV Sponge Sponge sticker	12
	P23	◆	214*214*328MM Body	1
	P24	—	UL18#,L59"Black	1
GP12L6	P25	□	L317*W167MM Glass	4