



Collection: Ringgold
Installation manual for:







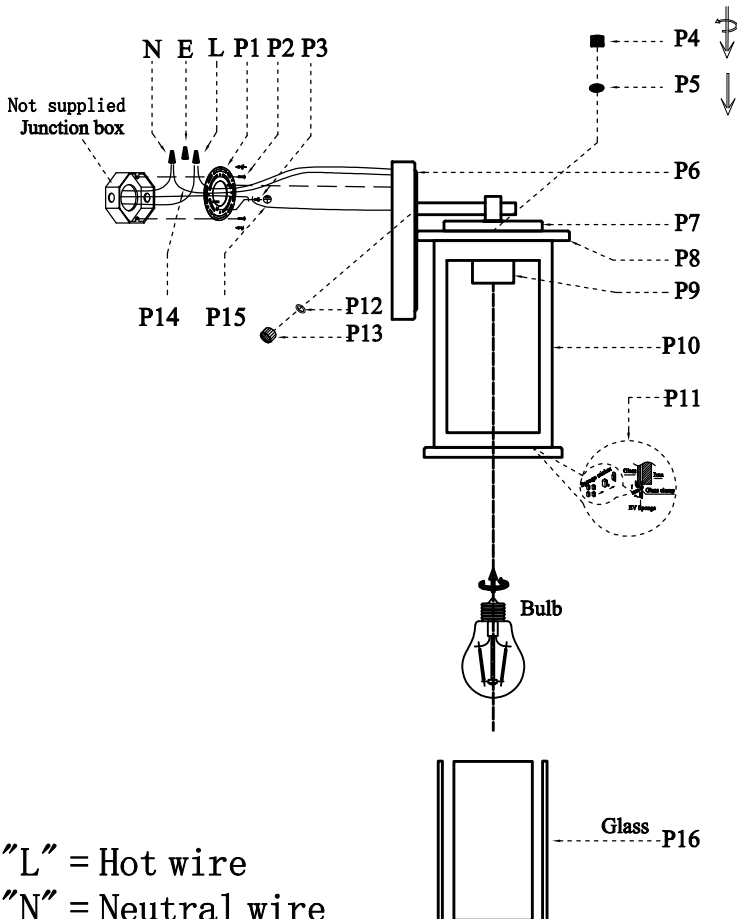

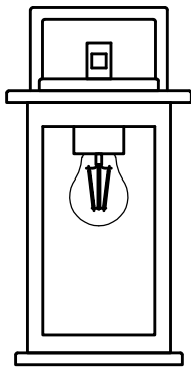







OD350W12BK W6" H12" E7" L1

Installation instructions:

1. Install E26 light source. (Bulbs not supplied) .
2. Put glass(P16) into body(P10) and stick sponge on clips(P11). Finally cruve clips to fix glass.
3. Secure mounting bracket to the junction box
4. Black wire from ceiling(junction box) attaches to "L" wire from the fixture
5. White wire from ceiling(junction box) attaches to "N" wire from the fixture
6. "E" wire from the ceiling attaches to "E" wire from the fixture.
7. Use rubber ring(P12) and screw(P13) to fix lamp with wall mounted



"L" = Hot wire
"N" = Neutral wire
"E" = Ground wire

Part Number	Part	Picture	Description	Qty
MB12W01	P1		Mounting bracket Ø3.94	1
	P2		Mounting bracket screw M4	2
	P3		Screw M4	1
P-OD350W12BK-1	P4		Screw cap	2
	P5		Rubber ring	2
	P6		125*115*160MM Arm	1
	P7		100*100*10MM Box	1
	P8		155*155*10MM Box	1
	P9		E26 Holder	1
	P10		140*150*228MM Body	1
	P11		EV Sponge Sponge sticker	12
	P12		Rubber ring	2
	P13		Screw cap	2
	P14		UL18#Ground wire, L9.8"	1
	P15		UL18#, L12" Black+White	1
	GP12L26	P16		110*205MM Glass