





Collection:Westmont
Installation manual for:

OD363W14BK W5.5" H14" E6" L1

Installation instructions:

1. Install glass (P13) to body(P5) .
2. Use socket ring(P9) to lock in glass(P13) .
3. Install E26 light source.(Bulbs not supplied)
4. Secure mounting bracket(P1) to the junction box.
5. Black wire from ceiling(junction box) attaches to "L" wire from the fixture
6. White wire from ceiling(junction box) attaches to "N" wire from the fixture
7. "E" wire from the ceiling attaches to "E" wire from the fixture.
8. Use rubber ring(P7)and screw(P8) to fixable lamp with wall mounted.

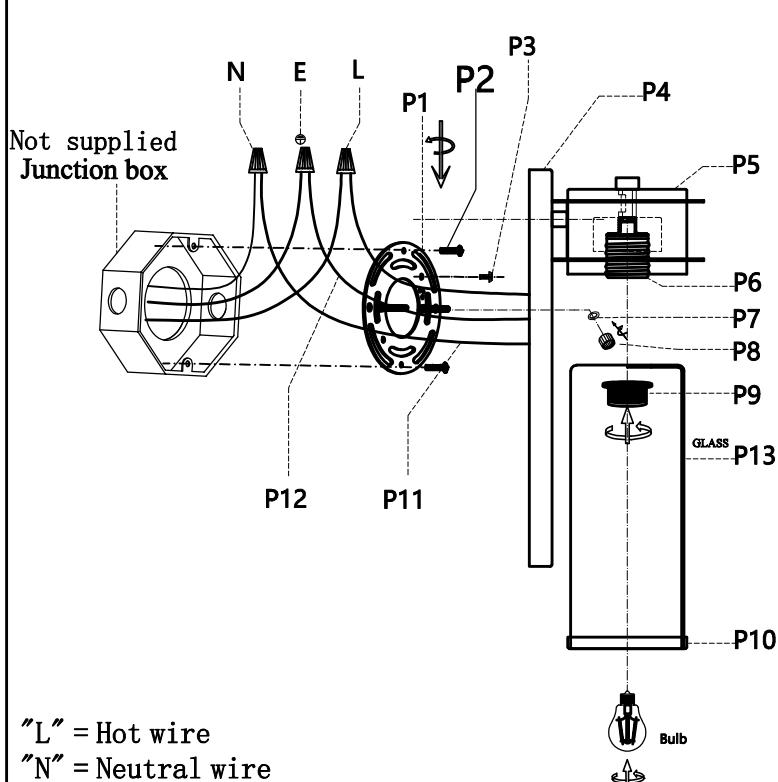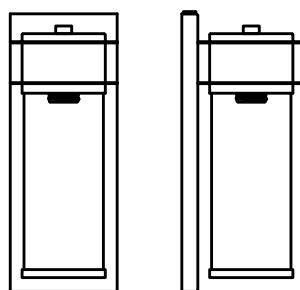

"L" = Hot wire

"N" = Neutral wire

"E" = Ground wire

Part Number	Part	Picture	Description	Qty
MB12W01	P1		Mounting bracket Ø3.94	1
	P2		Mounting bracket screw M4	2
	P3		Screw M4	1
P4		350x135x20MM Back plate	1	
P5		136x135x75MM Body	1	
P6		E26 Lamp Holder	1	
P7		Screw cap	2	
P8		Rubber ring	2	
P9		Socket ring	1	
P10		Ø105x10MM Box	1	
P11		UL18#L12"Black+White"	1	
P12		UL18#Ground wire,L9.8"	1	
GS12R8	P13		Ø100x250MM Glass	1