





Collection:Parrish

Installation manual for:

OD368W13BK W5.5" H12.5" E6" L1

Installation instructions:

1. Install E26 light source. (Bulbs not supplied)
2. Install glass (P10) into lamp body (P5).
3. Secure mounting bracket (P1) to the junction box.
4. Black wire from ceiling (junction box) attaches to "L" wire from the fixture
6. White wire from ceiling (junction box) attaches to "N" wire from the fixture
7. "E" wire from the ceiling attaches to "E" wire from the fixture.
8. Use screw (P7) to fixable lamp with wall mounted.

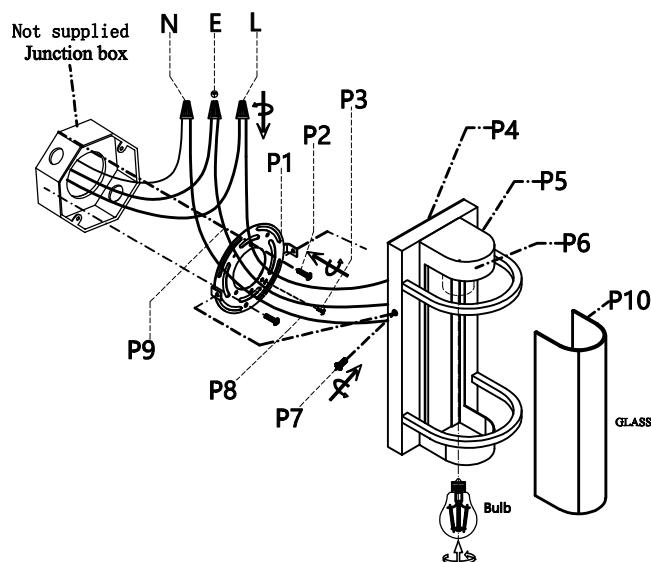

"L" = Hot wire

"N" = Neutral wire

"E" = Ground wire

Part Number	Part	Picture	Description	Qty
MB12W01	P1		Mounting bracket Ø3.94	1
	P2		Mounting bracket screw M4	2
	P3		Screw M4	1
P-OD368W13BK-1	P4		143x135x315MM Back plate	1
	P5		80.5x77x315MM Body	1
	P6		E26 Lamp Holder	1
	P7		Screw M4	2
	P8		UL18#,L12"Black+White	1
	P9		UL18#Ground wire,L9.8"	1
	GS12U1		76x72.5x310xT3.0MM Glass	1