





Collection:Swain

Installation manual for:

OD370W14BK W5" H14" E6.5" L1

**Installation instructions:**

- 1.Install E26 light source.(Bulbs not supplied)
- 2.Install galss (P12) into lamp body upside(P5) and body downside(P7) to fix glass.
- 4.Secure mounting bracket to the junction box
- 5.Black wire from ceiling(junction box) attaches to "L"wire from the fixture
- 6.White wire from ceiling(junction box) attaches to "N"wire from the fixture
- 7."E" wire from the ceiling attaches to "E" wire from the fixture.
- 8.Secure mounting bracket to the junction box.
- 9.Use screw(P9) to fiable lamp with wall mounted

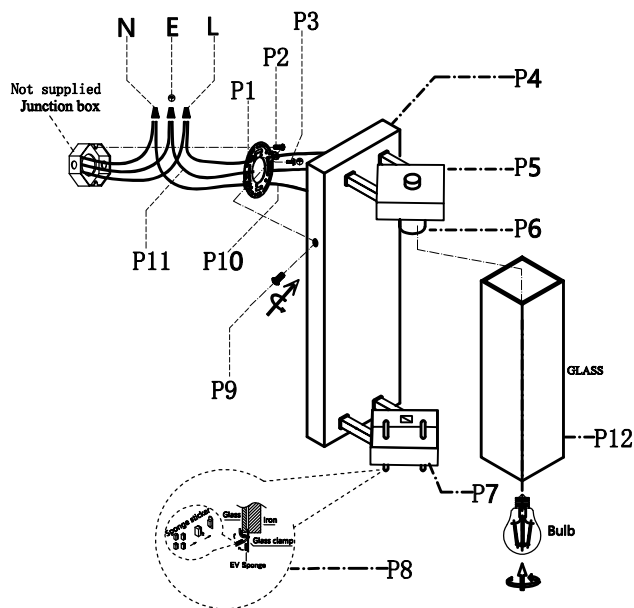

Part Number	Part	Picture	Description	Qty
MB12W01	P1		Mounting bracket $\varnothing . 4$	1
	P2		Mounting bracket screw M4	2
	P3		Screw M4	1
P-OD370W14BK-1	P4		L355xW110xH25mm Back plate	1
	P5		150x120x40mm Body Upside	1
	P6		E26 Holder	1
	P7		150x120x25mm Body downside	1
	P8		EV Sponge Sponge sticker	4
	P9		Screw M4	2
	P10		UL18#,L12"Black+White	1
	P11		UL18#Ground wire,L9.8"	1
	GS12L33	P12		L78xW78xH320 Glass

"L" = Hot wire

"N" = Neutral wire

"E" = Ground wire