



ELEGANT

FURNITURE & LIGHTING™


Collection: Bodine

Installation manual for:

OD501W21BK W11" D7.9 H20.9" L4

Installation instructions:

- 1.Black wire from ceiling(junction box) attaches to "L"wire from the fixture
- 2.White wire from ceiling(junction box) attaches to "N"wire from the fixture
- 3."E" wire from the ceiling attaches to "E" wire from the fixture.
- 4.Secure mounting bracket to the junction box.
- 5.Install the lamp body to the mounting bracket by screws(P4).
- 6.Install E12 light source.(Bulbs not supplied) .
- 7.Fasten the light frame (P16) to the light body (P7) with screws (P17).

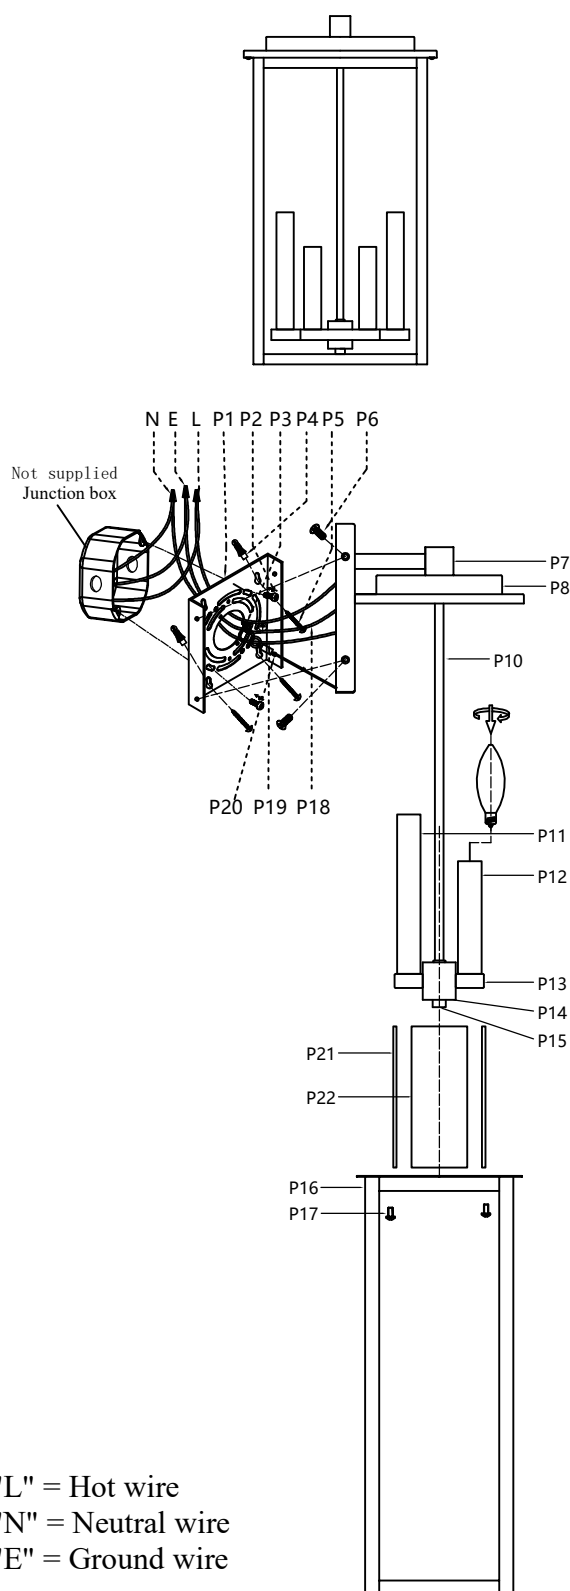

"L" = Hot wire
"N" = Neutral wire
"E" = Ground wire

Part Number	Part	Picture	Description	Qty
M13W04	P1		Mounting bracket (6.7"*7"*0.6")	1
	P2		Mounting bracket screw	2
P-OD501W21BK	P3		Screw	1
	P4		Expansion hose	4
	P5		Self-tapping screws	4
	P6		Screw	4
	P7		Siding(7.1"*7.1*0.8")	1
	P8		Support Arm	1
	P9		Lamp cover(9"*5.2"*1.1")	1
	P10		Connecting pipe	1
	P11		Cannula	2
	P12		Cannula	2
	P13		Mounting box	1
	P14		Mounting box cover	1
	P15		Nut	1
	P16		Body (L10. 9"*W6. 9"*H17. 6")	1
	P17		Screw	4
	P18		UL18#Ground wire,L10"	1
	P19		UL18#,L34"	1
	P20		Safety rope	1
GP13T04	P17		Glass sheet (L17.3"*W9.4")	2
	P18		Glass sheet (L17.3"*W5.7")	2