



ELEGANT

FURNITURE & LIGHTING™


Collection: Bodine

Installation manual for:

OD503H21BK W8" D8" H20.5"L3

Installation instructions:

1. Black wire from ceiling(junction box) attaches to "L" wire from the fixture
2. White wire from ceiling(junction box) attaches to "N" wire from the fixture
3. "E" wire from the ceiling attaches to "E" wire from the fixture.
4. Secure mounting bracket to the junction box.
5. Twist Siding(P4) tightly with volution1(P6).
6. Attach the swivel snap (P8) to the Hanging rings2 (P9).
7. Install E12 light source.(Bulbs not supplied)
8. Connect P17 with P6&P10.

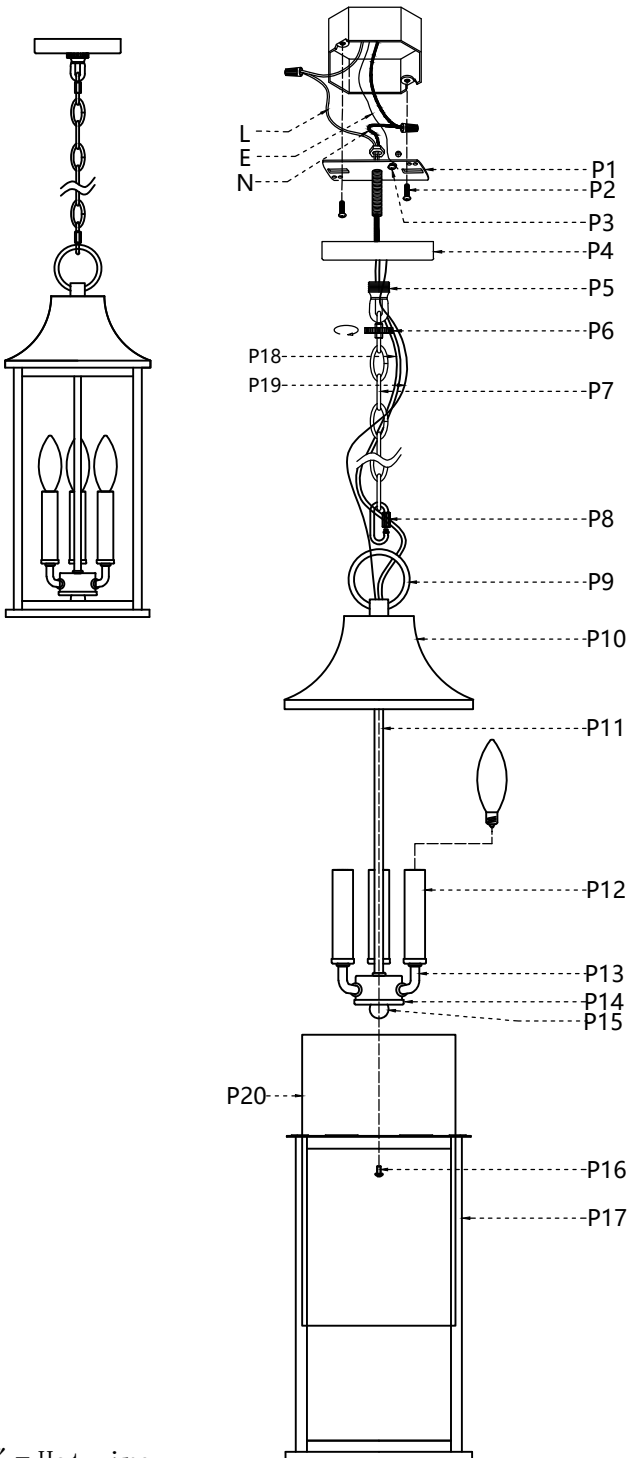

"L" = Hot wire
 "N" = Neutral wire
 "E" = Ground wire

Part Number	Part	Picture	Description	Qty
CP13H14BK	P1		Mounting bracket	1
	P2		Mounting bracket screw	2
	P3		Screw	1
	P4		Siding(Ø4.7")	1
	P5		Hanging rings1	1
	P6		volution	1
Chain14PBK	P7		Chain (L60")	1
	P8		swivel snap	2
P-OD503H21BK	P9		Hanging rings2	1
	P10		Lamp cover (8"*8"*3.9")	1
	P11		Connecting pipe	1
	P12		Cannula	3
	P13		Mounting box	1
	P14		Mounting box cover	1
	P15		Nut	1
	P16		Screw	2
	P17		Light holder (7.8"*7.8"*H13.8")	1
	P18		UL18#,L100"	1
	P19		UL18#,L100"	1
GP13T14	P20		Glass sheet (L13.3"*W4.5")	4