

# Prism<sup>®</sup> SCG

## Ultimate Performance Pre-Mixed Single Component<sup>®</sup> Grout

### Installation Guide



#### Cleaning Instructions for Prism SCG

Install areas up to 100 sq. ft. at a time. Only spread what can be cleaned and finished in 20 to 30 minutes.

**Key Points:** Use a slightly damp sponge and microfiber towel (or microfiber sponge) light pressure to clean and finish Prism SCG.

**1** Pre-treat natural stones and porous or rough textured tile with Aqua Mix<sup>®</sup> Sealer's Choice<sup>®</sup> Gold, TileLab<sup>®</sup> SurfaceGard<sup>®</sup> and/or Aqua Mix<sup>®</sup> Grout Release. Protect adjoining surfaces during sealer and grout installation from potential staining from sealer, grout pigments and wash water. Pre-wet all porous tile using clean water with a sponge or towel or use Aqua Mix<sup>®</sup> Grout Release. Remove any excess water before grouting. Glazed or impervious tile do not require pre-wetting.

**2** Holding the grout float at a 45° angle, force grout into joints. Ensure that all grout joints are completely full. Immediately remove excess grout with the grout float at a 90° angle.



**3** Lightly dampen a section of the grouted tile surface up to 30 sq. ft. with a sponge and clean water. Areas less than 30 sq. ft., let stand for at least 15 to 30 seconds.



**4** Next, on dampened surface, use a circular motion with a damp sponge and light pressure to shape joints and loosen excess grout from the tile surface. Do not overwork the grout or use too much water as this may cause low joints. Change water approximately every 40 to 50 sq. ft.




**5** Wring out sponge thoroughly then lightly drag diagonally across tile to remove most grout residue. On floors, finish by dragging a damp microfiber towel or microfiber sponge laid flat over the surface. Use once on each side and rinse and repeat.



**CUSTOM<sup>®</sup>**  
TILE INSTALLATION SYSTEMS



**6** On walls, wring out a microfiber towel/microfiber sponge; fold towel flat to approximately 8" x 8" and with light pressure wipe diagonally upward to remove final haze. Use once on each side and rinse and repeat.

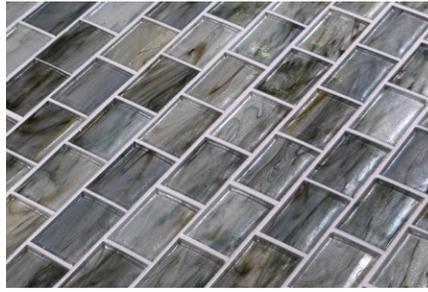

**7** If grout haze dries on the surface, wait 2 to 4 hours for grout joints to firm and use a damp cloth or microfiber towel with clean water to wipe clean. If streaks or residue remain after 72 hours use diluted Aqua Mix® Grout Haze Clean-Up, Aqua Mix® Non-Cement Grout Haze Remover, TileLab® Grout & Tile Cleaner and clean with a sponge.

---

**Note:**

Prism SCG cures by water evaporation. Allow 24 hours for light traffic. Do not cover grout for at least 24 hours in moderate temperatures. Use breathable coverings.

---

**For questions call: CUSTOM® Technical Services (800) 282-8786**

©2023 Custom Building Products. All rights reserved. The CUSTOM® logo and select product logos are registered trademarks of Custom Building Products, Inc. CUSTOM may make product modifications at any time without notice. Visit [custombuildingproducts.com](http://custombuildingproducts.com) for updated technical data sheets and SDS information.

Custom Building Products  
800-272-8786  
[custombuildingproducts.com](http://custombuildingproducts.com)

10/23N