


**Installation Guide - Modern Pocket Door Mortise Lock - Privacy**

**1. Thread Drive Bar Cylinder**


Install Drive Bar Cylinder by threading it clockwise on interior side of door.

Note: Drive Bar Socket must be in the 12 o' clock position as shown.

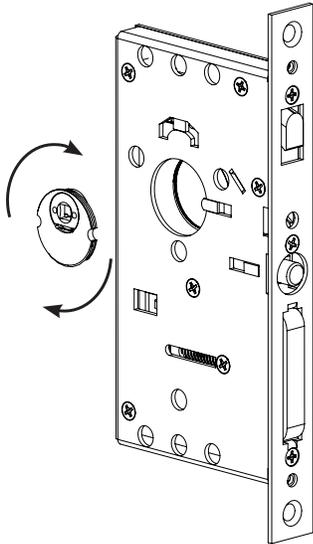

Note: Notches on cylinder must be parallel with the horizontal plane when fully screwed into lock body.

**2. Install Lock Body**

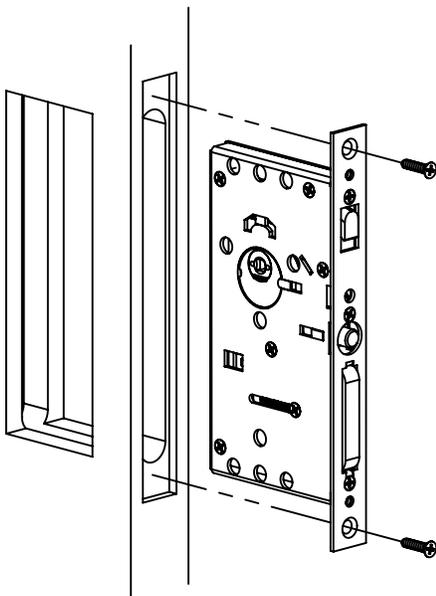


See template for door prep specifications

**3. Install Inside and Outside Plates**


Inside

Outside

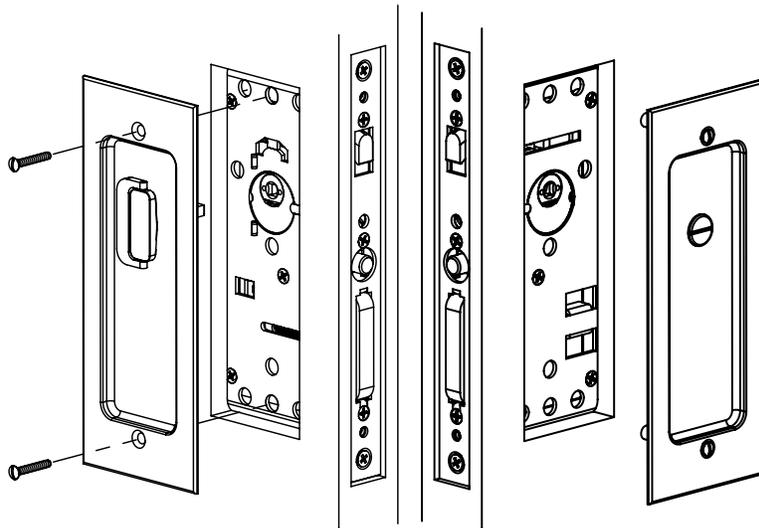



**4. Tighten Key Cylinder**

Tighten locking screw to engage notches on both cylinders

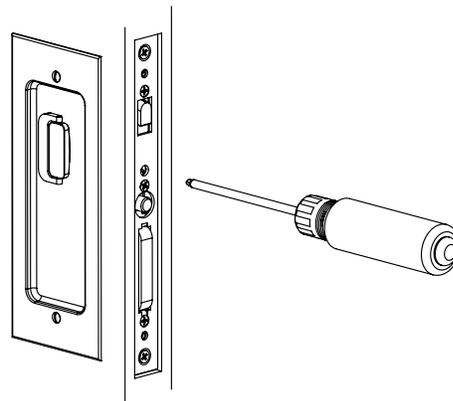

**6. Install Trim Plate**

**Door Jamb Prep.**

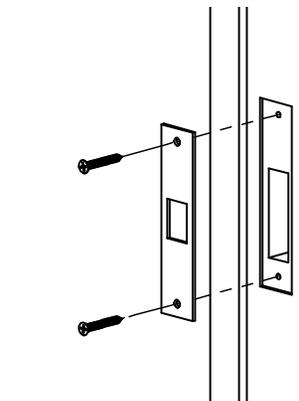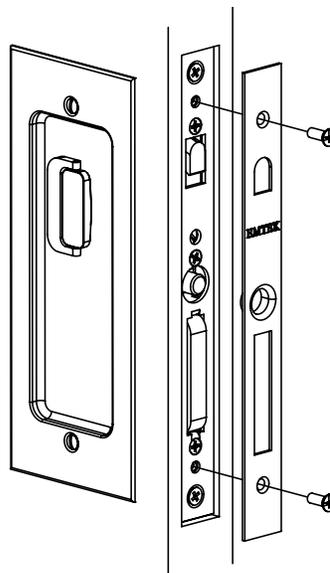

See template for door jamb prep specifications