

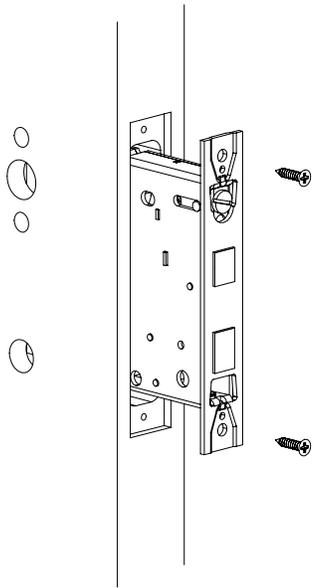


1. Install Lockbox 2. Install Trims


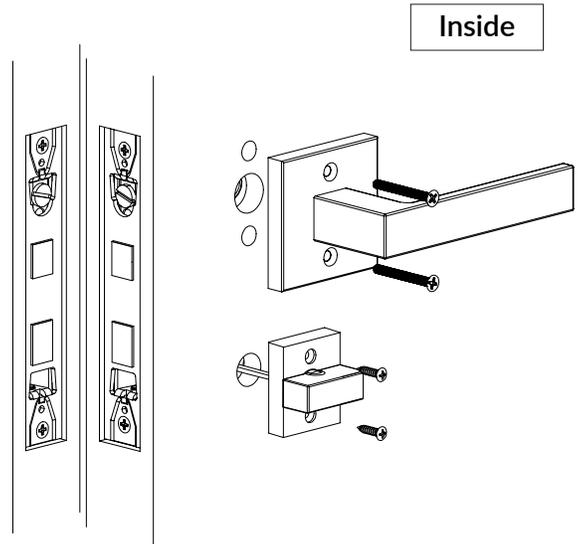


See Template for door prep

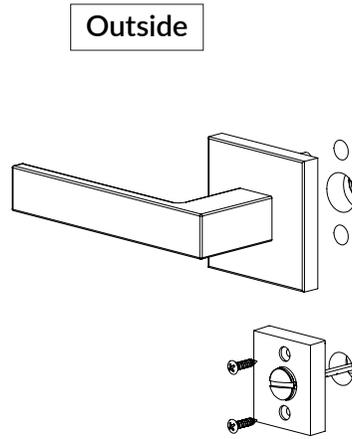


Trims Vary
Lever with privacy bolt shown

3. Install Faceplate 4. Install Strike Plate & Magnetic Box

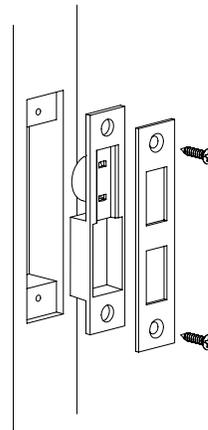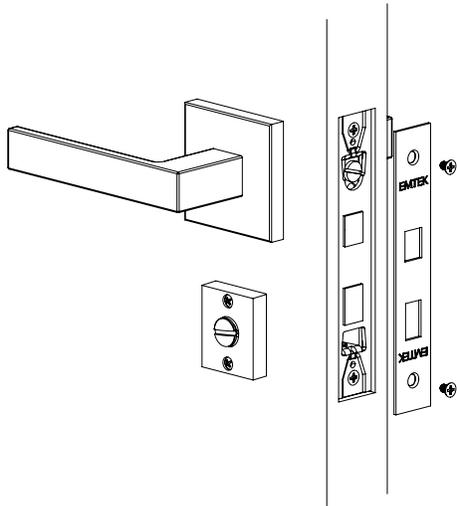


See Template for prep

Instruction to reverse Handing

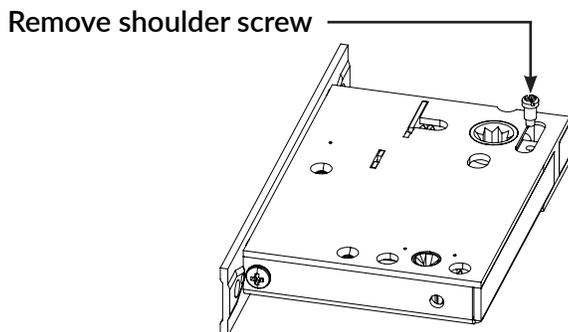

Remove shoulder screw

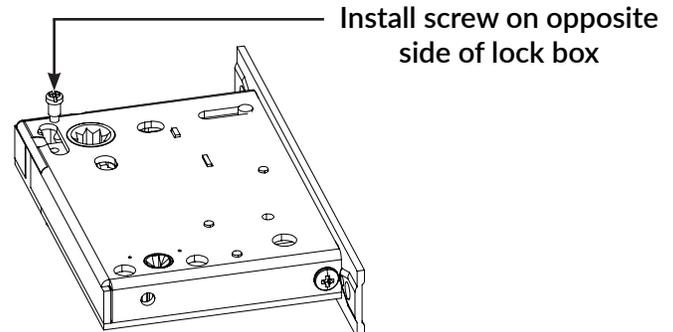

Install screw on opposite side of lock box

Handing can be changed to LH or RH so that the door is unlocked automatically when engaging the lever or knob from the inside. Shoulder screw should be on interior side when lock box is installed.