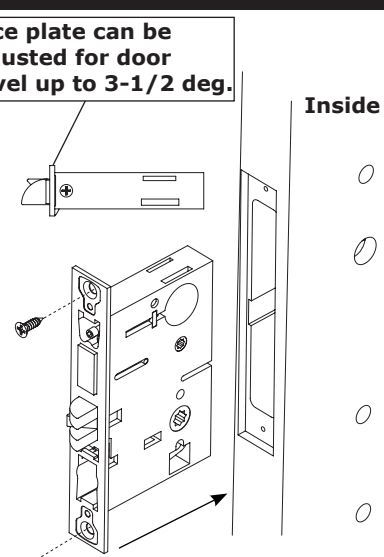
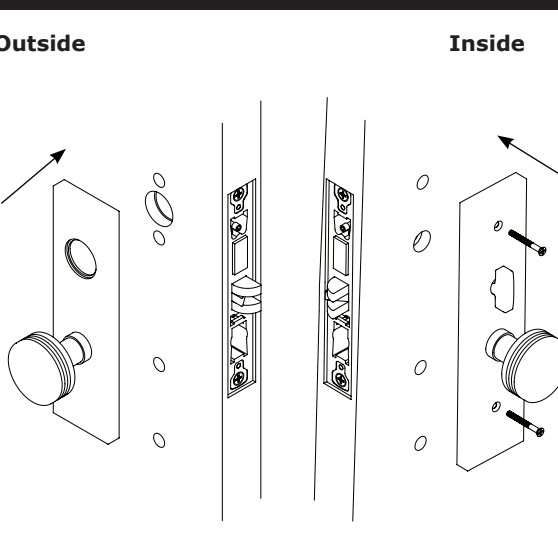
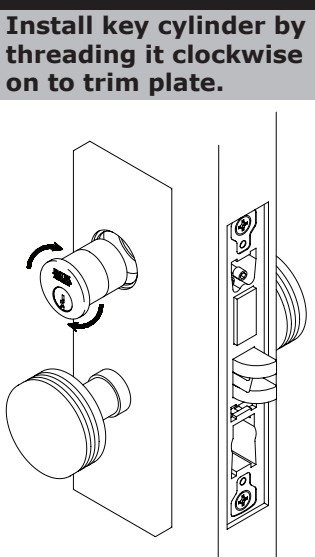
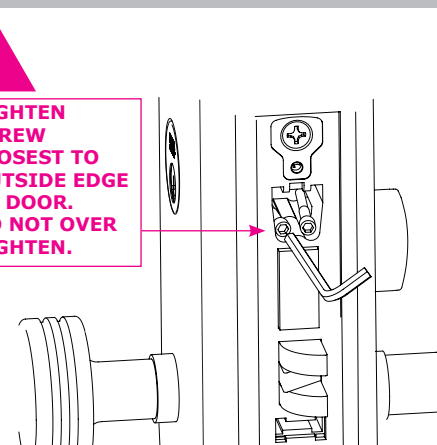
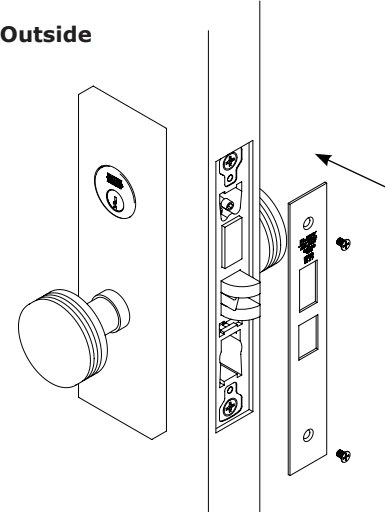
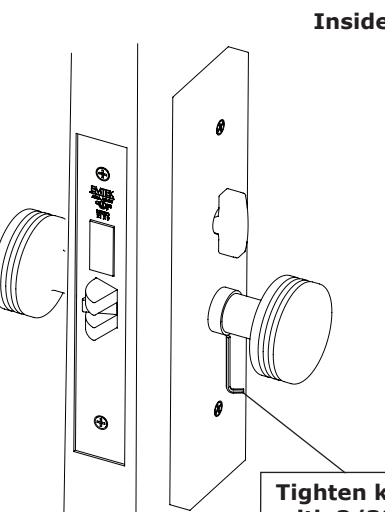
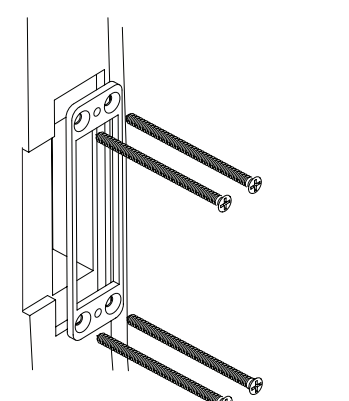
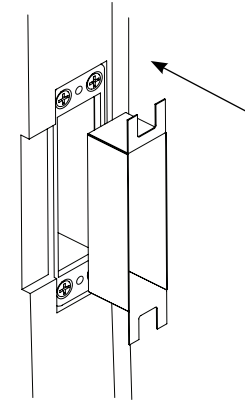
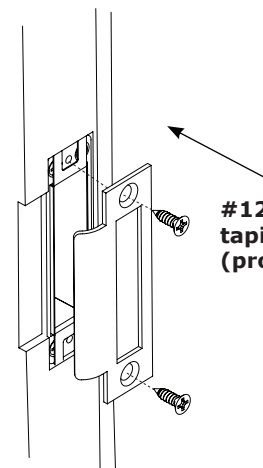


**Installation Guide - UL Listed Mortise Knob By Knob, Lever By Lever**

<p><b>1. Install Mortise Lock</b></p> <p>Face plate can be adjusted for door bevel up to 3-1/2 deg.</p>  <p>Inside</p> <p>See template for door prep specifications.</p>	<p><b>2. Mount Outside and Inside Trim to Door</b></p> <p>Outside</p> <p>Inside</p>  <p>Trims and knobs/levers will vary depending on style.</p>	<p><b>3. Install Key Cylinder</b></p> <p>Install key cylinder by threading it clockwise onto trim plate.</p> 
<p><b>4. Tighten Key Cylinder</b></p> <p>After key cylinder is installed, secure cylinder by tightening screw with 9/64 hex wrench (provided).</p>  <p><b>! TIGHTEN SCREW CLOSEST TO OUTSIDE EDGE OF DOOR. DO NOT OVER TIGHTEN.</b></p> <p>Outside edge of door.</p>	<p><b>5. Install Trim Plate</b></p> <p>Outside</p> 	<p><b>6. Tighten Inside Lever or Knob</b></p> <p>Inside</p>  <p>Tighten knob with 3/32 hex wrench (provided).</p>
<p><b>1. Install Security Strike</b></p> <p>Fasten security strike to door jamb with #10 x 3 wood screws (provided).</p> 	<p><b>2. Install Dust Box</b></p> <p>Dust box slips into security strike.</p> 	<p><b>3. Install Strike Plate</b></p> <p>See template for door jamb prep specifications.</p>  <p>#12-24 self tapping screws (provided).</p> 