

Contemporary Lighting

PRODUCT NAME: Rubic
ITEM NUMBER: E22912-BKPC


Please consult your electrician for hanging fixture and wiring.

This fixture is designed to dim with dimmer.
Dimming levels will vary by dimmer.
Below is a List of Recommended Dimmers:

- Lutron DVELV-330P
- Leviton IPL06-10Z
- LegrandTru-Universal ADTP703TUW4
- Lutron MAELV-600M
- Lutron SAELV-153P

Due to inrush current, wattage should not exceed
150 Watts of product for a 600 Watt dimmer.

WARNING: Wires need to be connected to transformer
found in canopy and should not be connected directly to
power source or a short may occur.

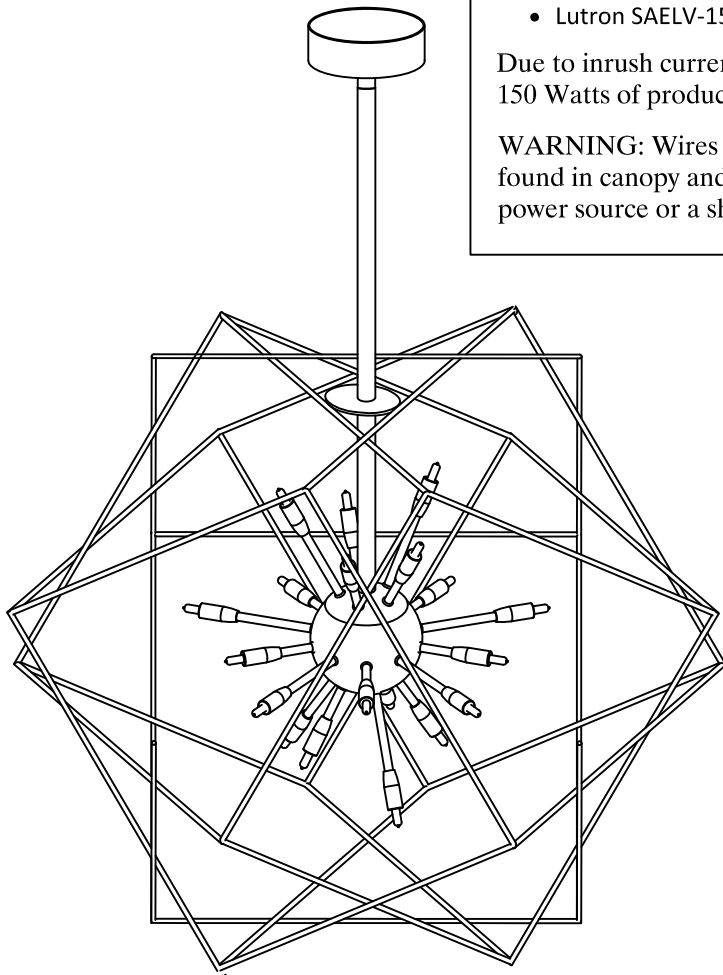

20x1.2W G4 LED 3000K


PRODUCTS ARE NOT INTENDED
FOR COMMERCIAL USE.

MADE IN CHINA
Page 1 of (2)


IMPORTANT: Turn OFF the power at the main fuse or circuit breaker box before starting installation



(A)
Mounting Bracket




(B)
Canopy



(C)
Stems




(D)
Ball Nut




(E)
Back Plate Screws

Locate all hardware & components before discarding packaging

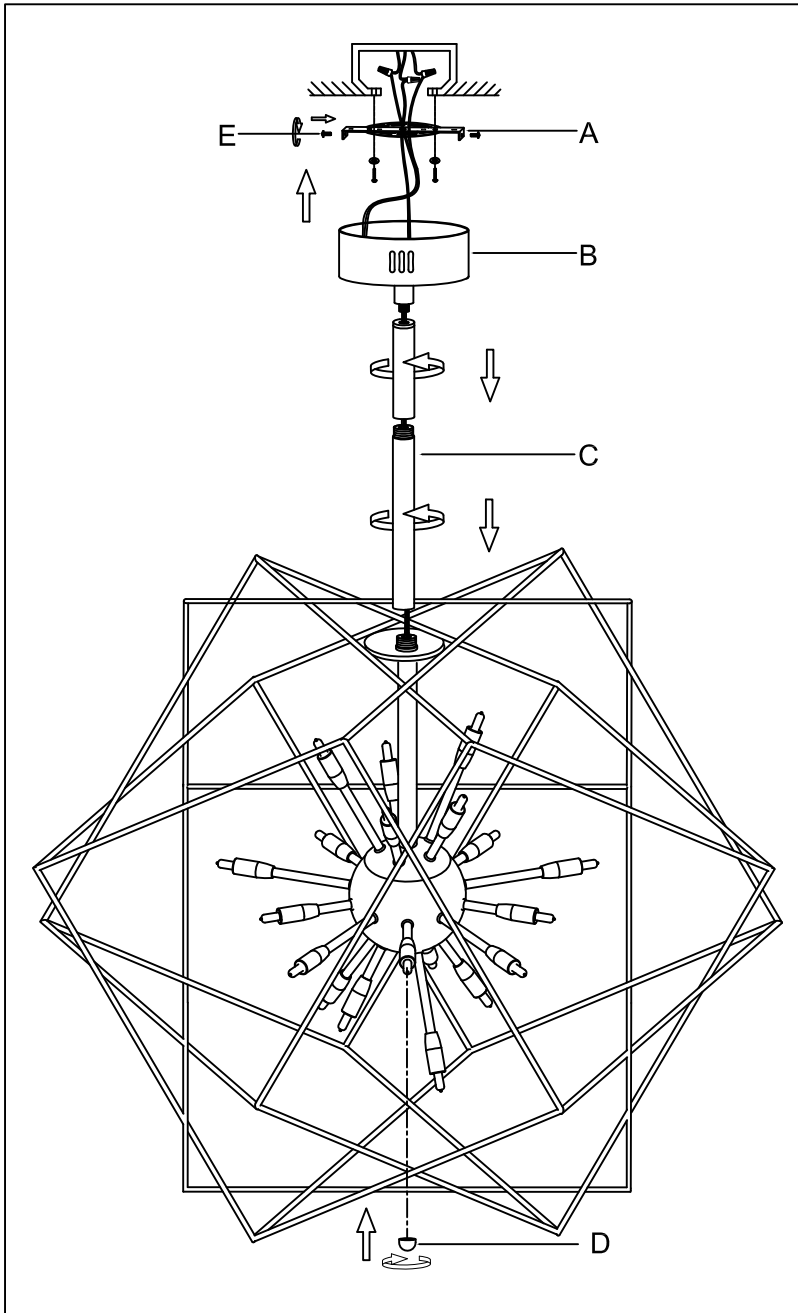


Cleaning & Care:

Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.

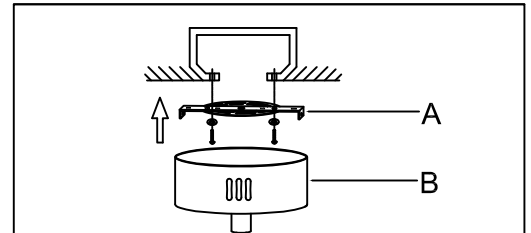


1.)

Step.1: Remove mounting bracket from canopy and install to electrical box.

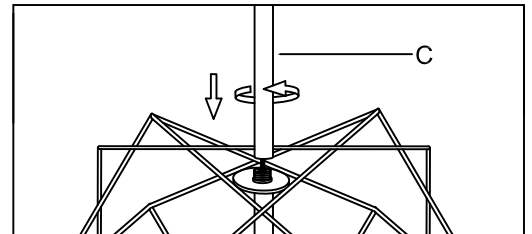


2.)

Step.2: Run wire through stem (C) lengths and combine stem lengths to meet desired mounting height. Attach the stem (C) to the body of the fixture.

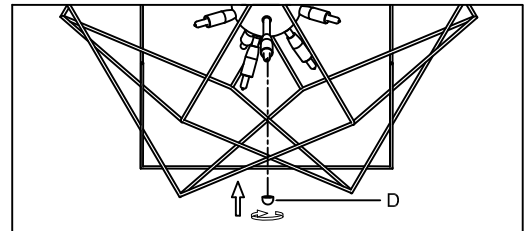

3.)

Step.3: Tighten the ball nut (D) on the bottom of the fixture.

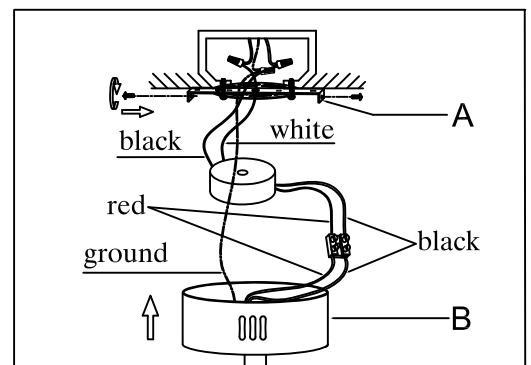

4.)

Step.4: Wire low voltage red/black wires to the terminal block, and wire high voltage black/white wire to the outlet box. Install the canopy (B) to the mounting bracket (A) using screws provided.