




FAIRMONT
designs®

**fdSTONE VANITY TOP WITH INTEGRAL BOWL
INSTALLATION INSTRUCTIONS**

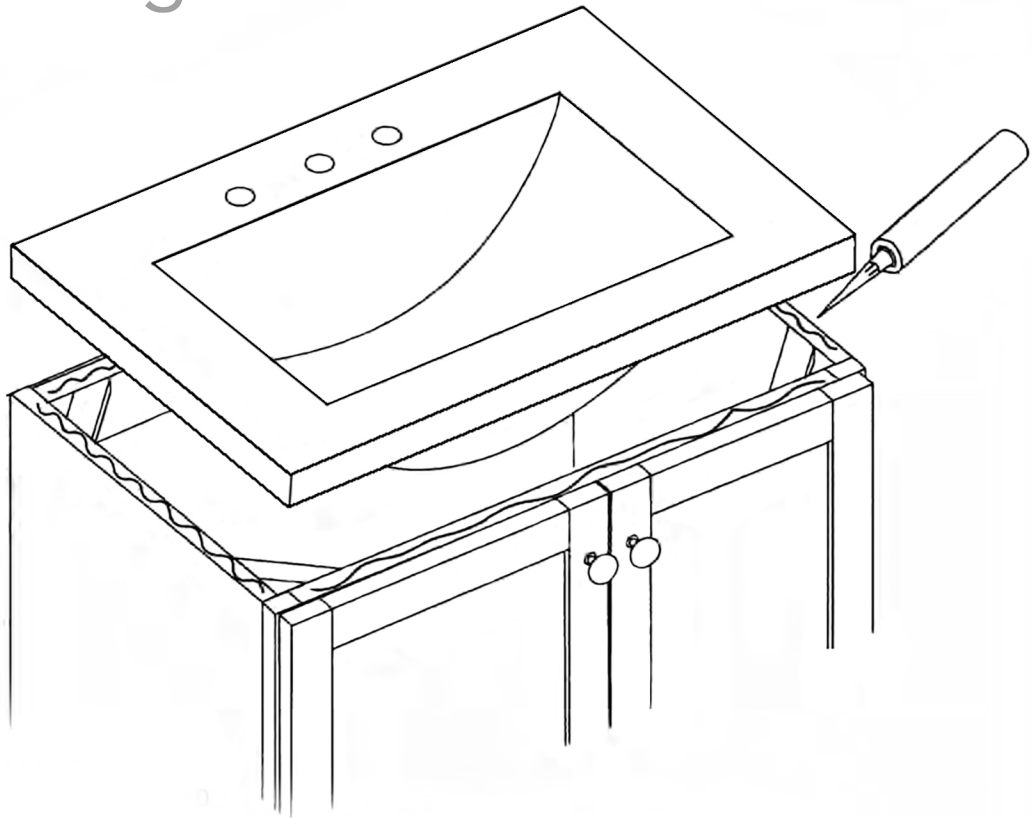

VANITY TOP INSTALLATIONS
INSTALCIONES SUPERIORES DE LA VANIDAD

1. Install the cabinet / vanity according to the cabinet / vanity manufacturer

Instalar el gabinete / vanidad de acuerdo con la cabint / vanidad fabricante

2. Check to make sure the vanity top sits level on the top of the vanity

Verifique para asegurarse de que la vanidad nivel superior se encuentra en la parte superior de la vanidad

3. Apply 100% silicone sealant to the top of the cabinet / vanity as shown above

Aplicar sellador de silicona en la parte superior del gabinete / vanidad como se muestra arriba

4. Install faucet and drain assembly per the manufacturers' instructions

Instalacion de grifo y desague de montaje por las instrucciones de los fabricantes

TOOLS AND MATERIALS



Tape measure
Cinta Metnca



100% Silicon Sealant
Sellante Del Silicon



Level
Nivel



Safety Glasses
Gafa de Seguridad

Fairmont Designs highly recommends that you seek a professional installation specialist if you are unsure of installation.

Please note: Fairmont Designs is not responsible for any installation error, damages, or injury actual or consequential resulting from possible printing error in instruction.