


# FRAMEPORT®

## HARDWARE COMPONENTS FOR 1-3/8" BIFOLDS

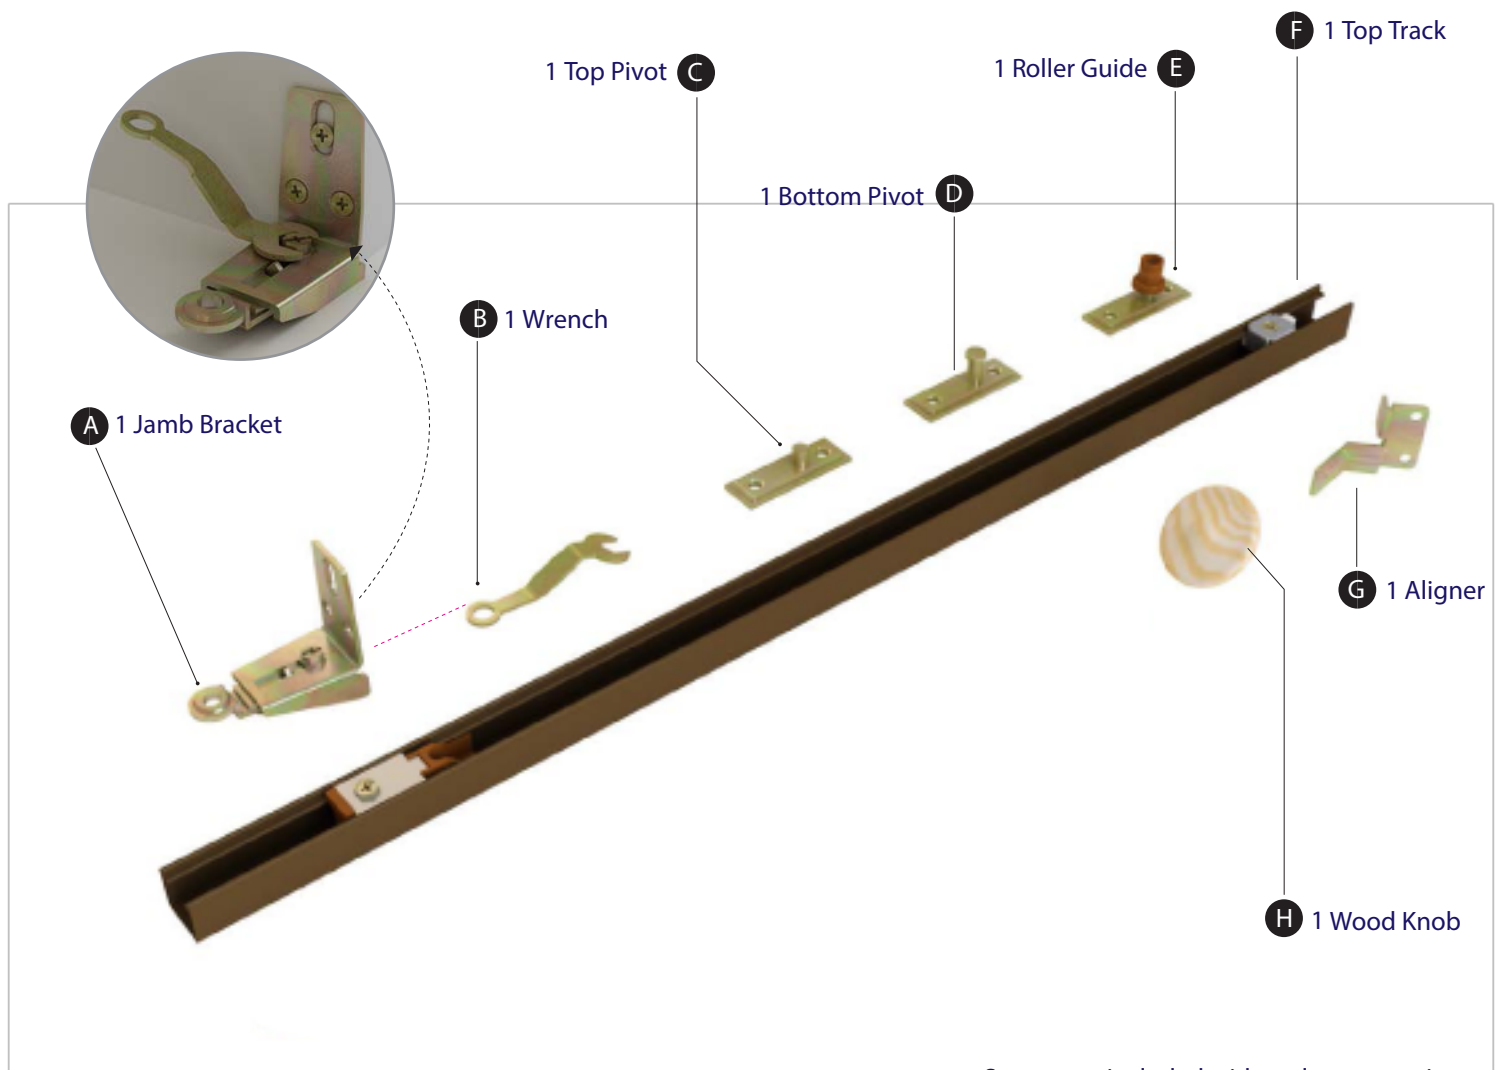

Screws are included with replacement pieces.

### Tools You'll Need:

- Measuring Tape
- Phillips Screwdriver
- Marking Pencil
- Drill & 3/16" Bit
- Hammer
- Safety Glasses
- Finishing Supplies (if needed)