


# FRAMEPORT®

## HARDWARE COMPONENTS FOR 1" BIFOLDS

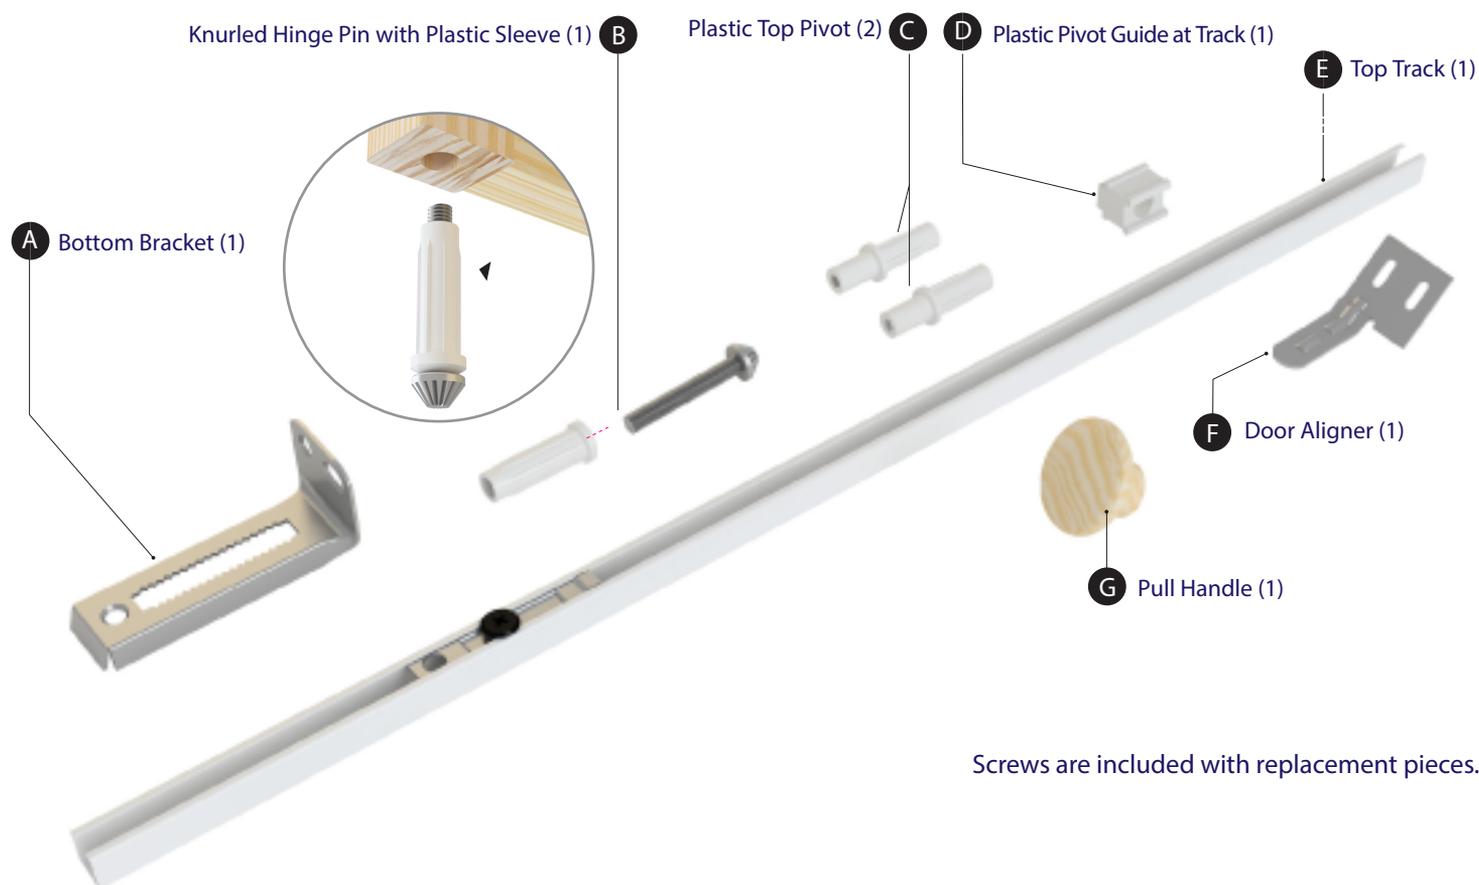

Screws are included with replacement pieces.

### Tools You'll Need:

- Measuring Tape
- Phillips Screwdriver
- Marking Pencil
- Drill & 3/16" Bit
- Hammer
- Safety Glasses
- Finishing Supplies (if needed)

**DOOR ALIGNER (Part F):** This piece to be used only when combining two sets of bifolds. Attaches with two Round Top Screws on back side of Guide doors.

