



# FVN31-123612ACA FORMOSA INSTALLATION GUIDE

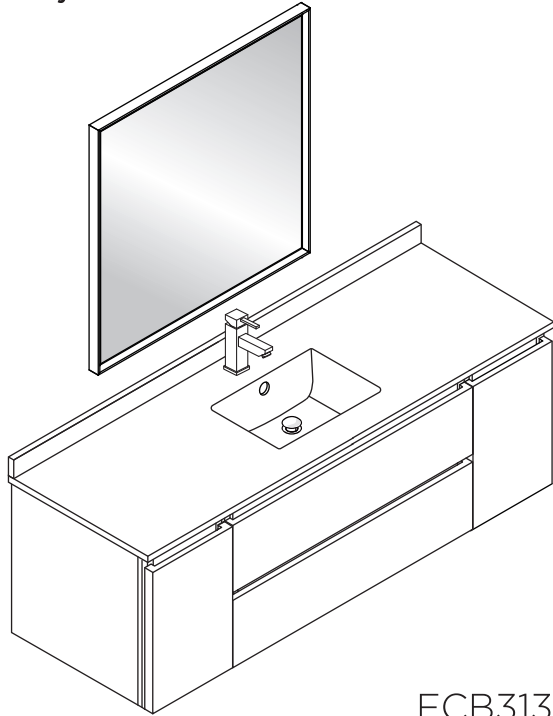


FVN31-123612ACA  
Vanity Front




FMR3132ACA  
Mirror Front

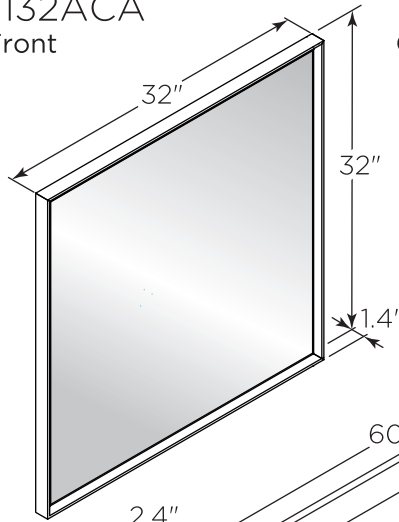


FCT2060WH-S-CMB  
Counter Top Front

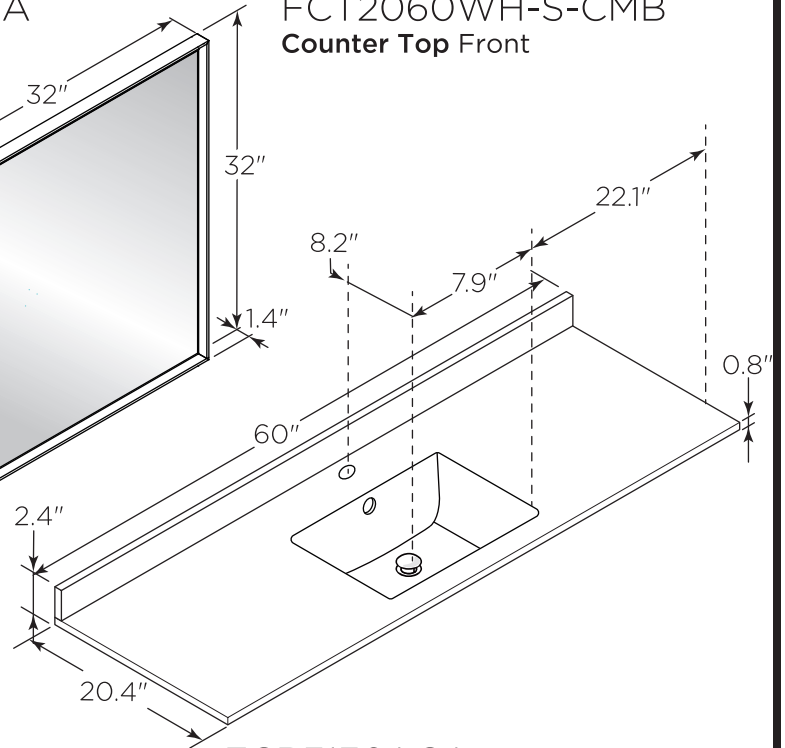


FCB3136ACA  
Cabinet Front

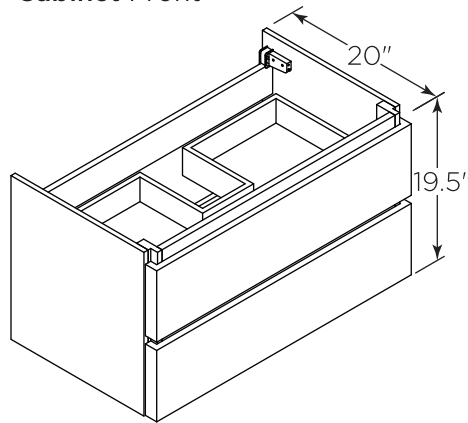


FCB3136ACA  
Cabinet Back

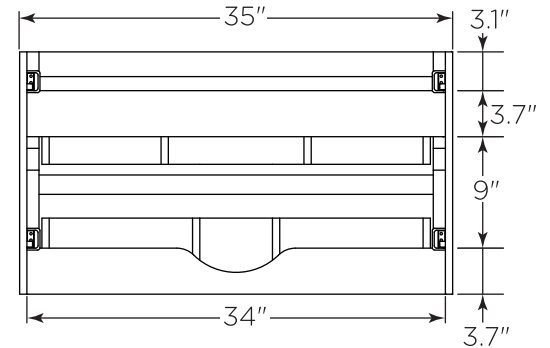

FST3112ACA (X2)  
Cabinet Front

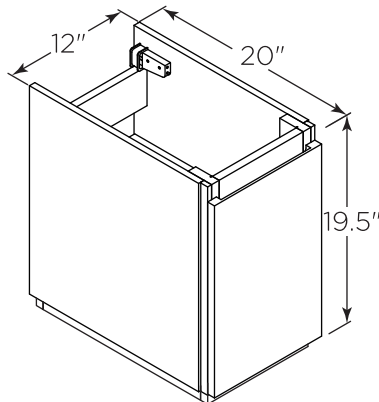

FST3112ACA  
Cabinet Back

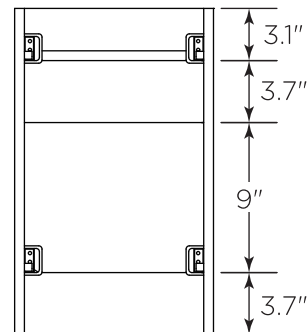

**NOTE:** All dimensions & specifications are approximate and subject to change without notice.