



FVN9136 SENZA INSTALLATION GUIDE

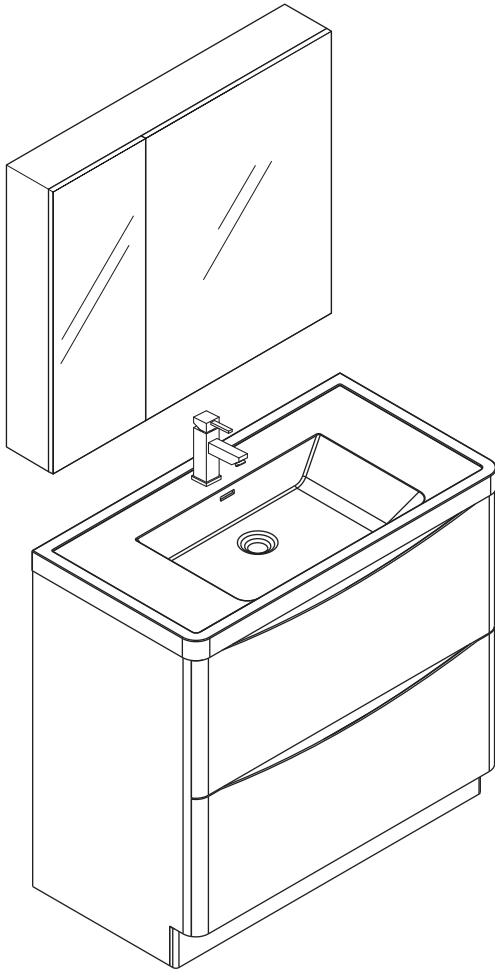


FVN9136
Vanity Front




FMC8090
Medicine Cabinet Front

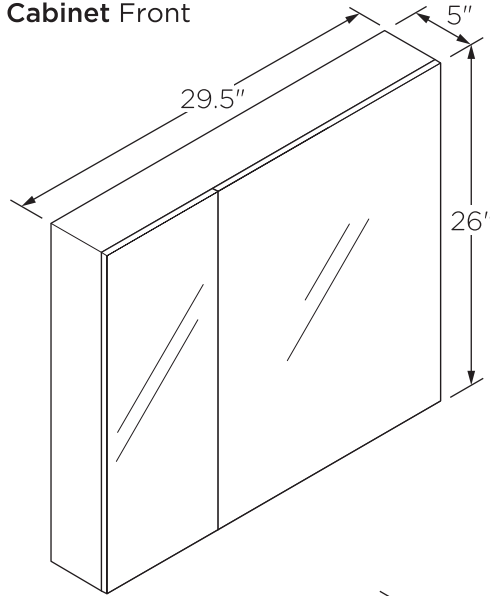


FVS9036WH
Counter Top Front

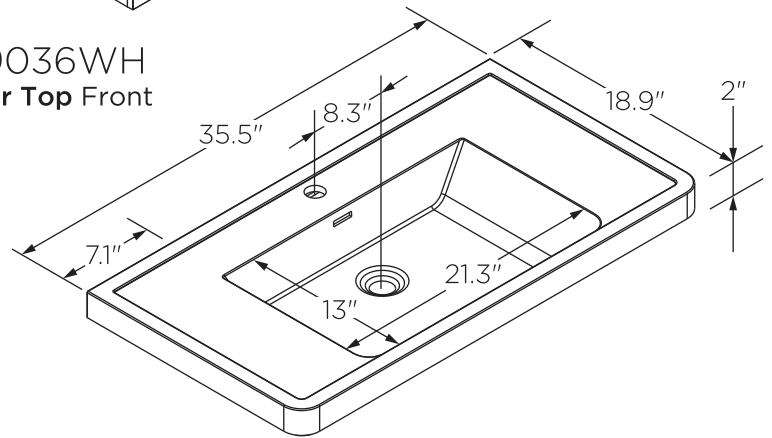

FCB9136
Cabinet Front

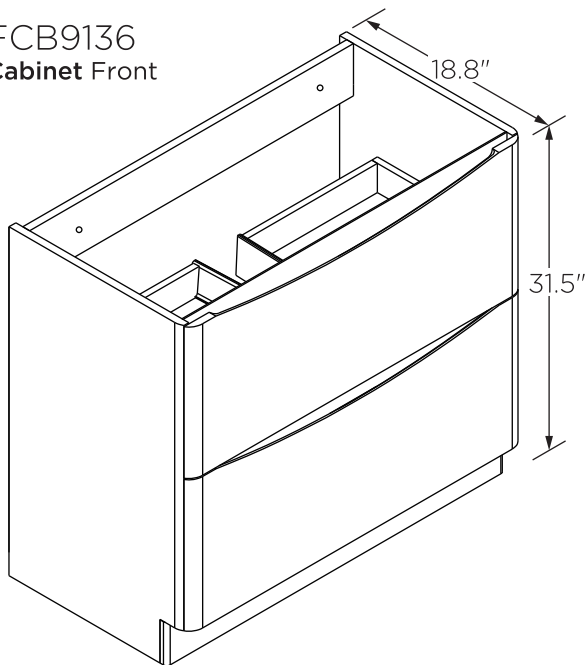

FCB9136
Cabinet Back

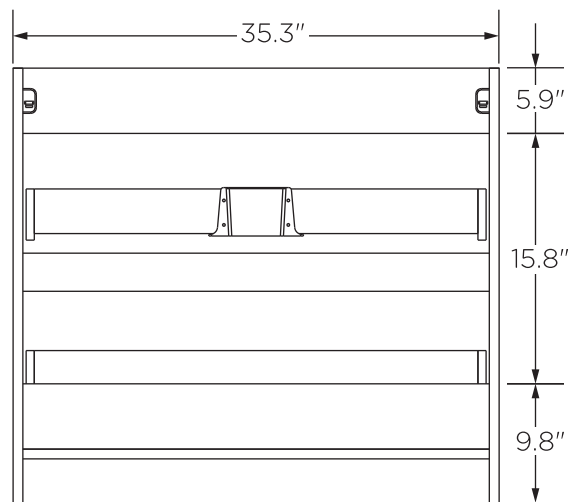

NOTE: All dimensions & specifications are approximate and subject to change without notice.