





FVN3136ACA-FC FORMOSA INSTALLATION GUIDE



FVN3136ACA-FC
Vanity Front


FCT2036WH-CMB
Countertop Front

FMR3132ACA
Mirror Front

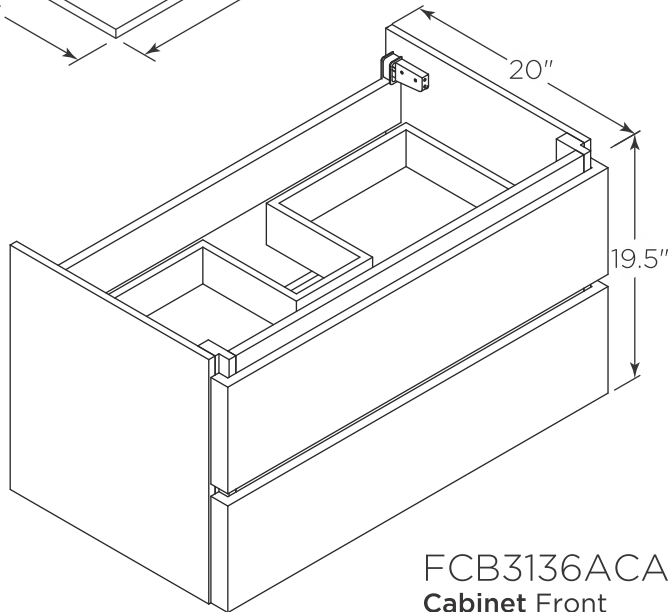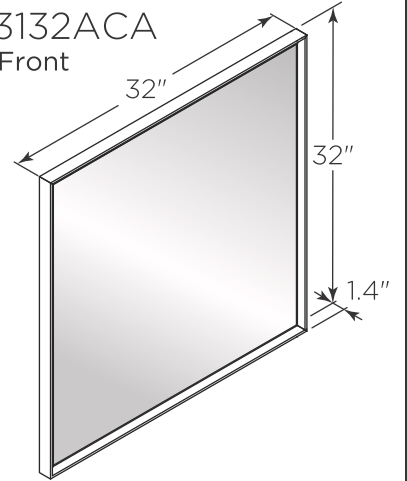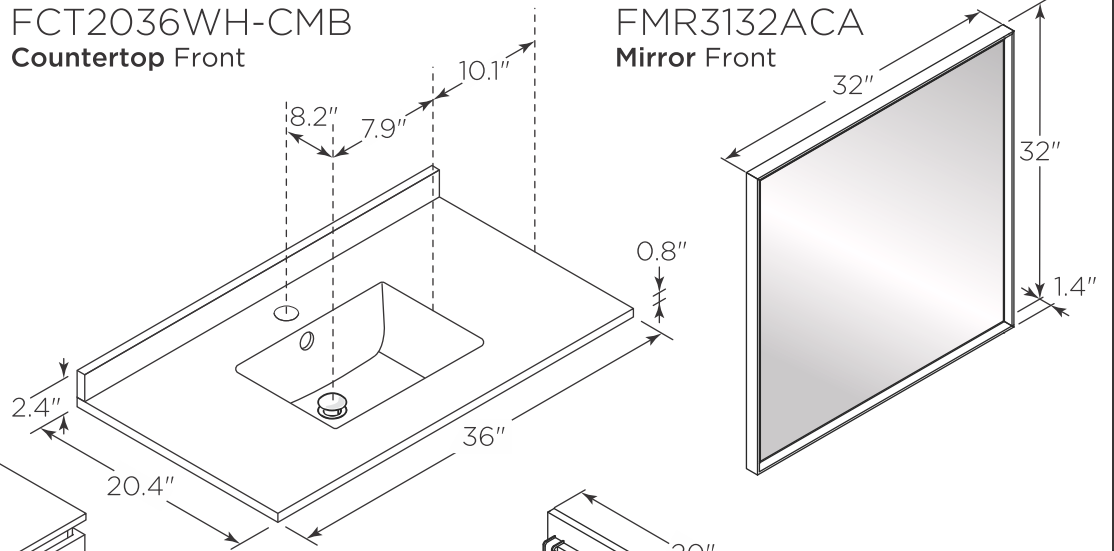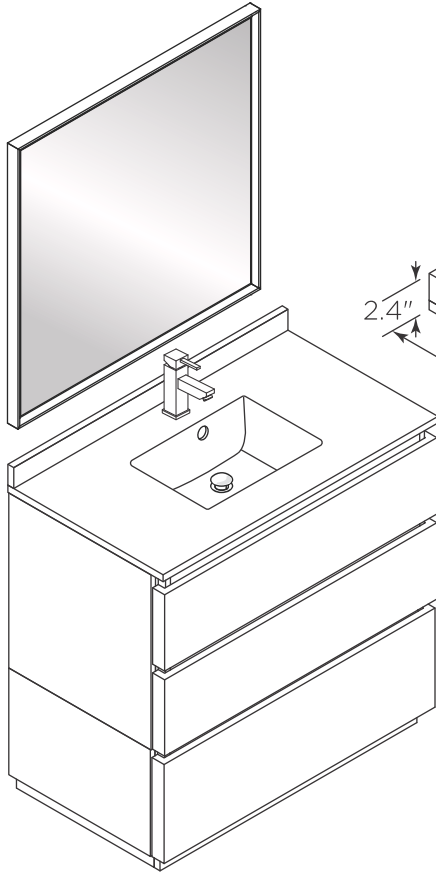



FCB3137ACA
Bottom Cabinet Front

FCB3136ACA
Cabinet Front

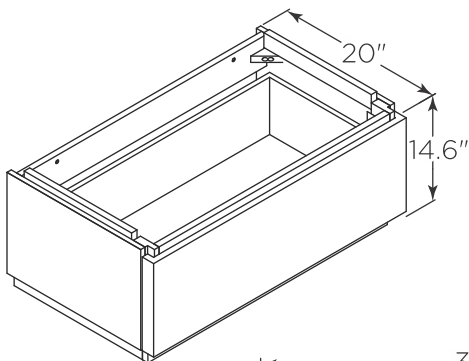

FCB3136ACA
Cabinet Back

FCB3137ACA
Bottom Cabinet Back

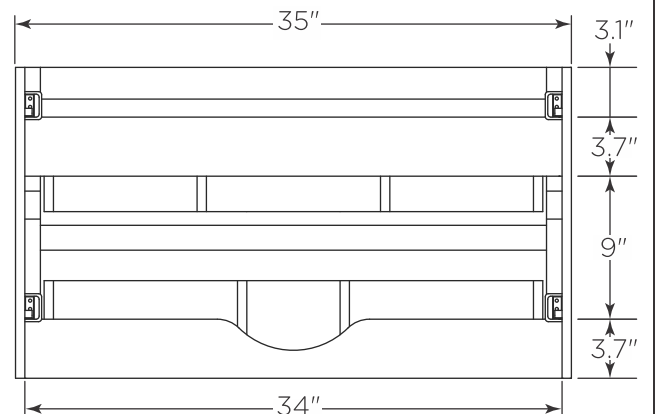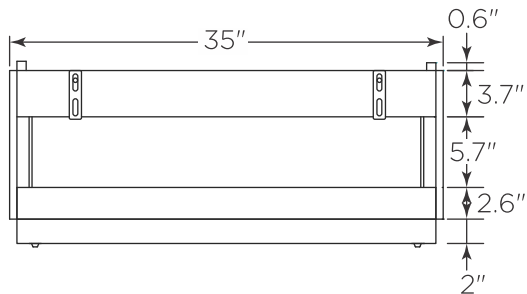

NOTE: All dimensions & specifications are approximate and subject to change without notice.