



# FVN3136ACA-FS FORMOSA INSTALLATION GUIDE

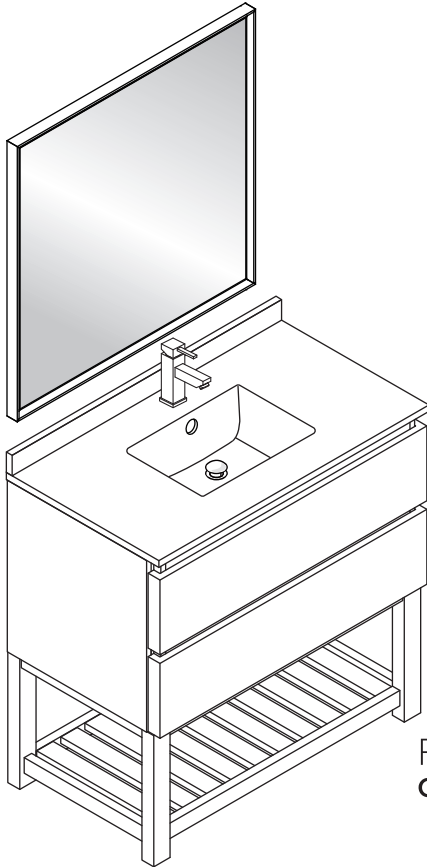


FVN3136ACA-FS  
Vanity Front




FMR3132ACA  
Mirror Front

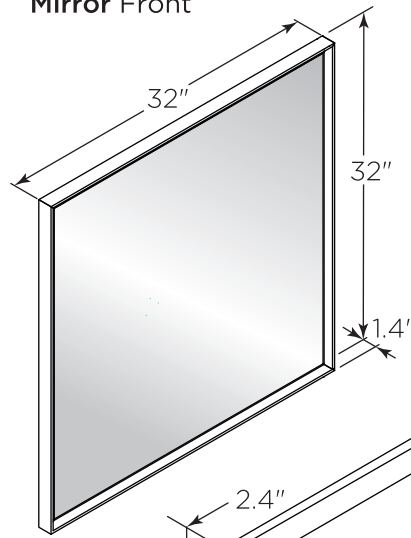


FCT2036WH-CMB  
Mirror Front

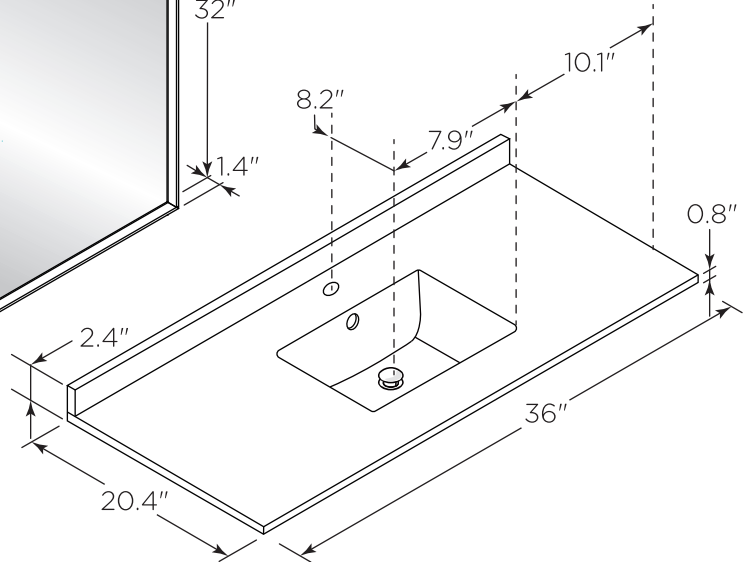


FCB3136ACA  
Cabinet Front

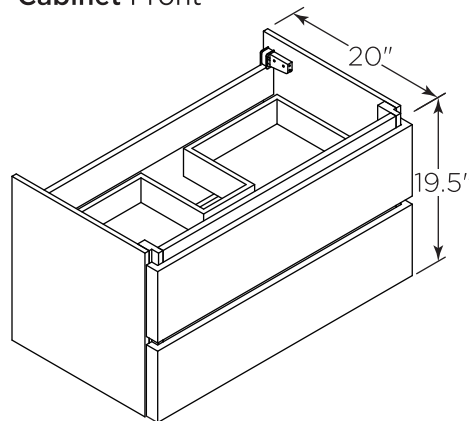


FCB3136ACA  
Cabinet Back

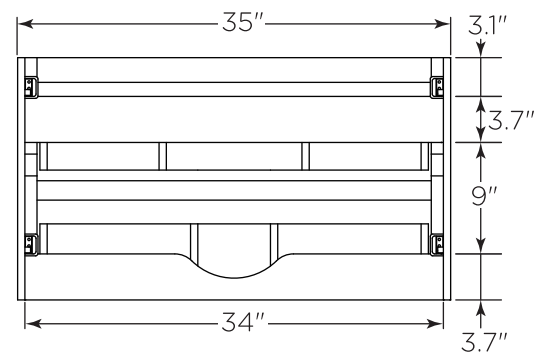

FSF3136ACA  
Cabinet Front

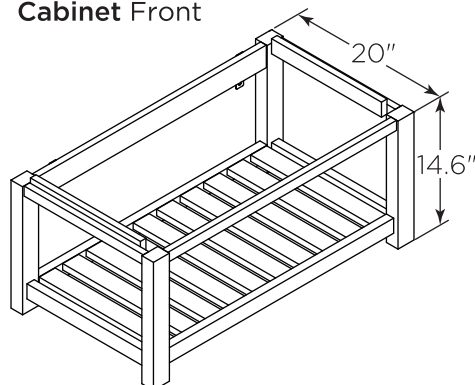

FSF3136ACA  
Cabinet Back

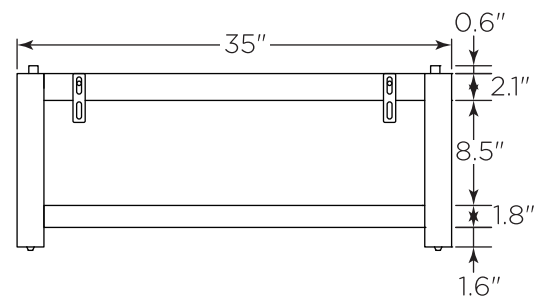

**NOTE:** All dimensions & specifications are approximate and subject to change without notice.