



# FVN3136ACA FORMOSA INSTALLATION GUIDE

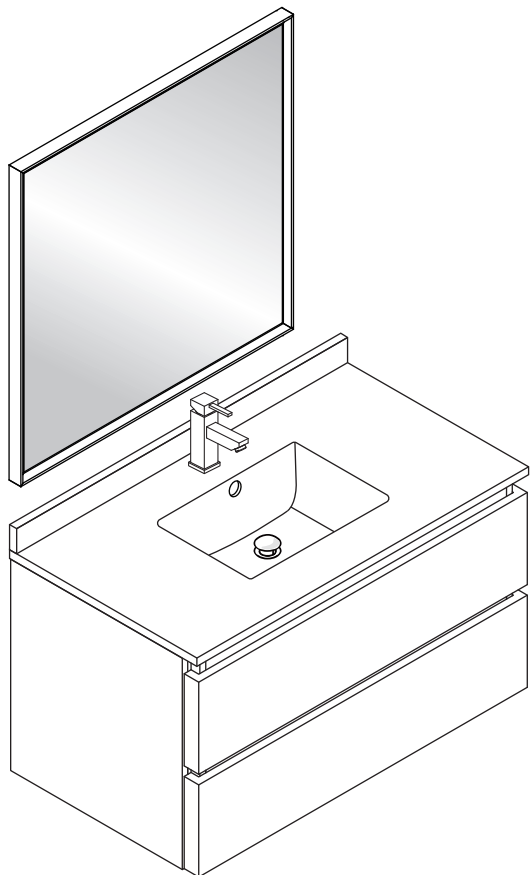


FVN3136ACA  
Vanity Front




FMR3132ACA  
Mirror Front

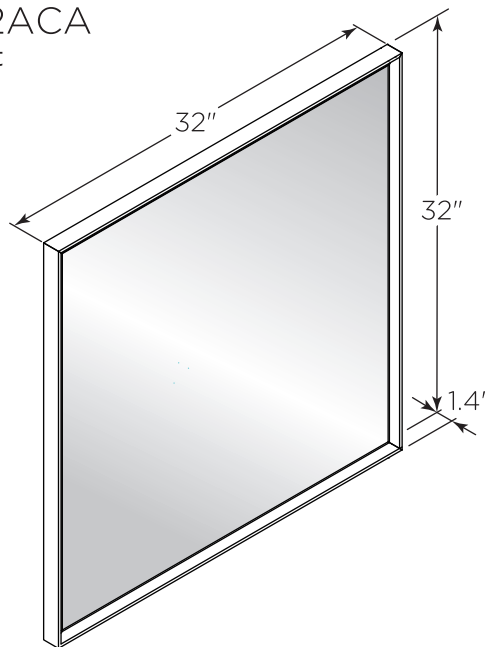


FCT2036WH-CMB  
Mirror Front

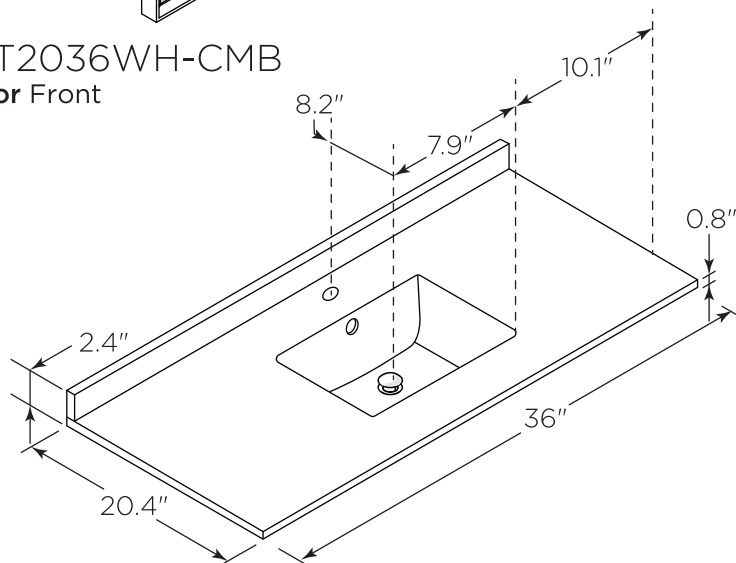

FCB3136ACA  
Cabinet Front

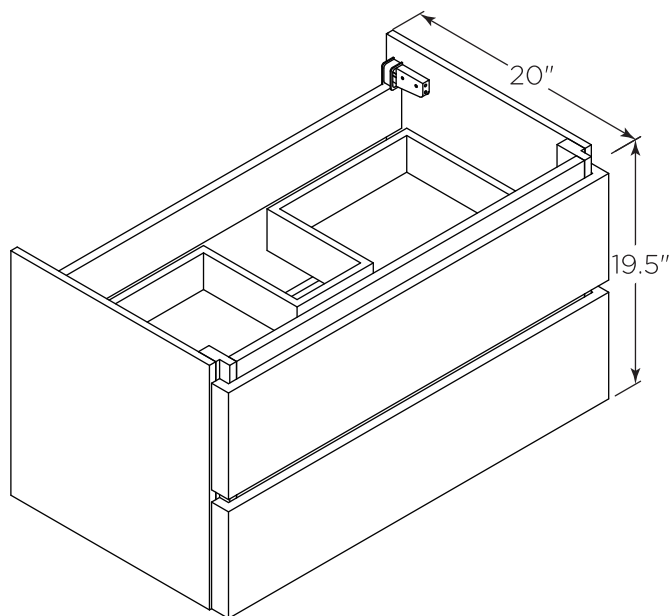

FCB3136ACA  
Cabinet Back

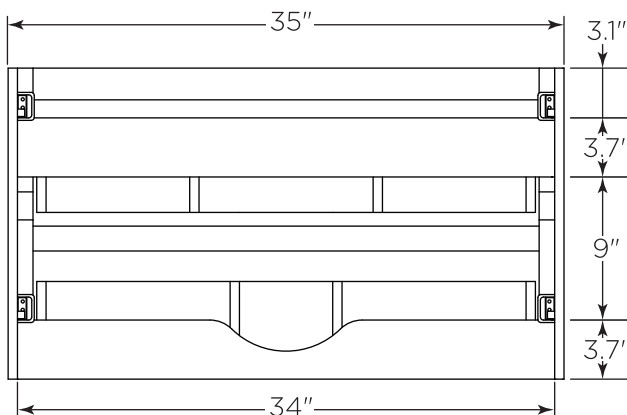

**NOTE:** All dimensions & specifications are approximate and subject to change without notice.