

INSTALLATION INSTRUCTIONS OF LED MIRRORS


WARNING:

All fittings must be installed in accordance with IEE wiring regulations BS7671. Any doubt, consult a qualified electrician. Switch off the electrical supply at the mains before installation.

Suitable for Bathroom Zones 2,3 and non bathroom and dry areas. See diagram below. NOT suitable for above baths or Zone 1 nor for installation in Saunas, Steam rooms or Shower Cubicles.

Do not fix to damp or conductive surfaces. Site well away from curtains and fabrics.

Never cover the mirror. Switch off after use. Do not leave on for prolonged periods.

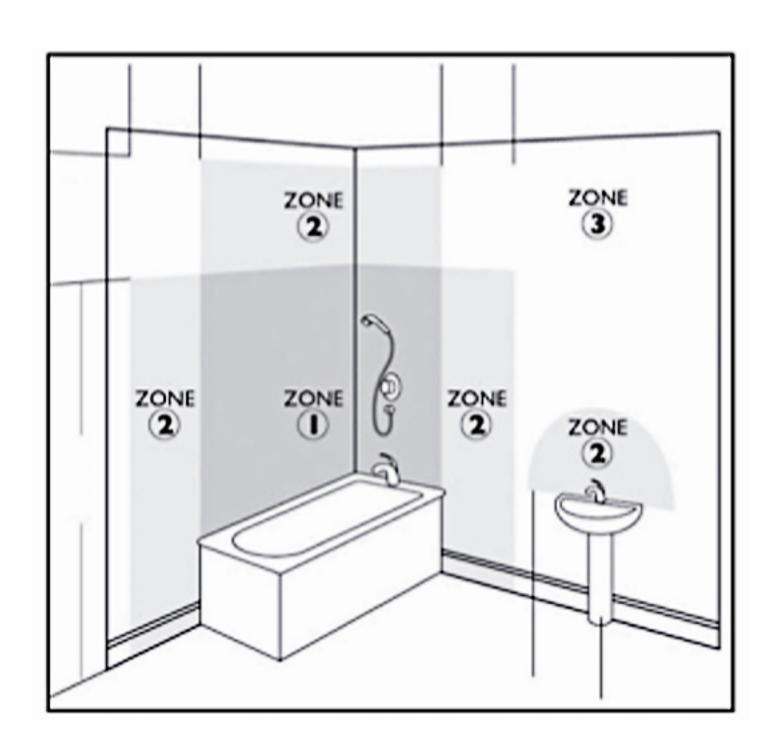

IMPORTANT!-BEFORE YOU BEGIN

Inspect the product immediately upon receipt for transit damage or missing parts.

Handle the product with care and protect against knocks to all sides and edges of the glass.

Fixings supplied are for use in solid walls, hollow or stud walls will require specialist fixings available from your hardware store.

Make sure that you have all the tools you need to complete the job. Ensure there are no hidden pipes or cables in the wall before drilling.

If drilling holes in ceramic tiles use a piece of masking tape in the tile to stop the drill bit from slipping.

Tools required:



CONTAINS:

1 x mirrors, 3 x screws and 3 x wall plugs, 2 x brackets

Installation Instructions

- 1.Switch off the electrical supply at the mains before beginning.
- 2.Using the template, mark the wall with a pencil.
- 3.Ensure that the mirror is level and check there are no hidden pipes or cables before drilling.
- 4. Wearing suitable eye protection, drill 3 holes using a drill but and fix the bracket onto the wall with the wall plugs and screws. Ensure the bracket is level.
- 5.Locate the hangers at the backside of mirror to match the bracket on the wall.
- 6.Make the electrical connections in accordance with current IEE wiring regulations. If in doubt consult your electrician.
- 7. Carefully hang the mirror.
- 8. Turn on the electrical supply to turn on the LED mirror.