




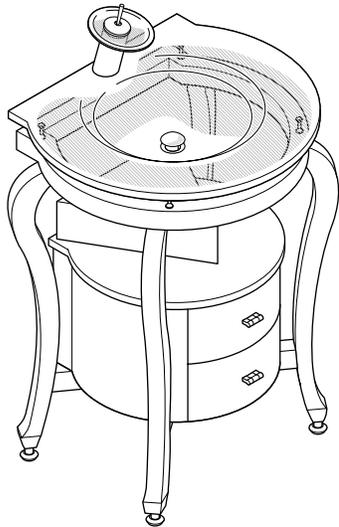



FVN3330  
**SIMPATICO  
 INSTALLATION GUIDE**

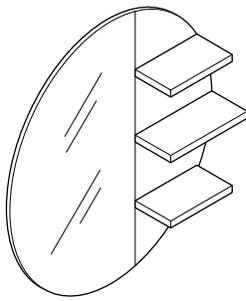

Vanity Front

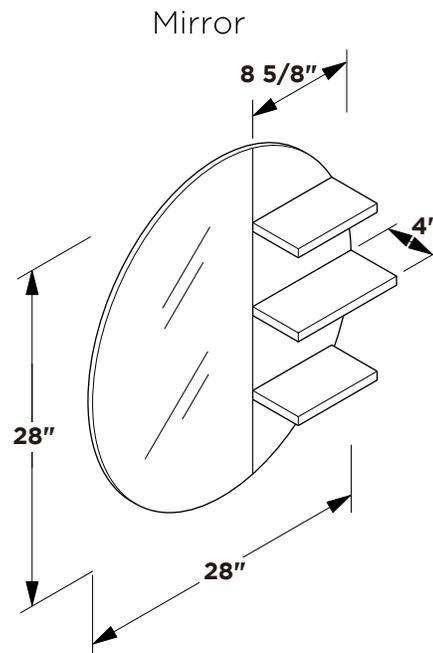

Vanity Back

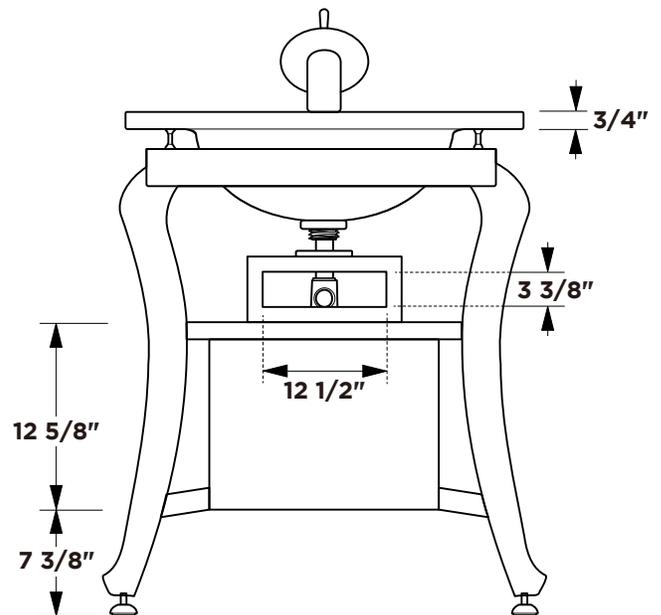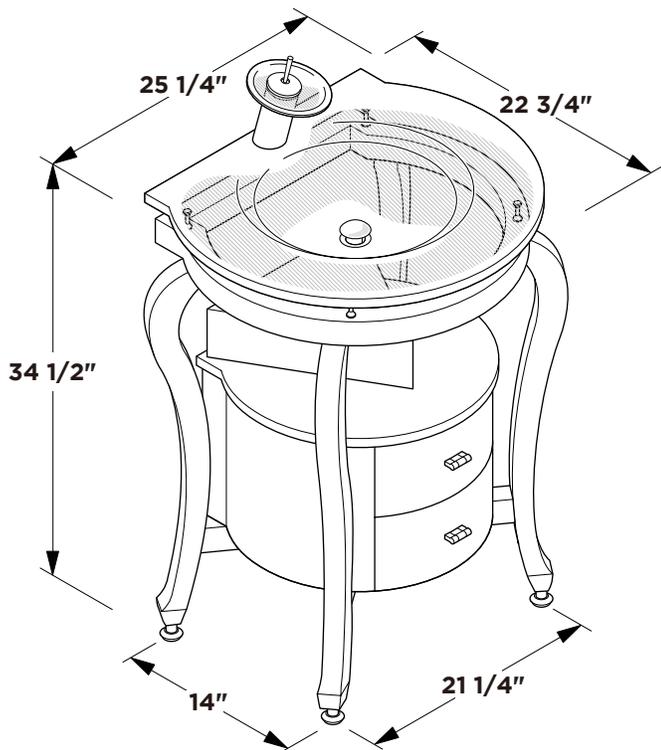


Note: All dimensions and specifications are approximate and subject to change without notice.


**TOOLS FOR ASSEMBLY**




**PARTS**

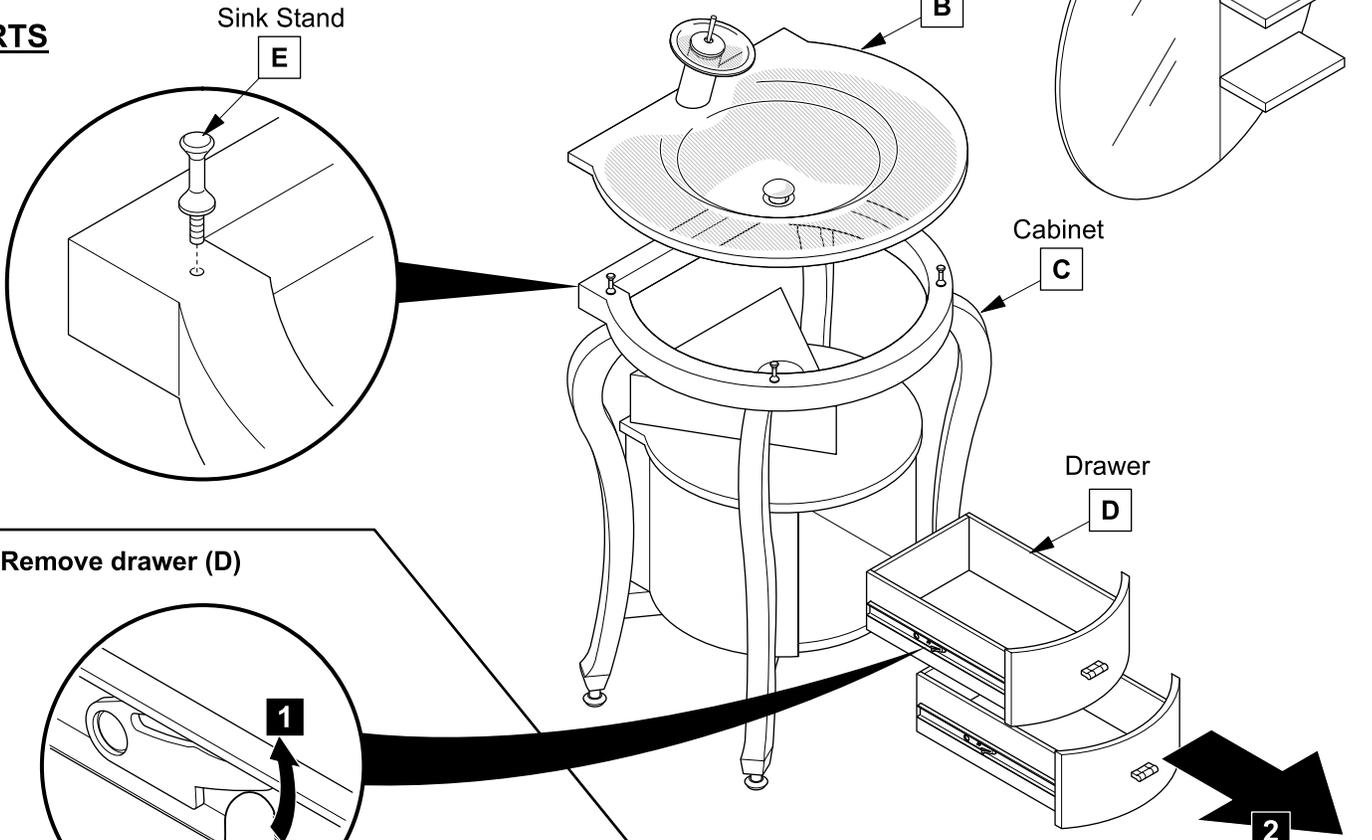

**1** Remove drawer (D)

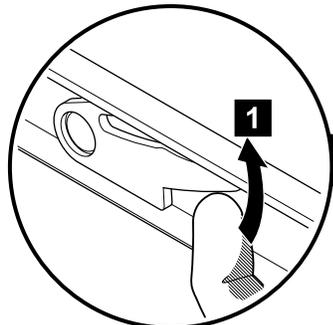


**2** Position cabinet (C)

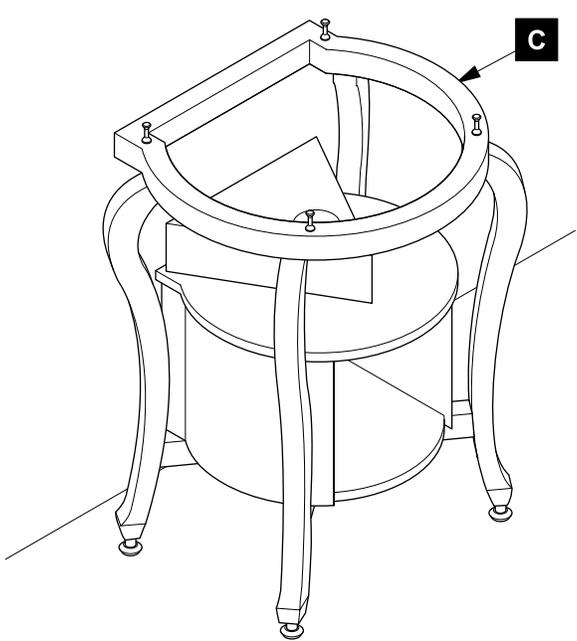


**3** Apply silicone and install sink (B)

**4** Install Mirror (A)

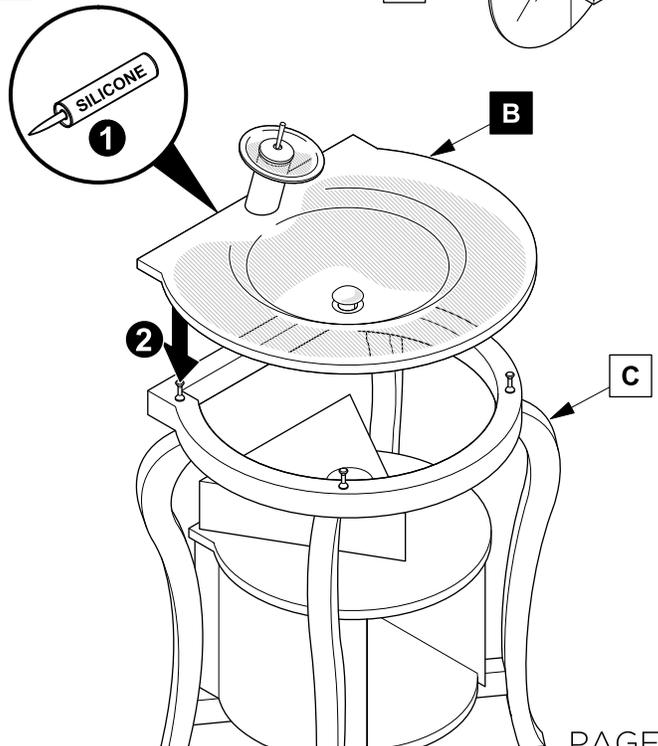


## P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration

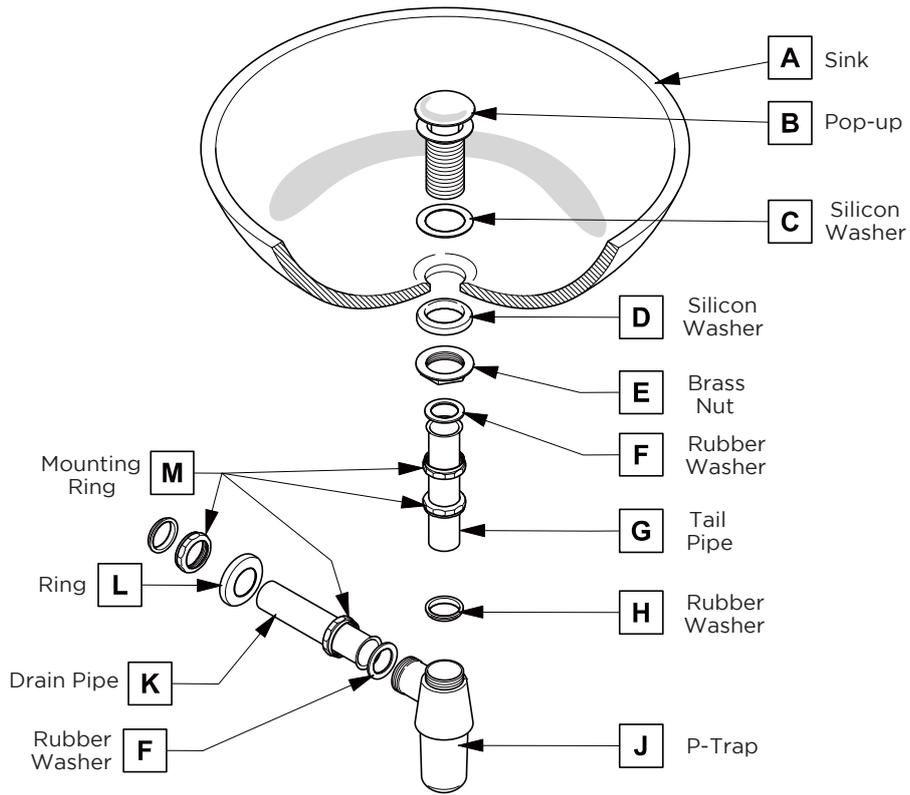


### POP-UP INSTALLATION

#### FOR SINKS WITHOUT OVERFLOW

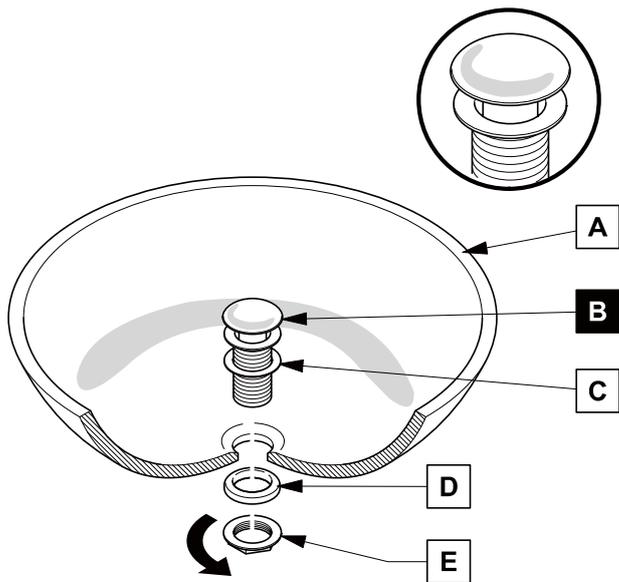

OR


#### FOR SINKS WITH OVERFLOW

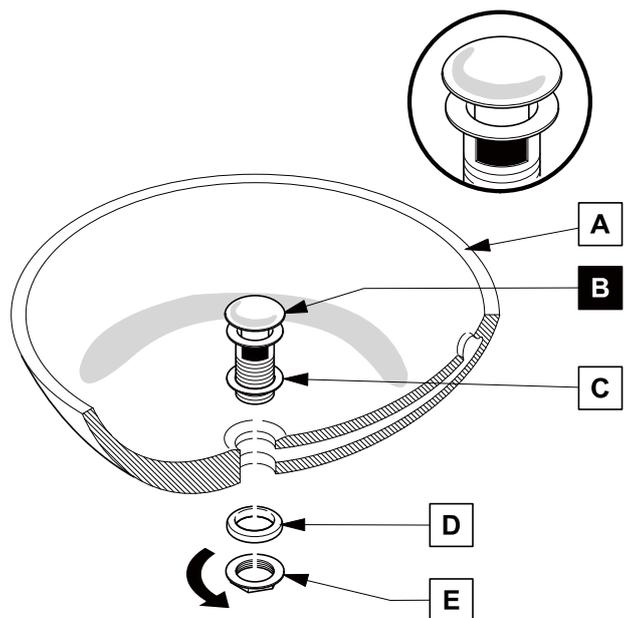

# P-TRAP INSTALLATION

1

Install tail pipe (G)

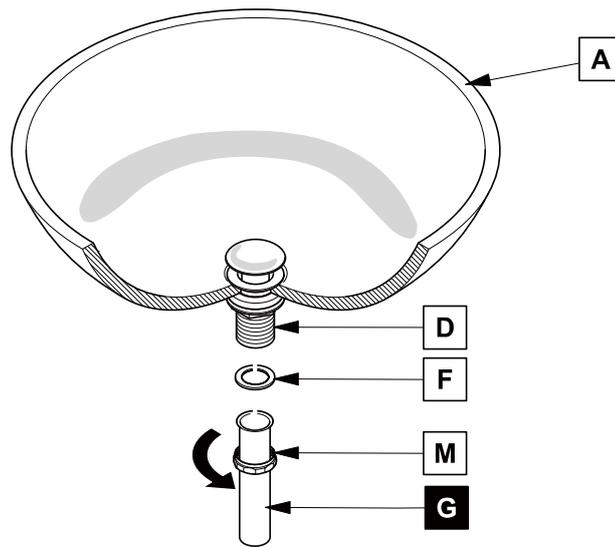

2

Install p-trap (J)

