



Installation


Sigma 120 mm

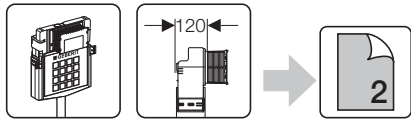


Kappa 150 mm

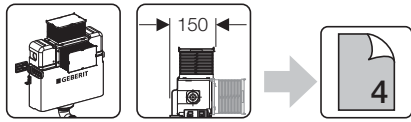


Delta 120 mm

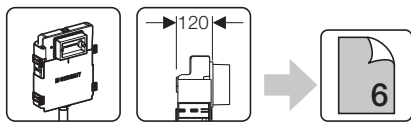


UP130 120 mm

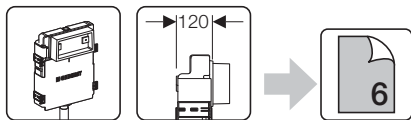


UP170 90 mm

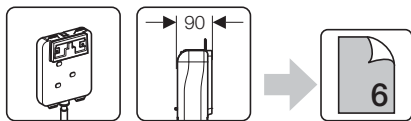


Sigma 75 mm

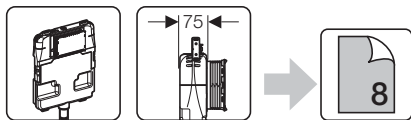

Sigma 80 mm

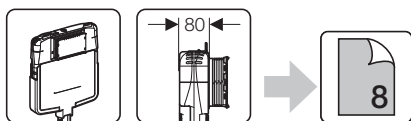


Delta 80 mm

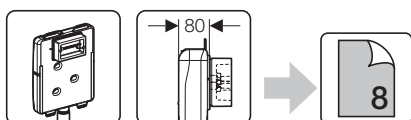


Sigma 120 mm



1






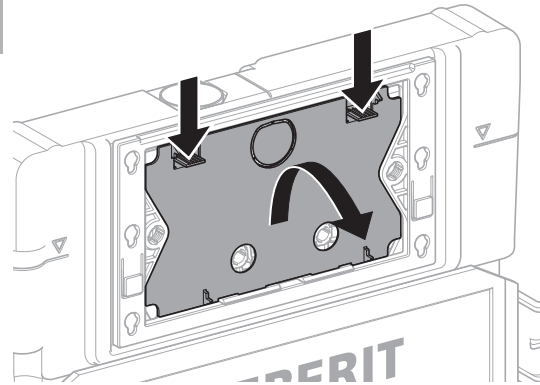




2






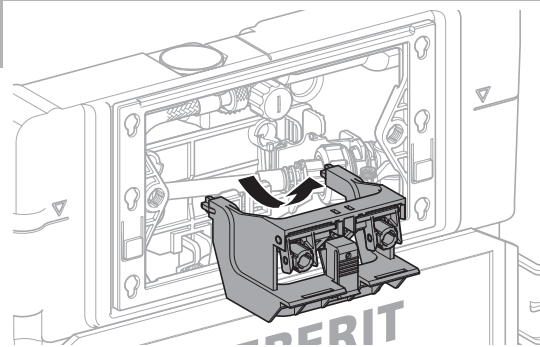


3

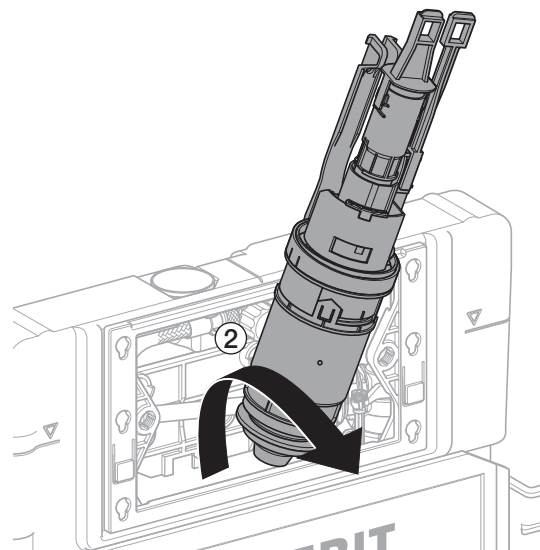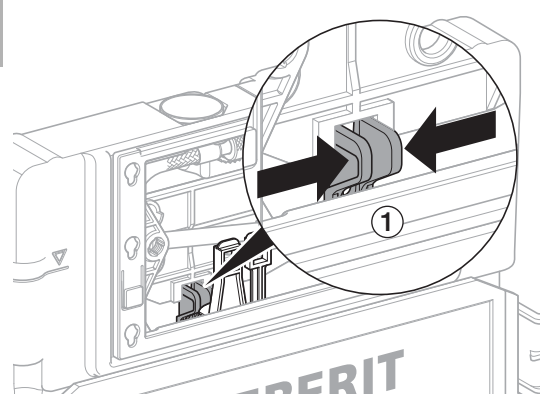

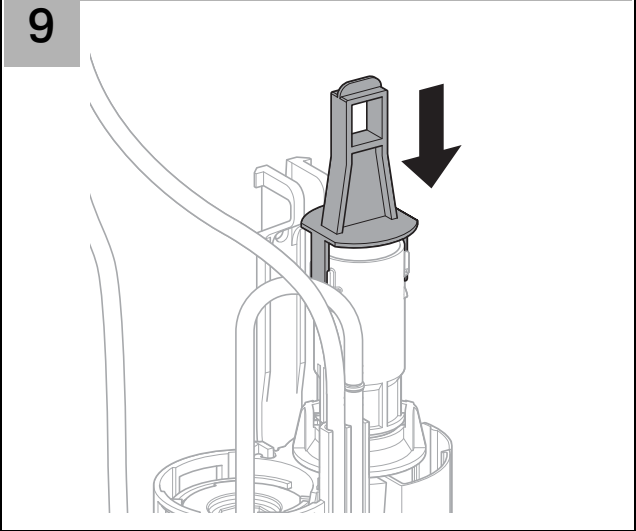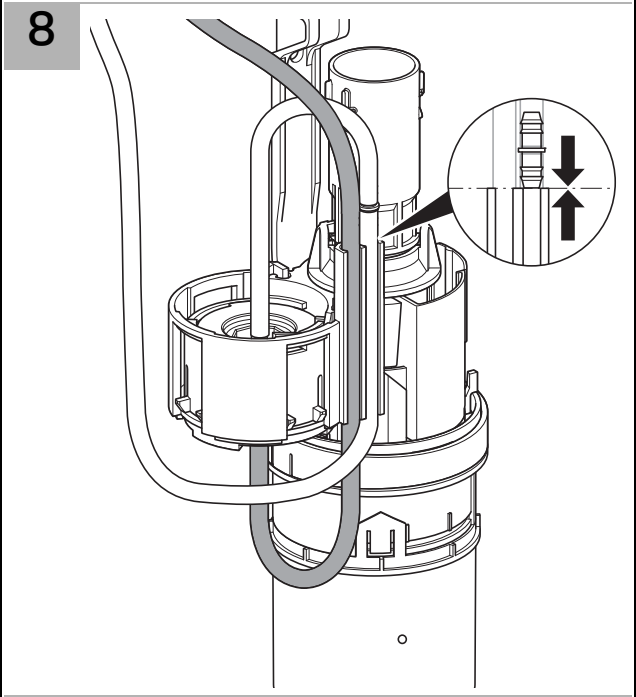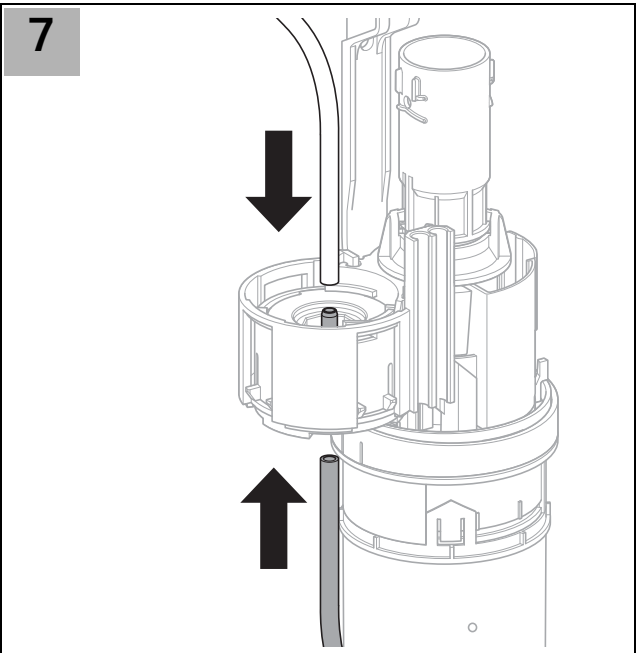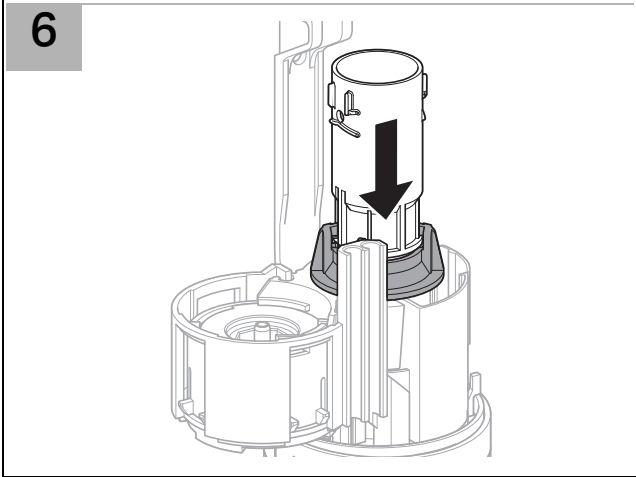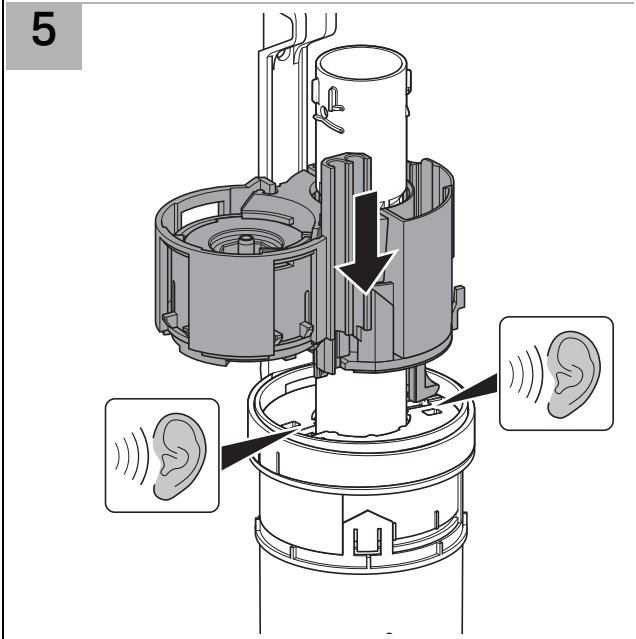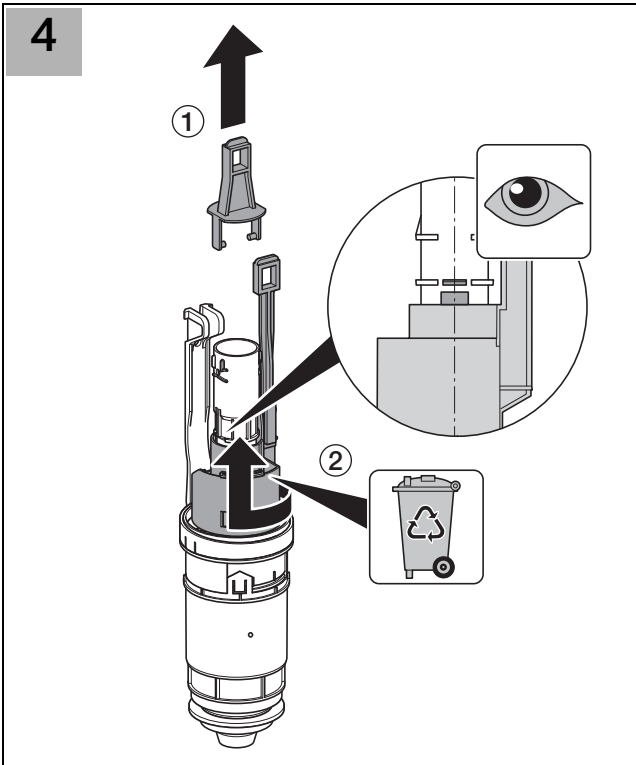


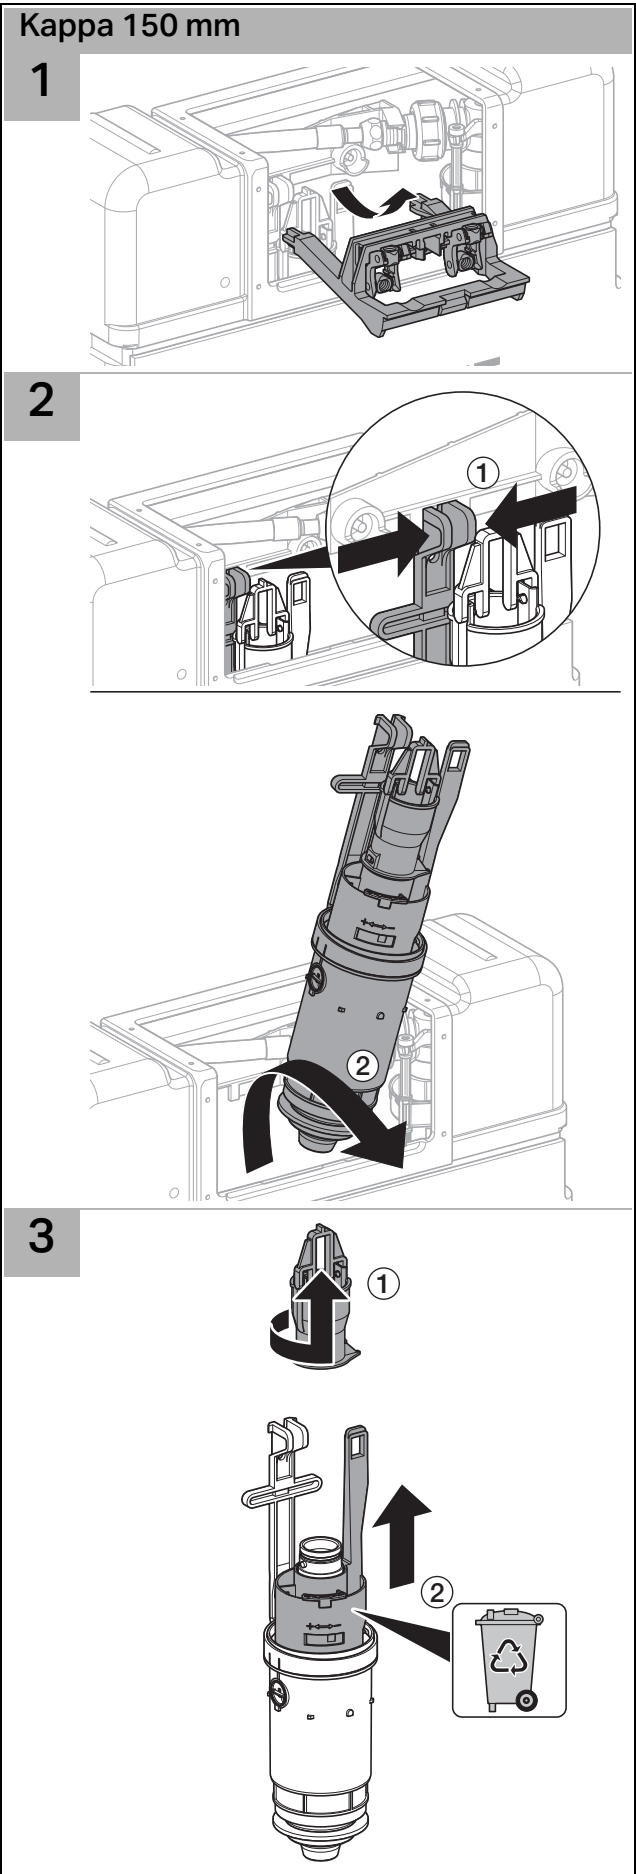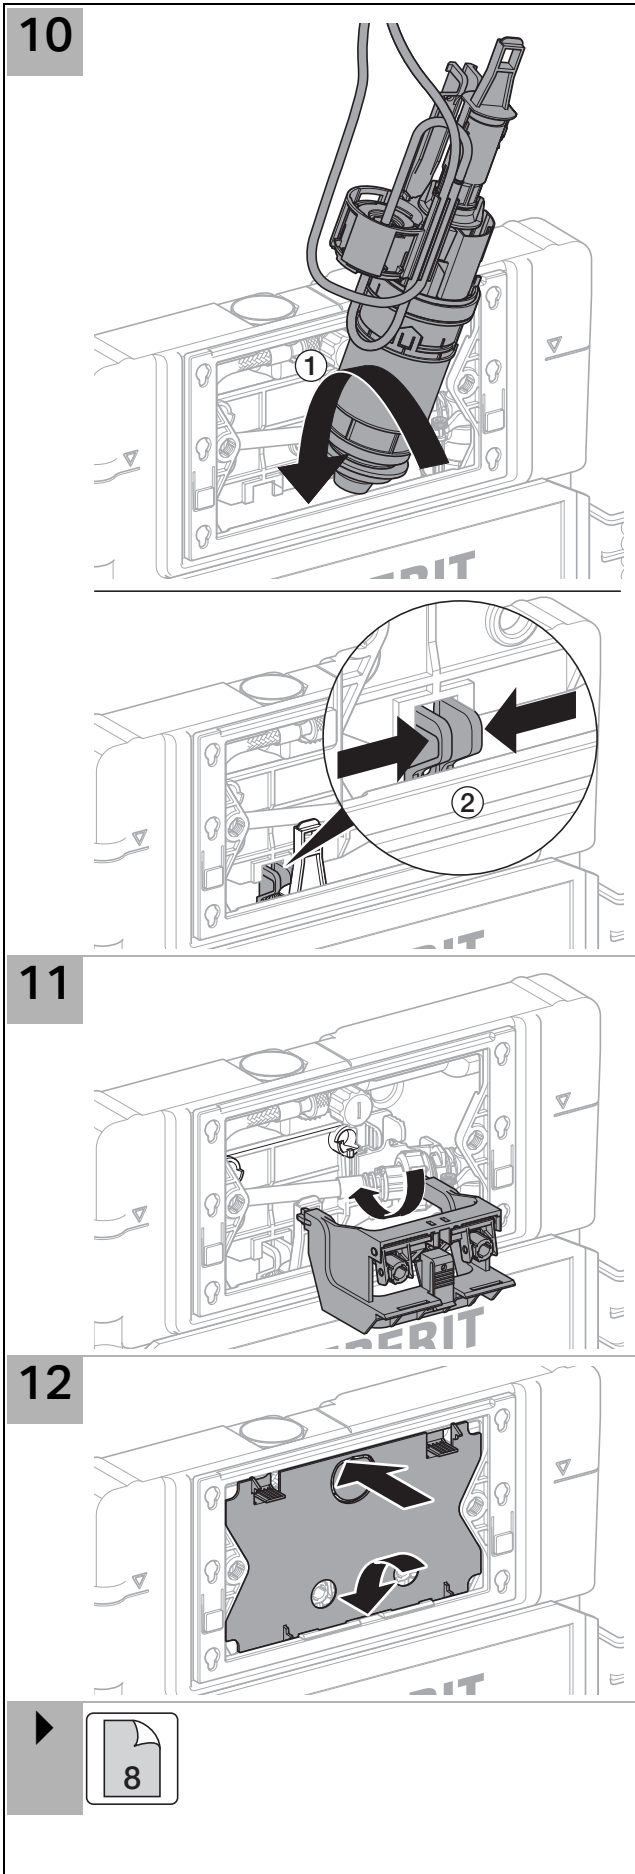

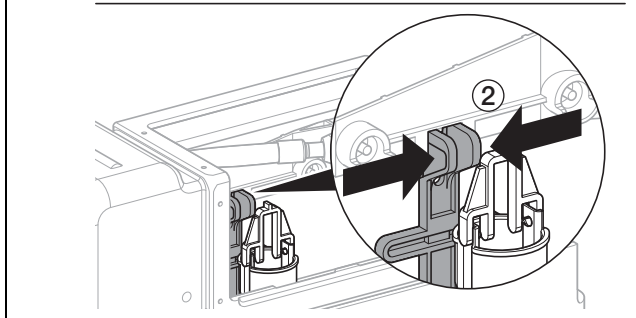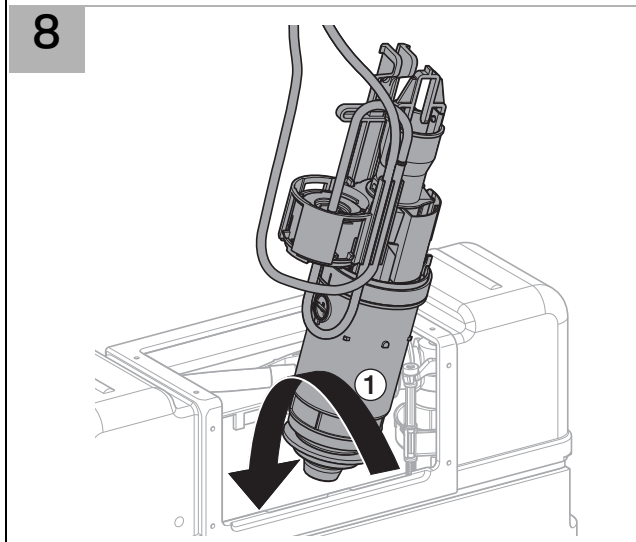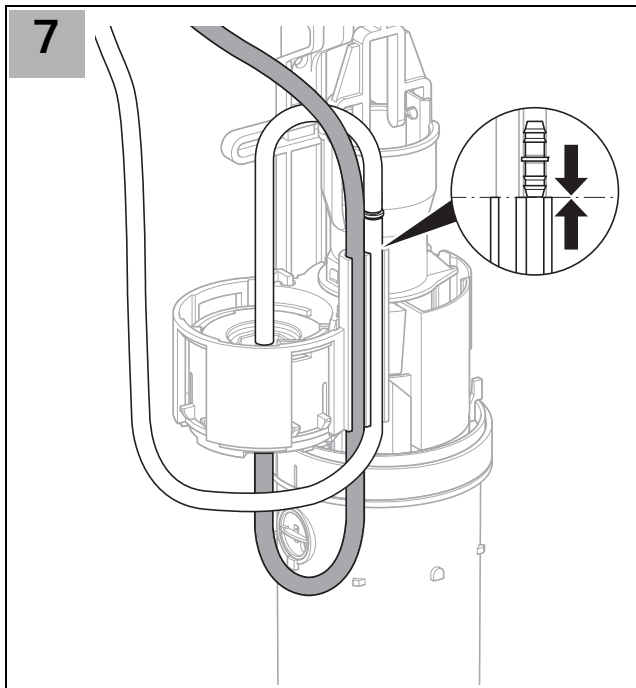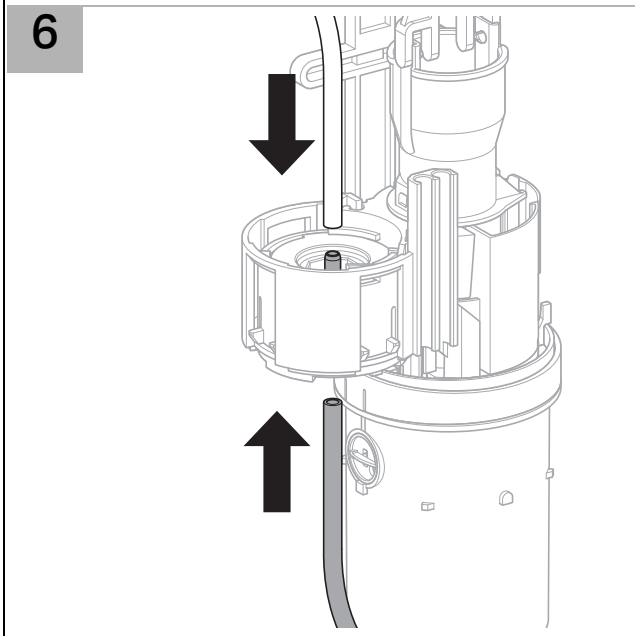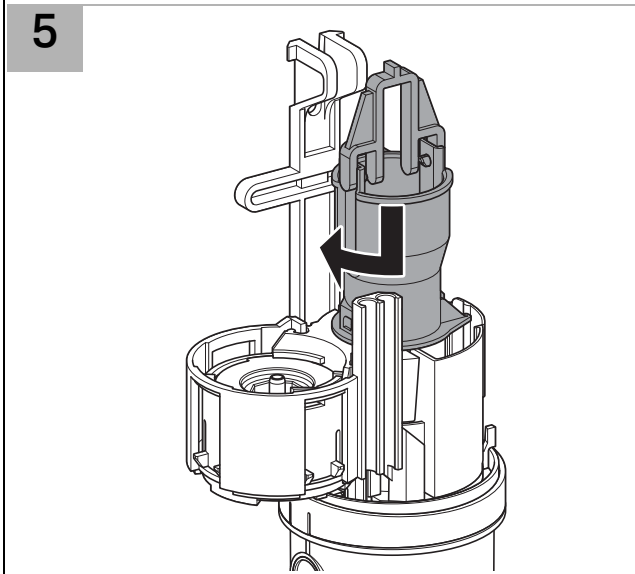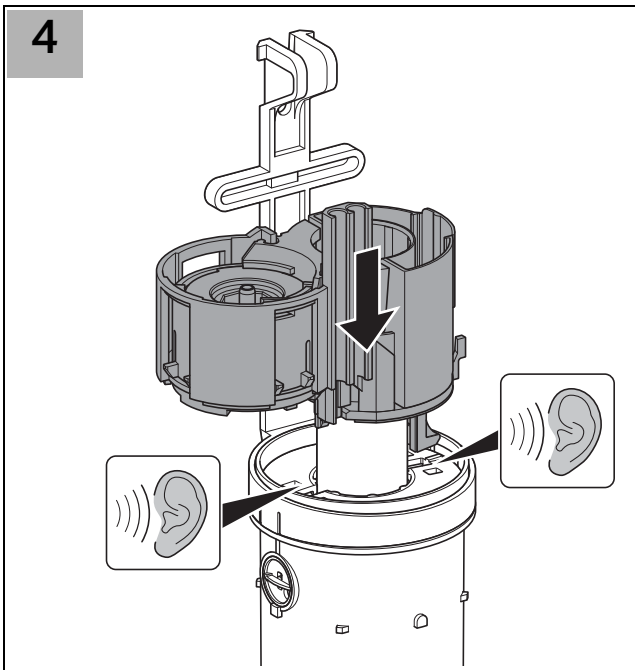


Delta 120 mm
UP130 120 mm
UP170 90 mm


1

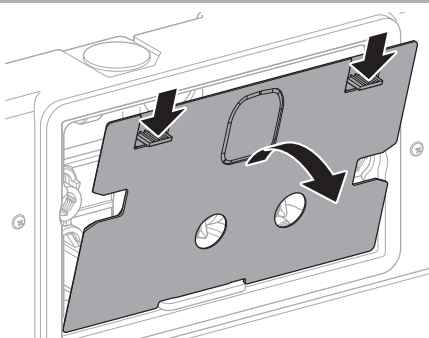


2

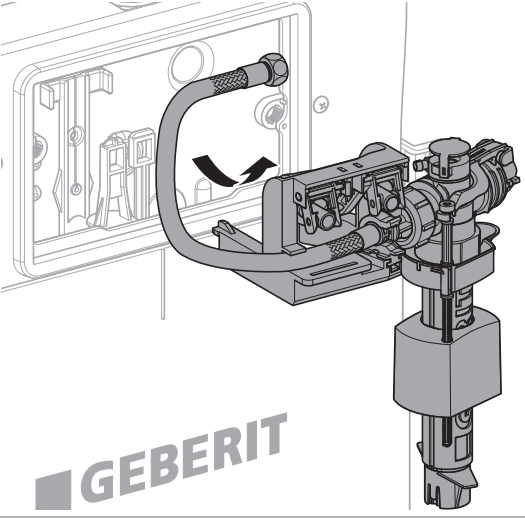


3

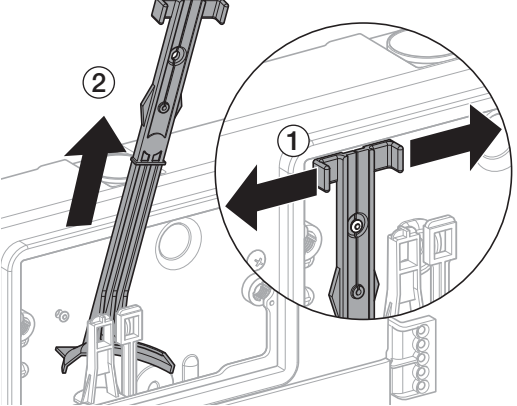


4

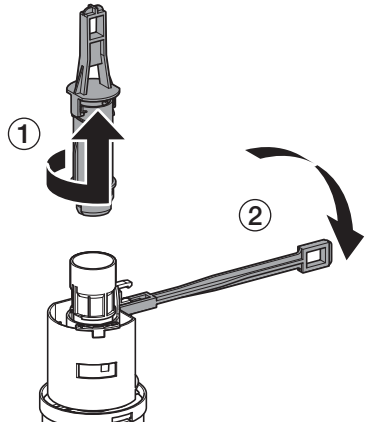


5

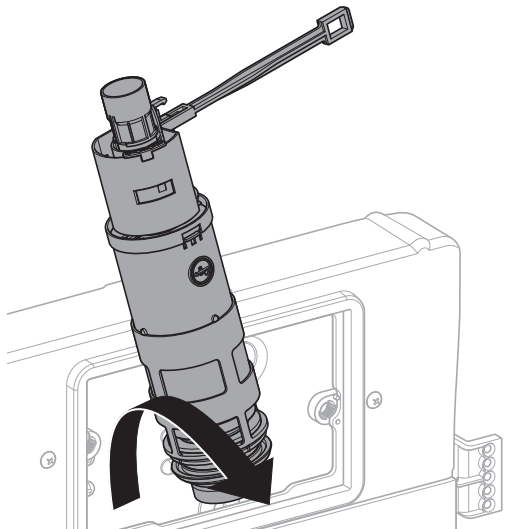

6

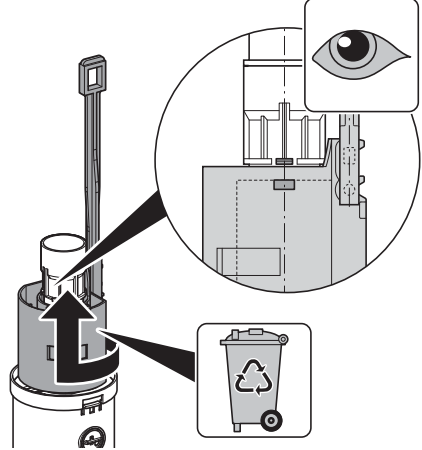

7

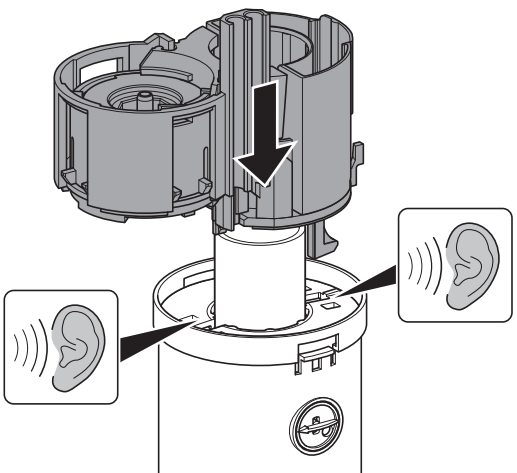

8

