

Windom Chandelier

3102803, 3102805, 3102809 | 1.0

GENERATION LIGHTING CHANDELIER

SAVE THESE INSTRUCTIONS!

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.


Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

This instruction shows a typical installation.

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


Use minimum 90°c supply conductors.

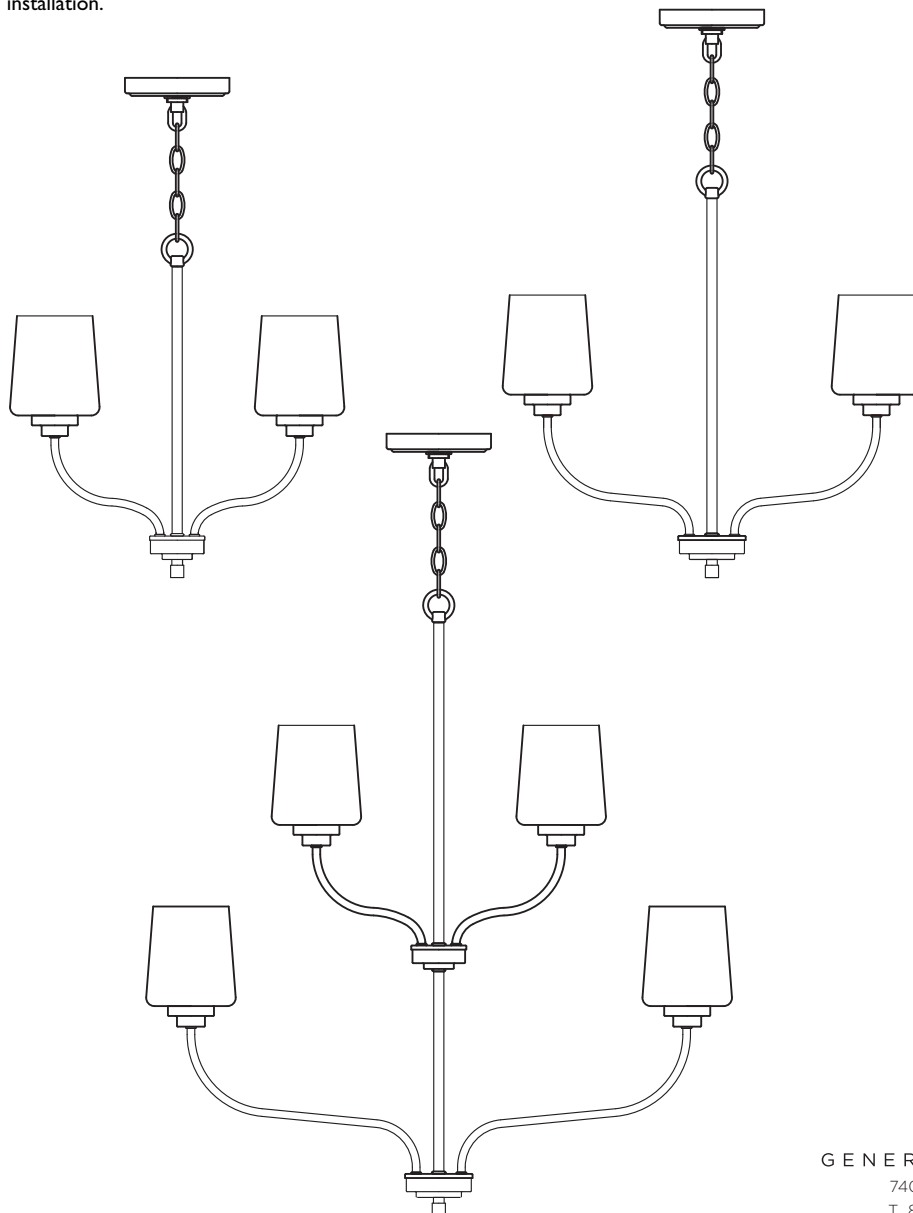

GENERATION LIGHTING
7400 Linder Ave., Skokie, IL 60077
T 847.410.4400 | F 847.410.4500
www.generationlighting.com

Install the Fixture

IA

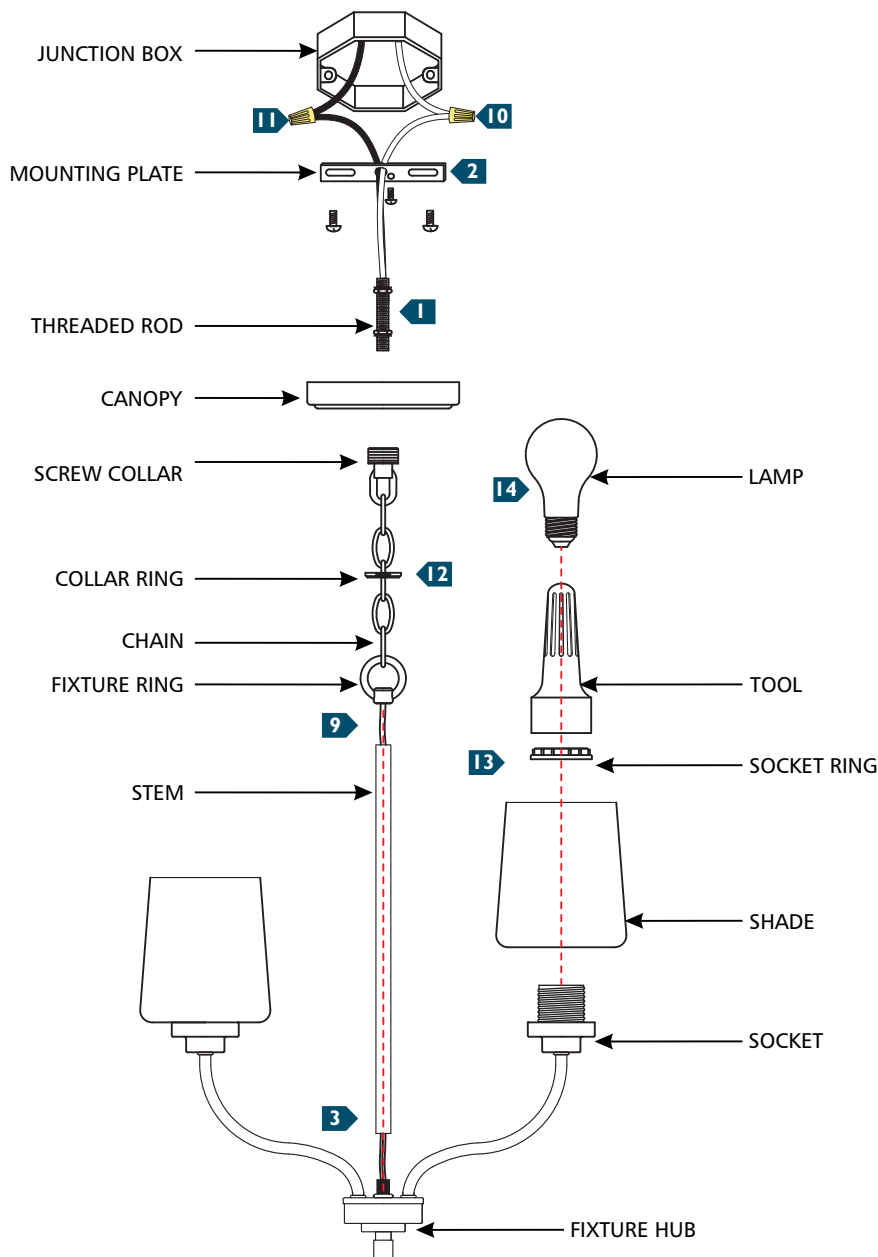

- 1** If necessary, screw the threaded nipple directly to the mounting plate and screw the screw collar onto the threaded nipple.
- 2** Secure the mounting plate to the junction box.
- 3** Feed the fixture wire through the stem and fixture ring and screw them to the fixture hub.
- 4** Determine the wanted height of the fixture and remove a portion of the chain by opening a link with pliers.
- 5** Open the chain link with pliers and install the chain on the fixture loop, then re-close the chain link.
- 6** Unscrew the collar nut from the screw collar, install the collar nut and the canopy onto the chain (in that order).
- 7** Open a link on the other end of the chain with pliers and install the chain onto the screw collar to secure the fixture, re-close the link.
- 8** Weave the cord through the chain, canopy, collar nut, screw collar, threaded nipple, and out of the junction box. Trim the cord leaving enough to make electrical connections.
- 9** Connect the fixture to a suitable ground in accordance with local electrical codes.
- 10** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 11** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 12** Neatly place all the wires into the junction box, place the canopy on the ceiling, and secure it in place by screwing the collar nut tightly onto the screw collar.
- 13** Place the shade onto the socket and secure it in place by screwing the socket ring onto the socket with the provided tool. Repeat for all shades.
- 14** Screw the lamps into the sockets. Refer to the label on the socket for Max Wattage information.